



PathSolutions

TotalView

9

PathSolutions, Inc.
1030 E El Camino #173
Sunnyvale, CA 94087
www.PathSolutions.com

Document and Software Copyrights

Copyright © 1998–2018 by PathSolutions, Inc., Sunnyvale, California, U.S.A. All rights reserved. Printed in the United States of America. Contents of this publication may not be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without prior written authorization of PathSolutions, Inc.

PathSolutions, Inc. reserves the right to make changes without notice to the specifications and materials contained herein and shall not be responsible for any damage (including consequential) caused by reliance on the materials presented, including, but not limited to, typographical, arithmetic, or listing errors.

Trademarks

PathSolutions, Network Weather Report, Network Prescription, QueueVision, Total Network Visibility, Total VoIP Visibility and TotalView are Trademarks of PathSolutions, Inc. in the United States and/or other countries.

Version Information

TotalView

Version: 9

Date: June 29, 2018

Company Information

PathSolutions

1030 E El Camino #173

Sunnyvale, CA 94087

www.PathSolutions.com

Support@PathSolutions.com


Sales@PathSolutions.com

(877) 748-1777 (toll-free main)

(408) 748-1777 (main)

(408) 748-1666 (fax)

(877) 748-1444 (7x24 Tier 1 telephone support)

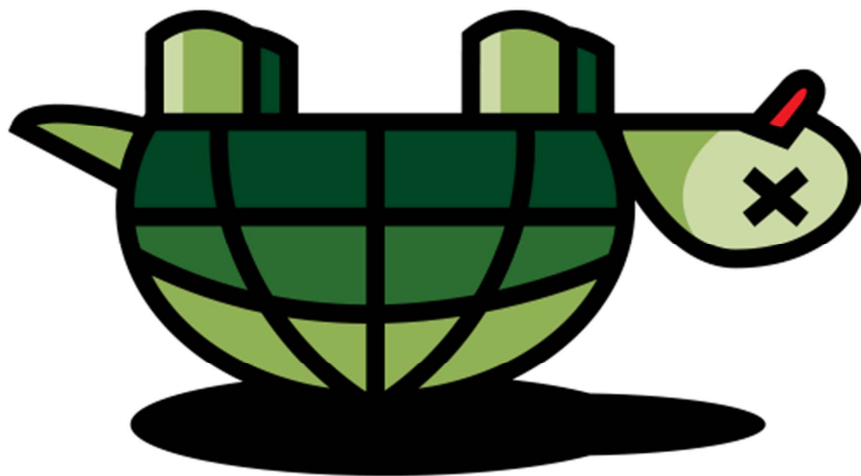

Don't Turtle Your Network

Contents

Preface	7
Audience	7
Conventions	7
Technical Support	7
Overview	8
New Features	9
Cloud Service Monitoring	9
SD-WAN Monitoring	9
SIP-Trunk Monitoring	9
License-Unlimited NetFlow	9
Automatic Interactive Network Diagram	10
Internet Health Report	10
Predictive Analytics	10
Standard Features	11
Total Network Visibility®	11
Deep Knowledge	11
Heuristics Analysis - Network Prescription™ Engine	11
Proactive Issue Resolution	11
WAN Health Report	11
Fully-Integrated Port-Mapper	11
Full Inventory of Network Devices	12
Path Mapping	12
Complete VoIP Visibility	12
Multi-Vendor Support	12
Highly Responsive User Interface	12
Rapid Deployment	13
Rapid Re-Configuration When Your Network Changes	13
Ease of Use	13
Automated Reporting	13
Highly Scalable Lightweight Footprint	13
Dynamic Network Map	13
Built-in Correlation Engine	13
Spanning-tree Stability Monitoring (STP)	14
Natural Language Troubleshooting	14
QueueVision®	14
License-Unlimited Call Simulator	14
Phone Locator Report	14
MOS Report	14
PoE Monitoring	14
Phone Move Alerting	14
CDR Analysis	14
Multi-Vendor Support	14
Immediate Current Utilization of Any Link	15
Daily Network Weather Reports™	15
Built-in Webserver	15
Web-Based Monitoring	15
Advanced Email Reporting	15
Emailed Graphs	15
Parent-Child Relationships for Outage Alerting	16
Other Features	16
System Requirements	17
Small Network Server Requirements	17
Medium Network Server Requirements	17
Large Network Server Requirements	18
Web Browser Requirements	18
Call Simulator Requirements	18

PathSolutions	TotalView
Installation	20
Installer	21
QuickConfig Wizard	23
Activation	23
Step 1: Network Address Ranges	24
Step 2: SNMP Community Strings	25
Step 3: Daily Network Weather Report	26
Step 4: Email Reports	27
Re-Configuring When Your Network Changes	29
Automatic Re-Configuration	30
Using the Web Interface	31
Website Navigation Map	31
Web Page Headers	31
Tabs	31
Dashboard Tab	32
NLT Tab	34
Network Section	35
Path Tab	35
Map Tab	37
Diagram Tab	38
Gremlins Tab	39
Devices Tab	40
Interface Summary	46
Device Overall Statistics	54
Utilization Graphs	58
Favorites Tab	62
Issues Tab	63
NetFlow Tab	64
Top-10 Tab	66
WAN Tab	71
Interfaces	72
SD-WAN Monitoring Tab	78
Tools Tab	80
VoIP Tab	84
Phones Tab	84
MOS Tab	85
QoS Tab: QueueVision®	87
Calls Tab	89
SIP-Trunks Tab	91
Tools Tab	93
Cloud Service Monitoring Tab	95
Internet Tab	97
Predictors Tab	98
VoIP Assessment Features	99
Phones Tab	99
QueueVision®	101
Assessment Tab	103
Device Latency, Jitter, Loss, and MOS Score	103
Power over Ethernet Monitoring (PoE)	104
VoIP Programs	105
VoIP Call Simulator Tool	105
End-to-End Testing	106
Link Troubleshooting	108
RTP Receiver/Transmitter	110
TCP Receiver	112
UDP Firewall Test	114
DSCP Loss Test	115
VoIP Call Simulator Batch Tool	116
Network Programs	119

PathSolutions	TotalView
Config Editor	119
Map Config Tool.....	120
Poll Device	121
Syslog Viewer	122
Ignoring Interfaces	123
Adding an Interface to the Favorites List	125
Removing an Interface from the Favorites List.....	126
Fixing Problems on Your Network	127
Improving Network Health	127
Running a Collision-Free Network.....	128
Eliminating Bottlenecks.....	128
Determining What's Connected to an Interface.....	129
Finding Anomalous Traffic.....	129
Determining Laptop Usage	131
Planning for Network Growth.....	132
Scheduling Server Outages.....	132
Scheduling Switch & Router Outages	132
Daily Utilization Tracking	132
Daily Errors Tracking	133
Performing Proactive Analysis.....	133
Error Resolution.....	134
Using the Network Weather Report	135
Using the Configuration Tool.....	137
Running the Configuration Tool.....	137
Adding or Removing Devices	139
Adding Devices.....	140
Changing Device Information	141
Deleting Devices.....	142
Configuring Web Output	143
Webserver Options	143
Creating Accounts with Password Security.....	144
Web Configuration	145
Listing Records on the Top-10 tab.....	146
Built-in Web Server Port Number	146
Configuring Email	147
Configuring the Cloud Tab.....	150
Configuring the SIP-Trunks Tab	151
Configuring the SD-WAN Tab.....	152
Configuring the NetFlow Tab	153
Configuring the Diagram Tab.....	154
Layer-3 Static Links.....	154
Layer-3 Excludes.....	155
Layer-3 Ignores	155
Polling Options.....	156
Polling Threads.....	156
Configuring the Polling Frequency	157
Configuring Polling Behavior	157
Issues Tab	158
Ignoring Unknown Protocol Errors.....	159
VLAN Interfaces.....	159
Configuring Thresholds.....	159
Favorites	160
WAN.....	161
Financials.....	162
Enabling the Syslog Server	163
Facility Levels	165
Severity Levels.....	166
ECMAScript Regular Expressions Pattern Syntax (regex).....	167
Enabling the TFTP Server	172

PathSolutions	TotalView
Enabling Alerting.....	173
PoE Alerting.....	176
Group Alerting.....	177
Configuring the Network Map.....	178
Sending Email Reports.....	181
Creating Email Report Templates.....	182
Establishing Device Parent-Child Relationships.....	185
Troubleshooting.....	186
Frequently Asked Questions.....	187
Appendix A: Error Descriptions.....	188
Alignment Errors.....	188
Carrier Sense Errors.....	188
Deferred Transmissions.....	189
Excessive Collisions.....	189
FCS Errors.....	190
Frame Too Longs.....	190
Inbound Discards.....	191
Inbound Errors.....	191
Inbound Unknown Protocols.....	192
Outbound Discards.....	192
Outbound Errors.....	193
Outbound Queue Length.....	193
Internal Mac Transmit Errors.....	193
Late Collisions.....	193
MAC Receive Errors.....	194
Multiple Collision Frames.....	195
Single Collision Frames.....	195
SQE Test Errors.....	196
Symbol Errors.....	197
Appendix B: Saving PoE Usage to a Database.....	198
Appendix C: SMTP Email Forwarding.....	199
Appendix D: Changing Interface Names and Speed.....	200
Appendix E: Configuring Multiple Locations.....	201
Appendix F: Entering Custom OIDs to be Monitored.....	203
Appendix G: Configuring Additional OUIs for Phones Tab.....	204
Appendix H: Changing the WAN Tab.....	205
Appendix I: Adding a Static Route to the Call Path.....	206
Appendix J: Automatic Update Scheduling.....	207
Appendix K: Changing the Map Fetch Variables to Improve Map Stability.....	208
Appendix L: Overriding Displayed Device Icons.....	209
Appendix M: Using the ACL to Control Web Access.....	210
Glossary.....	211

Preface

Most network devices are constantly collecting statistics relating to the health of each interface. Network engineers rarely have the budget, time, and resources to access this wealth of information, and very few products exist that can help engineers detect and analyze problems before they affect users.

TotalView by PathSolutions was created to help provide this information (collected by switches, routers, servers, and other network devices) in an advanced and easy to use format, to identify the root cause of network problems, and maintain maximum network performance.

Audience

Network administrators with various levels of expertise can benefit from TotalView by PathSolutions, as the product offers not only a rapid view of network health, but also in-depth analysis of specific issues.

To install and use TotalView, a network administrator should be able to set up a managed switch with an IP address and an SNMP read-only community string.

Conventions

The following conventions are used in this manual:

Italic

Used for emphasis and to signify the first use of a glossary term.

`Courier`

Used for URLs, host names, email addresses, registry entries, and other system definitions.

Note: Notes are called out to inform you of specific information that is relevant to the configuration or operation of TotalView. Notes may occasionally be used to describe best practices for using the system.

Technical Support

For technical support:

Support@PathSolutions.com

(877) 748-1444 (7x24 tier 1 telephone support)

(408) 748-1777 Select 1 for tier 2 support

Overview

TotalView by PathSolutions is designed to disclose network weaknesses that cause data and VoIP stability issues. By monitoring all network interfaces for utilization, packet loss, and errors, it becomes easy to determine exactly where network faults exist.

TotalView goes one step further by providing insight into the specific error or issue that is causing degradation so a rapid resolution can be applied.

Continuous monitoring of all interfaces provides the ability to generate alerts if any interface degrades below a level that will support VoIP services.

TotalView also maintains a history of utilization and errors on all interfaces so you can troubleshoot VoIP and network problems after they occur.


All network devices that support SNMP can be queried for link status and health information.

TotalView version 9, released in June 2018, has major new features: Cloud Service Monitoring, SD-WAN Monitoring, SIP-Trunk Monitoring, License-Unlimited NetFlow, Automatic Interactive Network Diagrams, Internet Health Reports, and Predictive Analytics.

New Features

Cloud Service Monitoring

TotalView now reports on the overall performance to cloud services, as well as disclose the route tree used to reach the services.

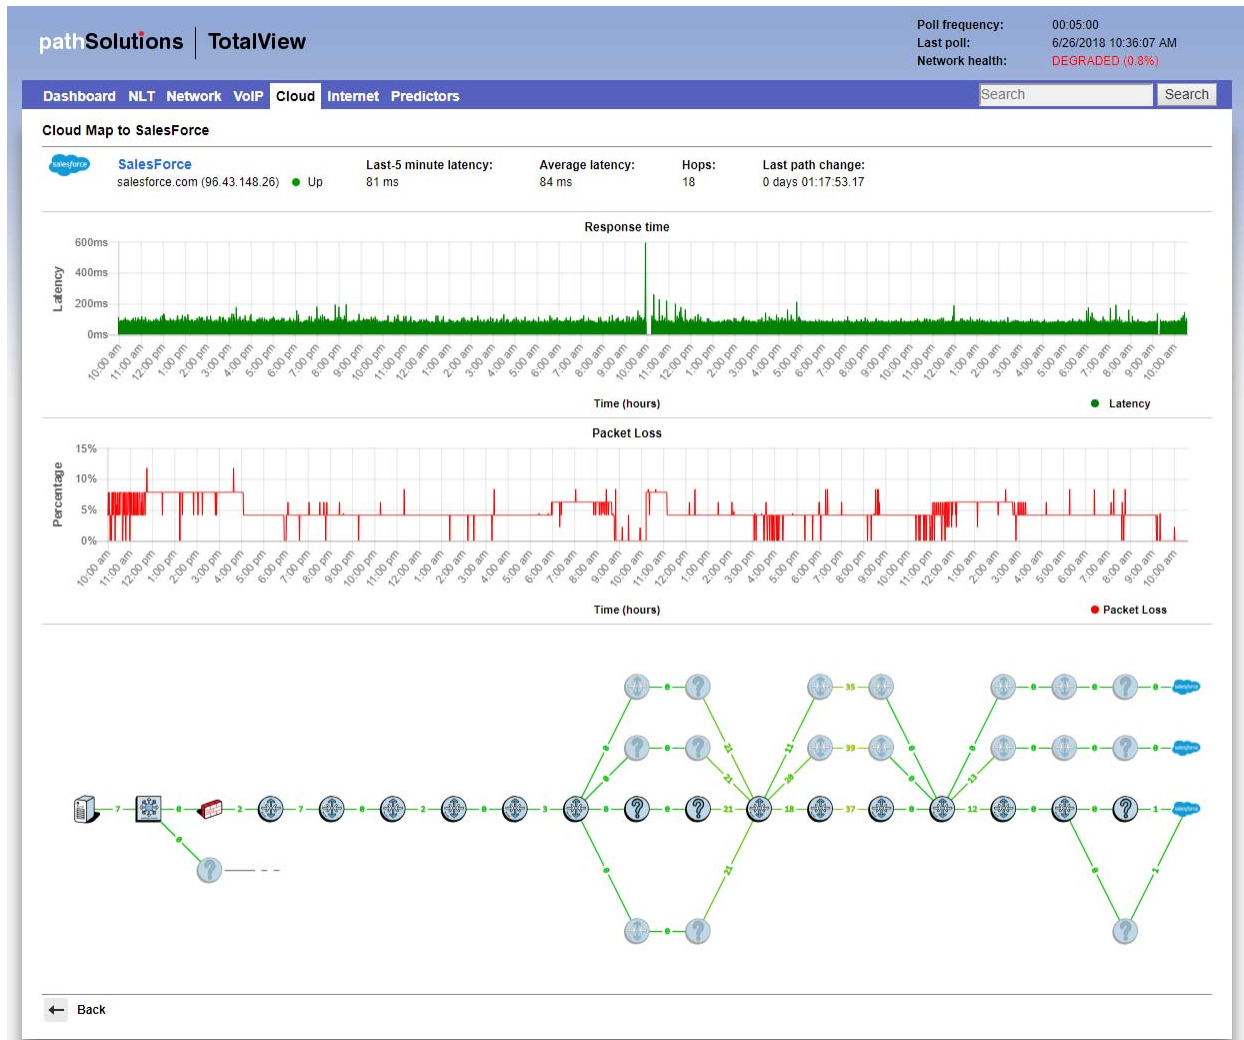

SD-WAN Monitoring

TotalView's SD-WAN monitoring shows the full route tree that connects to each link endpoint as well as what occurred along that path, and alerts you to problems with latency, loss, outages, and route changes.

SIP-Trunk Monitoring


TotalView allows you to monitor the status, health, and performance of SIP Trunks than any other solution.

License-Unlimited NetFlow

TotalView's NetFlow capability permits an unlimited number of interfaces to be added to monitoring. This means you never lose visibility due to a license limitation.

Automatic Interactive Network Diagram

A network diagram that is automatically generated, flexible and interactive.

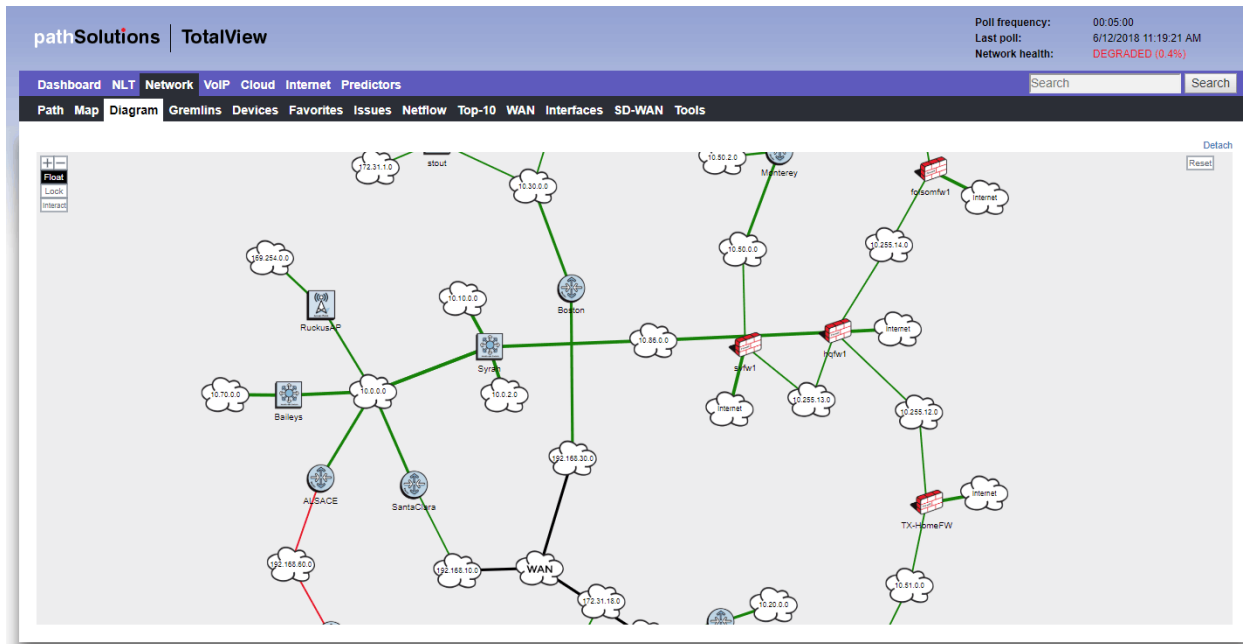

Internet Health Report

This report shows you the status and health of all elements required for reliable Internet connectivity.

Predictive Analytics

TotalView provides these forward-looking prediction reports about your network:

- *Cabling Predictor* – This report shows interfaces that have had to perform single-bit error correction on received frames.
- *Bandwidth Predictor* – This report discloses interfaces that will hit 100% utilization based on their past performance.
-

Standard Features

TotalView by PathSolutions is a Windows service that uses SNMP to monitor statistics and utilization for each interface on switches, routers, and servers. If data-link errors or utilization rates rise above a settable threshold, you can use the generated web pages to help you determine the source of the network problems. This will help you to maintain a healthy network.

In addition to the new features listed on the previous pages, standard features are:

Total Network Visibility®

This means every device on your network, and every interface on every device is automatically analyzed for performance, errors, QoS, and configuration.

Deep Knowledge

TotalView automatically collects and analyzes 19 error counters, configuration, performance, and QoS on every interface. Anywhere and anytime a packet is dropped, buffered, or mis-routed on the network, you can see what went wrong.

Heuristics Analysis - Network Prescription™ Engine

This engine analyzes error counters and configuration to produce plain-English answers for rapid remediation.

The errors are analyzed by an analysis engine that helps to guide you to possible solutions to the problems with each specific interface. This gives the Network Prescription™ the ability to diagnose the root cause of the problem without having to utilize additional tools or combine datasets from multiple locations.

The screenshot shows a web interface titled "Network Prescription" with a "Clear errors" button. It lists four network issues:

- Outbound Discards exist on this interface:** Packets were discarded because the transmitting machine may have run out of outbound packet buffers. This can occur if there is not enough outbound bandwidth available to transmit all requested data. It is suggested that you increase the bandwidth of this link, or increase the number of transmit buffers on this device.
- Inbound Errors exist on this interface:** Inbound errors are packets that are mal-formed, but are enclosed in a valid frame. This can be caused by a bad NIC driver or protocol driver on the sending device. To track down this error, you will need to connect a packet analyzer in front of this interface to capture the actual mal-formed packet to determine which device is at fault.
- Transmission Utilization Rate is High:** This interface is transmitting a lot of data. If the transmission rate is abnormal, then a packet analyzer should be deployed to interrogate the abnormal traffic. If the transmission rate is expected, then consideration should be given to increasing the bandwidth of this link.
- Inbound Unknown Protocols exist on this interface:** This interface received a valid frame with a protocol that was unrecognized. (Example: If AppleTalk, IPX, or IPv6 is configured on two devices, these two devices will send broadcasts to each other. All other devices on the network will also receive the broadcast frames. These devices will not know what to do with the packets and will discard them.) If you encounter a lot of Inbound Unknown Protocols on an interface, you should consider setting up VLANs and separating devices that don't need to communicate via other protocols. Broadcasts can steal CPU attention on a machine (each broadcast generates a system interrupt and requires the CPU to evaluate the frame). If your network is saturated with many protocols, up to 5% of your computer's CPU cycles can be dedicated to processing and discarding these broadcast packets.

Proactive Issue Resolution

Identification of the problems in your network: every misconfiguration and dropped packets; 19 error counters that gives you proactive information on performance, configuration and QoS.

WAN Health Report

A single report that shows you what's happening regarding your WAN links, what they are costing you, and who to call when problems occur.

Fully-Integrated Port-Mapper

With just one view, you can see what's connected to switch ports including CDP/LLDP information, MAC addresses, manufacturers, IP address, and DNS entries.

Full Inventory of Network Devices

TotalView provides a complete inventory screen detailing any make/model of device discovered on your network, and its Manufacturer, Model, Serial Number, Hardware, Firmware version, OS software version, and hardware manufacture date are now reported on the inventory tab.

You can also add vender licenses and contracts.

Device Name	Device IP Address	Inventory			Code Revision		
		Manufacturer	Model	Serial Num	Hardware	Firmware	Software
HQ-Firewall (3 devices)							
hqlpa500	10.0.0.7	Palo Alto Networks	PA-500	009401003580	2.1		8.0.6
hqlfw1	10.86.0.2	Ubiquiti Networks					
CiscoASA	10.0.0.8	cisco Systems Inc.	ASA5505	JMX143540LX	V08	1.0(12)/13	8.2(1)
HQ (21 devices)							
Chardonnay	10.0.0.20	Hewlett-Packard	J9085A	CN810ZT3QY		R.10.06	R.11.22
Syrah	10.0.0.1	Cisco Systems, Inc	WS-C3650-24PS-E	FDO1845E18S	V01	0.1	Denali 16.3.5b
Pinot	10.0.0.21	Hewlett-Packard	J9085A	CN128ZT0R1		R.10.06	R.11.70
Merlot	10.0.0.22	Hewlett-Packard	J9019A	CN720WX0PB		Q.10.02	Q.11.67
Muscat	10.0.0.23	Hewlett-Packard	J9085A	CN045ZT1PN		R.10.06	R.11.30
Burgundy	10.0.0.19	Hewlett-Packard	J9087A	CN124ZR0LD		R.10.06	R.11.121
Ribolla	10.0.0.26	Cisco Systems, Inc	WS-C3650-24PS-S	CAT0947R1GA	V05	12.2(55)/SE1	12.2(55)/SE1
Grenache	10.0.0.27	Cisco Systems, Inc					
Riesling	10.0.0.29	Brocade Communications Systems, Inc.					

Path Mapping

The path mapper will tell you what happened on all involved links, switches, and routers used to pass traffic between any two IP addresses at any point in time.

Complete VoIP Visibility

VoIP environment tools: a phone locator, SIP Trunk monitoring, license-unlimited call simulator agent, phone move alerting, and full visibility into QoS queues with our QueueVision® capability.

Multi-Vendor Support

TotalView can track all devices where SNMP is supported, including : Cisco, Juniper, Extreme, HPE, HP, Dell PowerConnect, Dell Force10, Adtran, Avaya, 3Com, Enterasys, Foundry, Brocade, D-Link, Netgear, TP-Link, Ubiquity. For VoIP networks: Skype for Business, 8x8, Mitel, ShoreTel, RingCentral, Genesis, NEC, Aastra, and Asterisk.

Highly Responsive User Interface

TotalView uses a fully RESTful JSON API and in-memory database capabilities.

Rapid Deployment

The typical deployment and auto-configuration is complete in 12 minutes, using the QuickConfig Wizard to install and reconfigure TotalView for virtually any sized network. TotalView will monitor all of the interfaces that are discovered.



Rapid Re-Configuration When Your Network Changes

When your network changes and devices are added or removed, you can rapidly update your configuration using the QuickConfig Wizard. It will detect new interfaces, include them in your configuration, and start monitoring again.

Ease of Use

TotalView is logically laid out give you access to the right information on your network. Natural Language Troubleshooting gives answers in plain English.

Automated Reporting

TotalView provides a daily Network Weather Report™, MOS Reports, interface usage reports, transmitters, and other error reporting.

Highly Scalable Lightweight Footprint

The system requirements are scalable and lightweight.

Dynamic Network Map

TotalView's Dynamic Network Map shows a live look into utilization and availability in your environment.

Built-in Correlation Engine

The built-in correlation engine can isolate problems by location such as: interfaces or devices that changed status, packet loss or utilization spikes.

Spanning-tree Stability Monitoring (STP)

If you don't know what's happening with STP, you're eventually going to have unhappy users. Everyone has heard the story of a user that "just plugged something in" and the network went haywire. If you knew what happened, and where, you could fix it.

Device Name	Device IP Address	Protocol	Version	Priority	Topology		Root Bridge	Root Cost	Root Port	Hold Time
					Last change	Changes				
HQ-Firewall (3 devices) ▾										
hqlpa500	10.0.0.7	-	-	-	-	-	-	-	-	-
hqfw1	10.86.0.2	-	-	-	-	-	-	-	-	-
CiscoASA	10.0.0.8	-	-	-	-	-	-	-	-	-
HQ (21 devices) ▾										
Chardonay	10.0.0.20	ieee8021d	-	32768	0 days 05:40:33.10	1791	8000001188c90c48	400023	Int #23	600
Syrah	10.0.0.1	ieee8021d	-	32769	0 days 05:41:42.00	191	8000001188c90c48	200023	Int #23	100
Pinot	10.0.0.21	ieee8021d	-	32768	0 days 05:41:05.10	326	8000001188c90c48	220023	Int #25	600
Merlot	10.0.0.22	ieee8021d	-	32768	76 days 13:40:11.70	26	8000001188c90c48	420023	Int #26	600
Muscat	10.0.0.23	ieee8021d	-	32768	0 days 05:40:33.35	1159	8000001188c90c48	400023	Int #3	600
Burgundy	10.0.0.19	ieee8021d	-	32768	0 days 05:41:07.85	796	8000001188c90c48	200019	Int #20	600

Natural Language Troubleshooting

TotalView has a Natural Language Troubleshooting engine: type questions in plain English and get plain-English reports.

QueueVision®

Full visibility into QoS queues on MPLS links is required to run a healthy VoIP/UC environment.

License-Unlimited Call Simulator

Our Call Simulator is a single and doesn't require remote agents to be deployed – and that permits testing throughout your entire organization, including remote all remote branches.

Phone Locator Report

TotalView can uniquely track where all your phones and VoIP/UC devices are connected to the network, and verify that they have healthy connections.

MOS Report

Keeping tabs on the performance of your overall network.

PoE Monitoring

To ensure that you have enough power to keep your phones operating correctly.

Phone Move Alerting

It will alert you when a VoIP/UC phone is removed or added to the network.

CDR Analysis

Analyze and receive alerts for VoIP calls in the system (currently available for ShoreTel phone systems).


Multi-Vendor Support

TotalView works no matter which phone system you use: Cisco, Avaya, Skype for Business, 8x8, Mitel, ShoreTel, RingCentral, Genesis, NEC, Aastra, and Asterisk.

We look at the network conditions that cause problems for VoIP/UC systems independently of vendor.

Immediate Current Utilization of Any Link

Easily view the current utilization of any monitored network link from a web browser. No need to set up a packet analyzer or analyzer port on your switch just to see what's happening on an interface.

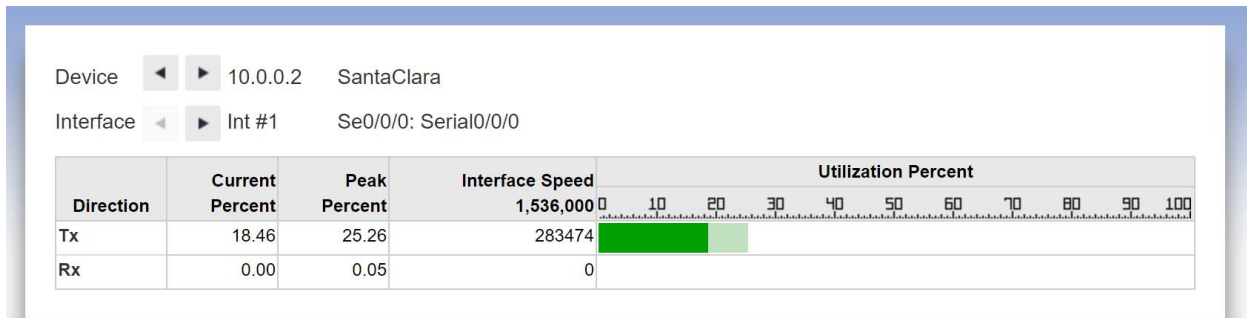

A high-water mark is kept so you can track the peak utilization of a link over time.

Daily Network Weather Reports™

Every day, a report will be emailed to you outlining the health of your network. This helps you to keep track of the general level of errors and overall utilization of your network.

- Keep track of utilization rates on your Internet links and other WAN links to determine if you need to add bandwidth
- Maintain an active reminder of available interfaces (never get stuck running out of switch interfaces as you continue to add workstations to your network)
- Network Weather Reports can be fully customized
- Easy to Understand Web-based Statistics
- TotalView by PathSolutions collects statistics and displays them in an easy to disseminate format via web pages
- Web-based statistics viewing allows you to check on the health of your network from any browser

Built-in Webserver

The TotalView built-in web server helps to speed up installation so more time can be spent analyzing errors rather than configuring the system.

Web-Based Monitoring

The web pages allow you to quickly locate the interfaces that have high error rates or high utilization rates.

TotalView web pages can be viewed from any standard browser, anywhere on your intranet.

Errors and utilization information is collected for each interface and is presented in a format that allows you to easily determine the source of the problem.

Advanced Email Reporting

Email templates are included for devices, interfaces, and overall health monitoring. Templates can be easily modified to include a variety of data elements.

Emailed Graphs

Graphs for any interface or device can be included in emailed reports.

Parent-Child Relationships for Outage Alerting

Parent-Child relationships can be established for each device so alerts are not generated for devices located behind other devices. This insures that you receive outage alerts for only the specific device that went down and not all devices behind that device.

Other Features

- Full alerting capability via email/syslog
- Built-in TFTP server
- Fully-integrated Syslog server
- Reporting Engine for custom reports
- Full CDP/LLDP associations

System Requirements

The TotalView service installs on a Windows server (or workstation acting as a server), and can be viewed from web browsers on the network. The following are requirements for the server, client web browser, and Call Simulator.

Small Network Server Requirements

For networks 25,000 interfaces or less, the following hardware is required:

- ✓ Pentium 1ghz processor or faster (Virtual server is fine)
- ✓ 10 GB of free disk space
- ✓ 2 GB of RAM for the service (4 GB RAM minimum for the server)
- ✓ 100 MBPS Network Interface Card
- ✓ Runs on both 32 and 64 bit Windows deployments
- ✓ Operating systems:
 - Windows 2000 Server/Advanced Server
 - Windows Server 2003
 - Windows Server 2008
 - Windows Server 2012
 - Windows Server 2016
 - Windows 2000 Professional
 - Windows XP Professional
 - Windows Vista
 - Windows 7
 - Windows 8
 - Windows 10

Medium Network Server Requirements

For networks with more than 25,000 interfaces, but less than 100,000 interfaces, the following hardware requirements are suggested:

- ✓ Dual-core 2ghz processor or faster (Virtual server is fine)
- ✓ 50 GB of free disk space
- ✓ 2 GB of RAM for the service (4 GB RAM minimum for the server)
- ✓ 100 MBPS Network Interface Card
- ✓ Runs on both 32 and 64 bit Windows deployments
- ✓ Operating systems:
 - Windows 2000 Server/Advanced Server
 - Windows Server 2003
 - Windows Server 2008
 - Windows Server 2012
 - Windows Server 2016

Large Network Server Requirements

For networks with more than 100,000 interfaces, the following hardware requirements are suggested:

- ✓ Dedicated hardware (Virtual server not recommended)
- ✓ Dual-core 2 GHz processor or faster
- ✓ 250 GB of free disk space
- ✓ 8 GB of RAM
- ✓ 1gbps Network Interface Card
- ✓ 4 x 15,000k rpm hard drive in a hardware RAID-V configuration or SSD
- ✓ 64 bit Windows Server
- ✓ Operating systems: Windows Server 2008
 Windows Server 2012
 Windows Server 2016

Web Browser Requirements

Any modern HTML5-compliant browser can be used to view the web pages including Chrome, Firefox, and Microsoft Edge. Internet Explorer 11 will function, although there may be slight screen formatting effects that appear. This is due to IE not being fully compliant with W3C and WHATWG standards, and Microsoft discontinuing support for this browser.

Call Simulator Requirements

The call simulator is a stand-alone executable that does not require software installation or uninstallation. It requires local administrator rights to be able to run.

- ✓ Dedicated hardware (Virtual machines are not recommended*)
- ✓ Pentium 1ghz processor or faster
- ✓ 10 MB of free disk space
- ✓ 1 GB of RAM**
- ✓ 10 MBPS Network Interface Card (Wireless not recommended***)
- ✓ Runs on both 32-bit and 64-bit Windows deployments
- ✓ Operating systems: Windows 2000 Server/Advanced Server
 Windows Server 2003
 Windows Server 2008
 Windows Server 2012
 Windows Server 2016
 Windows 2000 Professional
 Windows XP Professional
 Windows Vista
 Windows 7
 Windows 8
 Windows 10

* The call simulator will run on a virtual machine, but the latency and jitter measurements may be wildly incorrect because the physical hardware is shared with other servers/applications.

** More memory is recommended if multiple call simulators are run on the same computer, and/or if call simulations are run for more than 24hrs.

*** Wireless networks will have a certain amount of packet loss induced by the fact that WiFi is a shared media channel. Additional loss may be created by environmental factors like access point locations and loading, as well as building materials and equipment.

It is recommended to quit all other applications on the computer to avoid having other software introduce testing anomalies. This should also include disabling background tasks like antivirus scans, disk defragmentation and other scheduled tasks like Windows updates.

Notes regarding Call Simulator load testing

When loading a network with more than 1 call, the following additional requirements should be considered:

- Laptops are generally designed for battery savings and do not have fast/wide busses for moving large amounts of data. In general, a low-end netbook PC should be able to generate 25 simultaneous calls from a call simulator before it becomes the limiting factor and starts to introduce latency/jitter/loss.
- High-end laptops should be able to safely generate up to 200 simultaneous calls if they have a dedicated Ethernet adapter, or a USB 2.0 or USB 3.0 Ethernet adapter.
- Desktops and dedicated servers should be able to generate up to 250 simultaneous calls

The target for an end-to-end test should also be considered, as the destination device might not be able to respond to a load:

- Network devices like switches, routers, and access points should be able to respond to 10 calls, but might have problems if additional traffic is sent to them, as their management processes are not designed to *respond* to large volumes of traffic.
- VoIP phones generally have small CPUs that are designed to handle traffic equivalent to 1-2 calls at the same time. They might fail to respond if more traffic is sent than they can process. Additionally, some VoIP phones may be configured with firewalls that block 90% of non-SIP-registered traffic.
- If the target computer is a virtual machine, it may show large latency and jitter spikes due to the virtualization process.

When running more than 1 call simulator on the same computer, the timing and bus bandwidth between the call simulators is shared, and an additional amount of resources are lost as a result of Windows task switching. This additional overhead loss may be significant depending on the computer's resources.

For example: 200 simultaneous calls might be able to be run with one call simulator just fine. If two call simulators run with 100 calls each, it may start to show latency/jitter/loss on one or both call simulators. This effect may be reduced by assigning processor affinity to each call simulator:

<https://www.windowscentral.com/assign-specific-processor-cores-apps-windows-10>

Installation

Installation and configuration of the PathSolutions TotalView takes roughly 12 minutes for most networks.

You must have a valid PathSolutions TotalView License to use the software. This will usually arrive in the form of an email from PathSolutions:

The logo for PathSolutions, featuring the word "path" in a lowercase, sans-serif font and "Solutions" in a larger, bold, uppercase, sans-serif font. A small red dot is positioned above the letter "i" in "Solutions".

Don't Turtle Your Network

PathSolutions License

Thank you for acquiring PathSolutions software.

```
Customer Name:   Cindytv8
Start date:     8/21/2017 12:00:00 AM
End date:      9/5/2018 12:00:00 AM
Interfaces:    10000
```

Requirements

- Make sure that the computer where the software is installed meets the [system requirements](#).
- All network switches, routers, gateways, and servers should have IP addresses and SNMP read-only community strings configured. Contact support@PathSolutions.com if you need help with configuring SNMP on your network devices.

Installation

1. Download and run the installer:
[http://files.patholutions.com/download/TotalView8\(R8152\).msi](http://files.patholutions.com/download/TotalView8(R8152).msi)
2. After the program is installed, the QuickConfig wizard will run. Enter the following information into the QuickConfig wizard to activate the license:

```
Customer number: 12850524
Customer location: hq
```

If you have any questions, please contact Support@PathSolutions.com or call us at 1-877-748-1444.

License information can be obtained from your PathSolutions reseller or directly from PathSolutions.


PathSolutions license support: 1-877-748-1777 Support@PathSolutions.com

To set up the PathSolutions TotalView on your machine, use the provided link in the email to download the latest version from the PathSolutions website.


TotalView should be installed on a server or workstation that has a permanent connection to the network.

Installer


The software installer is a Microsoft MSI file. You will need local administrator privileges to install the software on a computer. Open and Click to accept the terms in the License Agreement, then click the Next button:

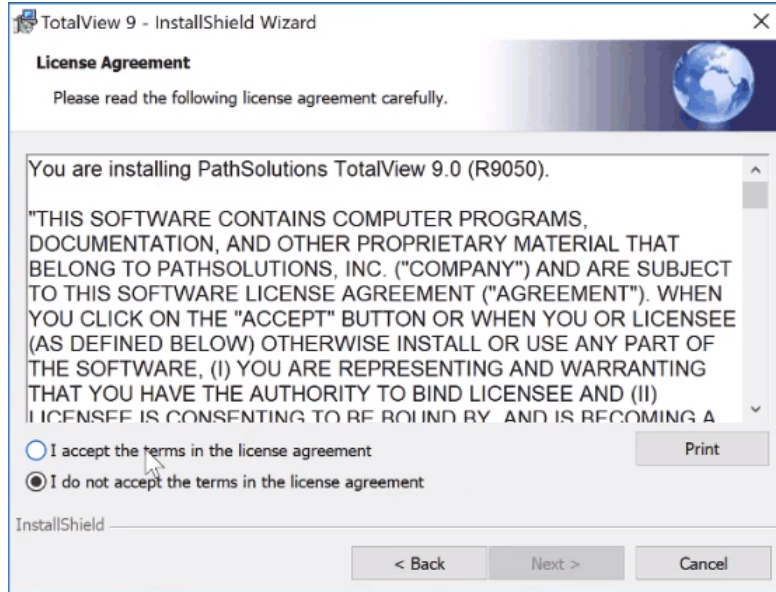


Click on Next again to accept the default folder:

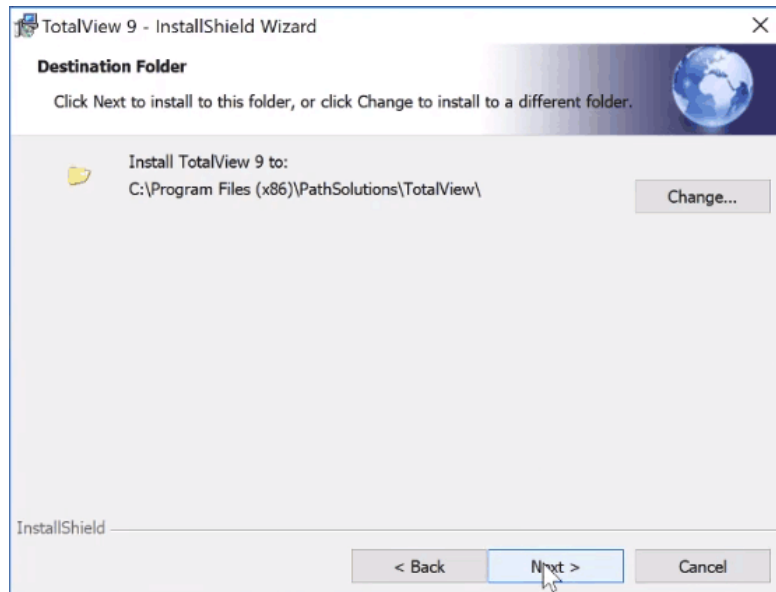

Click on Install to install the program:

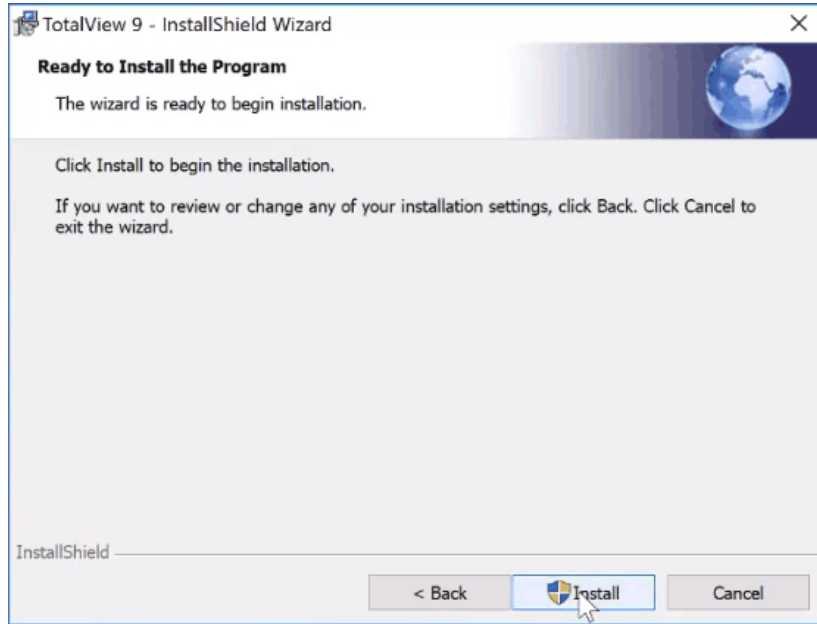

Click Finish to begin your Activation:

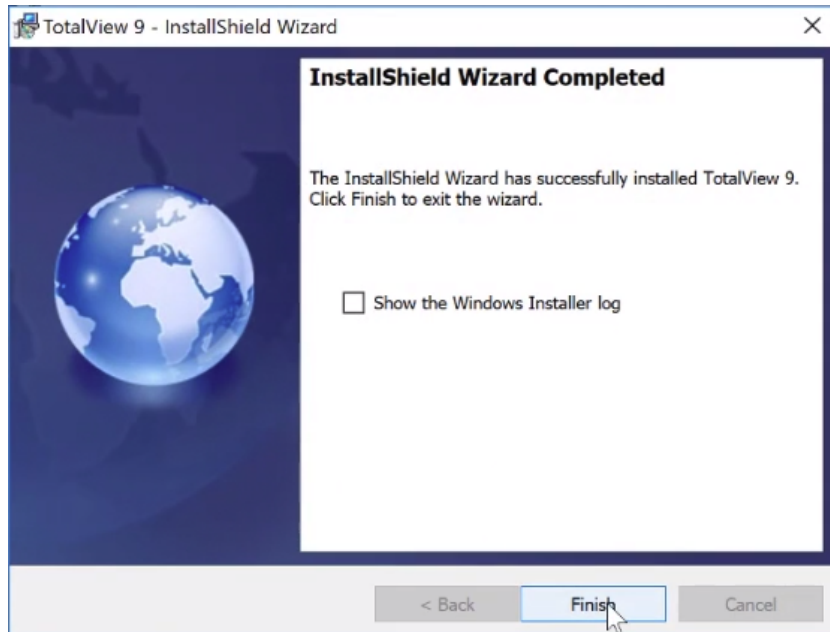

Note: The QuickConfig Wizard will begin automatically after you finish these steps.

QuickConfig Wizard

Double-click on the installation program and follow the instructions on the screen. The QuickConfig Wizard will auto-configure the PathSolutions TotalView for you and begin monitoring in just a few minutes.

The QuickConfig Wizard has four steps after Activation:

- Step 1: Network Address Ranges
- Step 2: SNMP Community Strings
- Step 3: Daily Network Weather Report
- Step 4: Alerts

After installation is complete, the PathSolutions TotalView will scan your network for devices and begin monitoring.

Activation

You will be asked to enter your subscription information to activate your subscription.

TotalView QuickConfig Wizard

Activation

In order to activate your license, you will need to provide a customer number, customer location, and your contact information. This information will be validated against our subscription server to activate your license.

Customer Number: demo

Customer Location: 1

Contact Name: Tim Titus

Contact Phone: 408-470-7222

Contact Email: ttitus@pathsolutions.com

MAC Address: 98-01-a7-a2-62-8c


<<Previous Next>> Cancel

Enter all fields from your subscription email.

Note: Customer Number and Customer Location fields are case sensitive. These fields must be entered exactly as they are specified in the subscription email.

Step 1: Network Address Ranges

The first step allows you to specify the network range or ranges that should be scanned to discover network devices such as switches and routers.

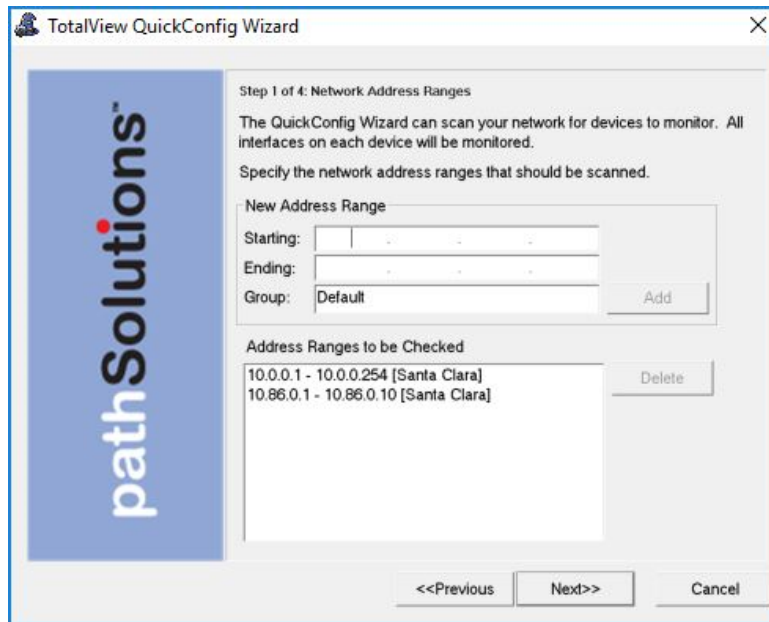

Enter a starting IP address and an ending IP address for each network range that should be scanned. A group name can be assigned to each IP address range that is added.

Note: Run the QuickConfig Wizard once with just a couple of subnets and notice the results. Then you can re-run the QuickConfig Wizard and add successive subnets.

Note: The list of what TotalView discovers can be examined and adjusted with the Configuration Tool.

Note: If a device is in the Network Address Range to be monitored but does not appear on the Device List Page in TotalView:

- 1) Use the Poll Device to see if it communicates via the SNMP string. If it does respond to SNMP via the Poll Device:
 - 2) The next thing to check is that your Number of Interfaces does not exceed your Licensed Interface Count. Your Interface Count can be seen at the bottom of the "Device" page. If your Interface Count is fine:
 - 3) Check the SwMonIgnore.cfg file to make sure it was not set to be ignored. The SwMonIgnore.cfg file can be found in C:\Program Files (x86)\PathSolutions\TotalView.
-

Click "Next" to continue.

Step 2: SNMP Community Strings

The second step allows you to select what SNMP read only community strings should be used with this scan.

Step 2 of 4: SNMP Security

Specify the SNMP read only security credentials that are used on devices in your network. These will be used to access interface information on your devices.

New credentials

SNMP version: v1 v2c v3

Username:

AuthProt: AuthPass:

PrivProt: PrivPass:

Credentials to be checked

- v3:secureV3User
- v2:public

<<Previous Next>> Cancel

Enter all of the SNMP read-only community strings that are used in your network to help ensure that network devices are identified.

Note: On Cisco devices, the “@” sign should not be used in a community string as it is reserved for special use in fetching bridge tables with the Cisco’s Community String Indexing feature.

Click "Next" to continue.

Step 3: Daily Network Weather Report

The third step will ask if you want to receive the Daily Network Weather Report. This is a report that is emailed every day at midnight that shows health and performance of your network on a daily basis.

Step 3 of 4: Emailed Reports

TotalView can email a daily network "Weather Report" to help you keep track of your network health.

Do you want to receive these reports? Yes No

Send to:
Example: jdoe@hotmail.com, flb@aol.com

Mail server IP address:
(or DNS name) Example: mail.company.com

<<Previous

Enter the Internet SMTP email addresses that should receive the daily report. You can enter multiple email addresses by using a semicolon, comma or space character between each email address.

You will need to enter the IP address or DNS hostname of your SMTP mail server address or a mail relay server. This mail server should allow SMTP forwarding if you intend to send to individuals at other domain names. See Appendix C for additional information on SMTP email forwarding.

After entering this information, you can click "Test" to send a test email. If there is a problem sending an email, you will be presented with detailed information how to resolve the problem.

Click "Next" to continue.

Step 4: Email Reports

The fourth step will ask if you want to setup alerts for standard conditions:

Step 4 of 4: Alerts

This step allows you to set up alerts for standard conditions.

Mail server IP address: 10.0.0.10
(or DNS name) Example: mail.company.com Test

Email address: tltitus@pathsolutions.com
Example: jdoe@hotmail.com, flb@aol.com

Device unreachable alert

Device CPU exceed alert: 70 %

Device RAM threshold alert: 1024 kbytes

STP Topology Reset alert

Infrastructure interface status change alert

Infrastructure interface utilization exceed alert: 80 %

Infrastructure interface error rate exceed alert: 5 %

Low MOS to/from device alert: 3.8 mos

<<Previous Next>> Cancel


Enter the Internet SMTP email addresses that should receive the alerts. You can enter multiple email addresses by using a semicolon, comma or space character between each email address.

After entering this information, you can click "Test" to send a test email. If there is a problem sending an email, you will be presented with detailed information how to resolve the problem.

Select the standard conditions you want and click "Next" to continue.

Then click "Finish" to complete the wizard.

After clicking "Finish", the wizard will scan the network ranges for network devices that support SNMP. The monitoring service will be started, and you will be presented with a web page displaying which devices are being monitored.

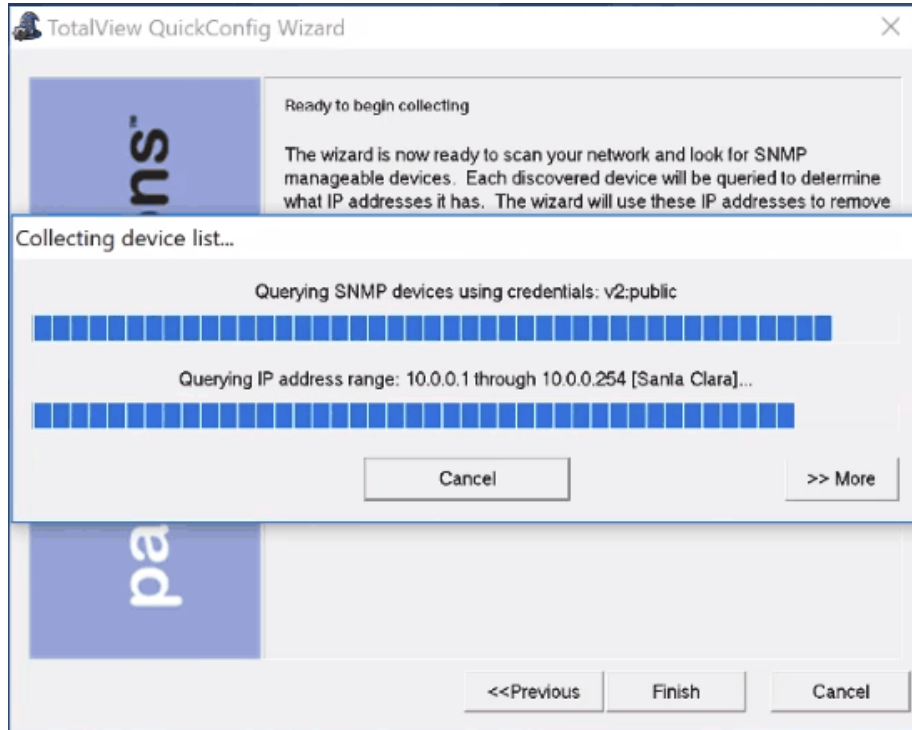

That is all that is necessary to install and configure the program. You should be able to immediately start viewing your network and solving problems.

Re-Configuring When Your Network Changes

If you have new interfaces on your network, you can re-run the QuickConfig Wizard to scan your network and determine what changes have occurred.

To re-run the QuickConfig Wizard, click on "Start". Then choose "Programs", "PathSolutions", "TotalView", and "QuickConfig Wizard".

You don't have to change any configurations already set with the QuickConfig Wizard. Just click "Next" to every screen and the network will be scanned for new devices.



Automatic Re-Configuration

The QuickConfig wizard can be run in automatic mode from a scheduled task if it is desired for new devices to be automatically discovered on a regular basis.

```
MonitorWizard.exe /a
```

When run in automatic mode, the program will not ask any questions but will scan the previous IP address ranges, will use the previous SNMP community strings, and add any new devices to the service. The service will then be stopped and then re-started to have the new devices added.

To change what IP address ranges and SNMP community strings are used in the automatic scan, edit the wizard.ini file:


```
/#10.100.47.1 - 10.100.47.254 [Default]/  
/#10.100.56.1 - 10.100.56.254 [Default]/  
/#192.168.136.1 - 192.168.136.10 [Edge Network]/  
/#192.168.110.1 - 192.168.110.10 [Edge Network]/  
/public/
```

Make sure all slashes '/' and pound signs '#' are maintained.

Using the Web Interface

Website Navigation Map

The PathSolutions TotalView web layout is easy to follow, and easy to navigate.

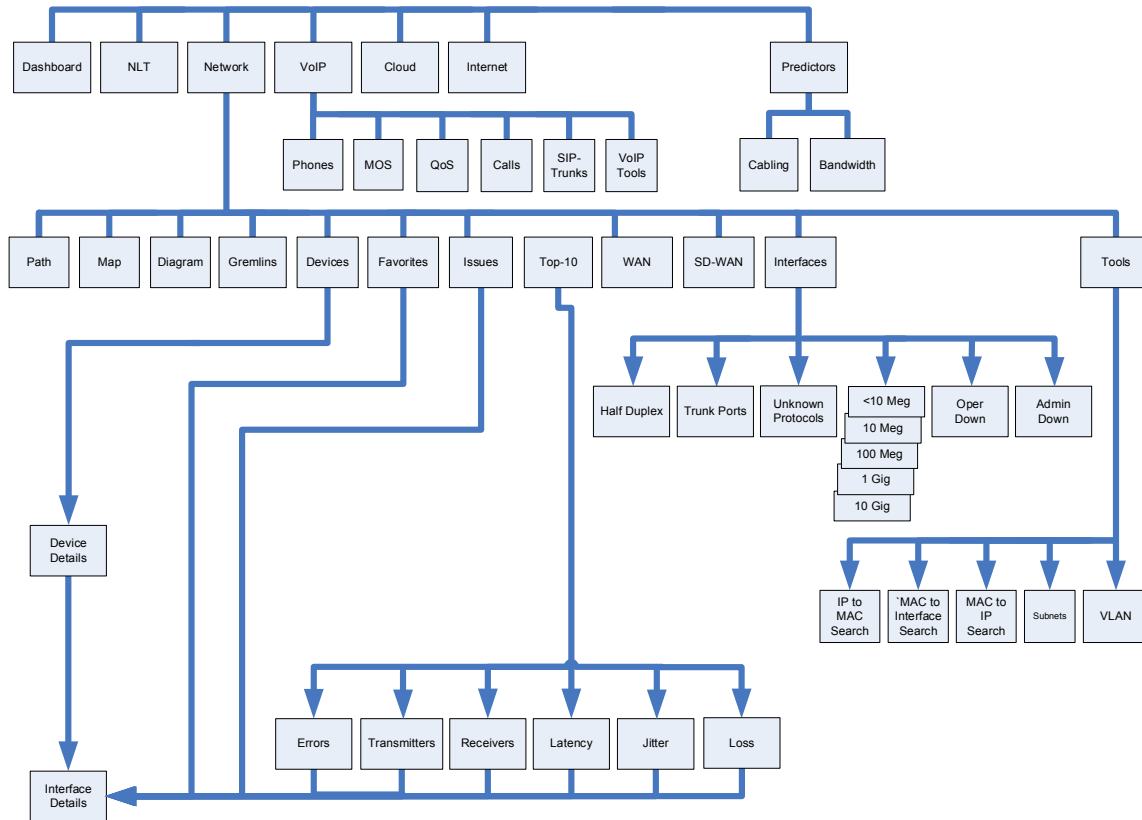

The top row of the navigation map includes a number of tabs that define different areas of the product.

Web Page Headers

At the top of each web page, general information is displayed: Polling Frequency, Last Poll Time, and Network Health.

Poll frequency:	00:05:00
Last poll:	6/12/2018 11:14:15 AM
Network health:	DEGRADED (0.4%)

Tabs

Navigating the web interface is accomplished by using the Navigation bar and tabs at the top of the web page:


path Solutions TotalView		Poll frequency: 00:05:00	
		Last poll: 6/12/2018 11:09:18 AM	
		Network health: DEGRADED (0.4%)	
Dashboard	NLT	Network	VoIP
Cloud	Internet	Predictors	
			Search <input type="text"/>

Each tab covers a specific area relating to the health of your network.


Dashboard Tab

The first tab, the “Dashboard” provides user-changeable widgets that can be displayed inside or outside of this tab. You decide the type of widget and how you want information presented, and each widget auto-updates automatically.

When you first open the program or use the Dashboard, it will display the default widgets with a little “Edit” link in *the upper right-hand side*.

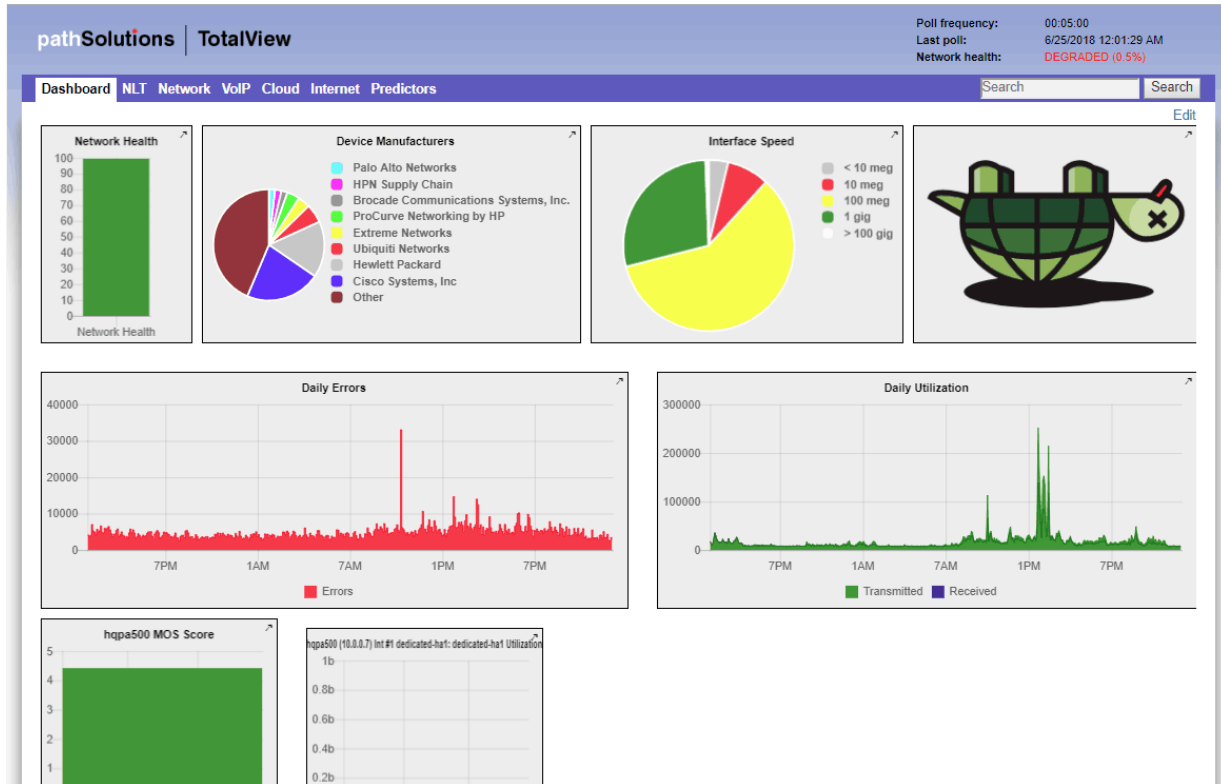

If you click the “edit” link, it changes to two links: “Add Widget” and “Lock”.

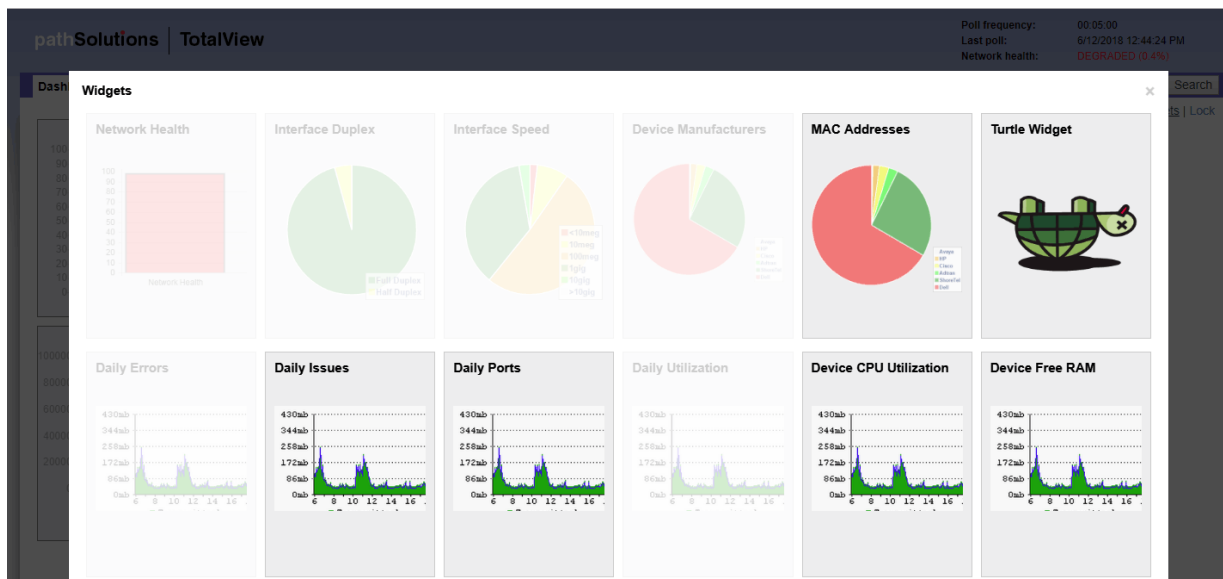

If you click “Lock”, it will just go back to “Edit”.



If you click “Add Widget”, it will open a dialog box and ask which widget you should add. The one you select will immediately be placed on the page. You can move the selected widget around and change the size by clicking on the sizing object in the lower right corner of the widget.

If you want, you can click “X” and close the selected widget.

When you are satisfied with its location and size, click “Lock” and the system will then lock it in and display it without risk of having it change size or location. The “X” in the upper right corner will change to an arrow that you can now click on. It will create a separate detached window for the widget that you can drag around your screen.

You can continue to add other widgets to the screen as you want.


Widget examples:

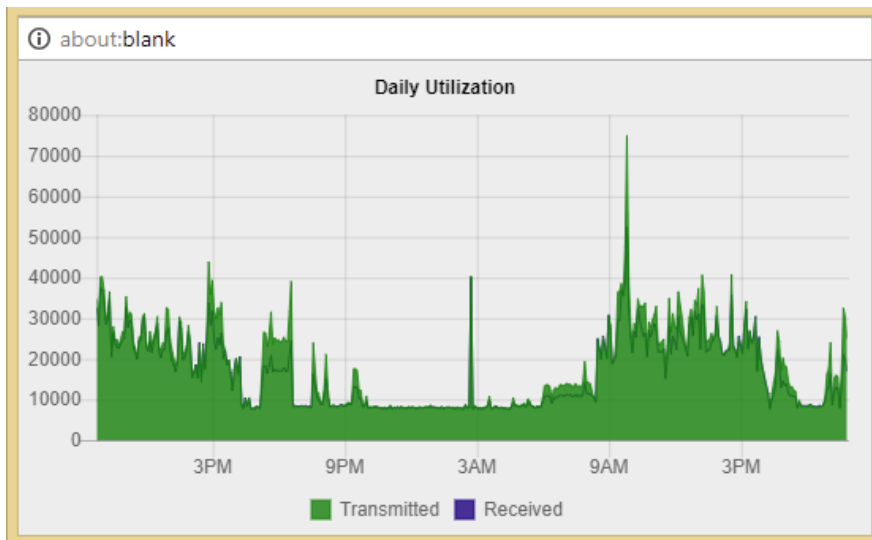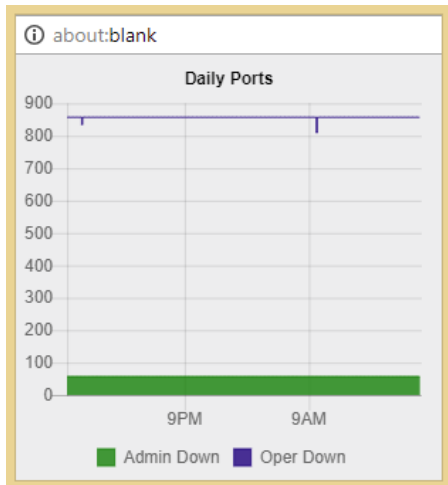

NLT Tab

The second tab opens TotalView’s Natural Language Troubleshooting engine: Here you can type network questions in plain English and press “go”.

The “Need Help” button gives several examples of questions that it can answer and provide reports for.

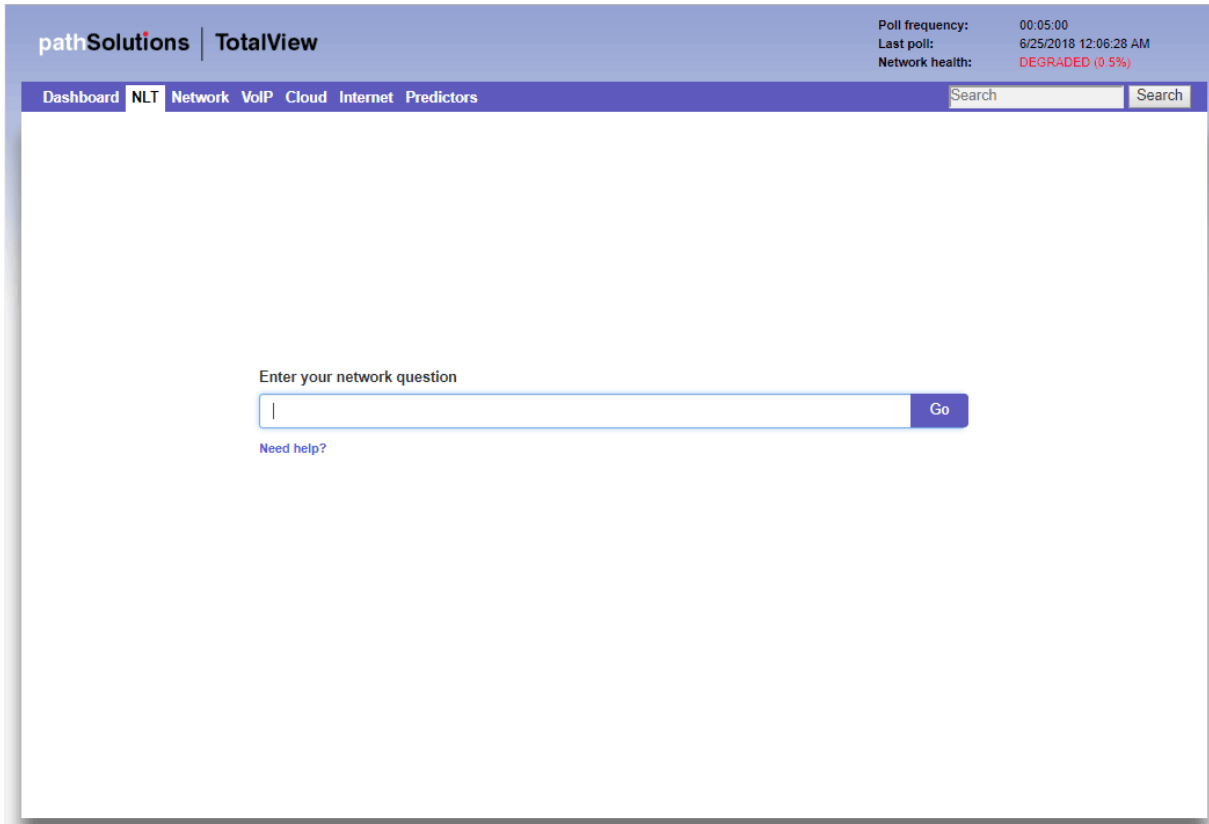

Network Section

The “Network” tab on the top menu will bring you to the Network section and tools.

Path Tab

The Path tab permits you to view the health of all links between two IP addresses.

The screenshot shows the PathSolutions TotalView interface. At the top right, it displays system status: Poll frequency: 00:05:00, Last poll: 6/25/2018 12:21:27 AM, and Network health: DEGRADED (0.5%). The main navigation bar includes Dashboard, NLT, Network, VoIP, Cloud, Internet, and Predictors. Below this, a secondary navigation bar lists Path, Map, Diagram, Gremlins, Devices, Favorites, Issues, Netflow, Top-10, WAN, Interfaces, SD-WAN, and Tools. The main content area is titled "Mapping from one IP address to another IP address" and shows the source IP address as 10.60.0.0 and the destination IP address as 10.70.0.0. A "Map" button is visible. Below the input fields, there is a section for "Mapping from 10.60.0.0 to 10.70.0.0" with "Forward Historical" and "Reverse Historical" tabs. A small icon of a computer is shown next to the source IP address. At the bottom of the mapping area, it says "No Layer2 Information Available".

Before mapping a call, click on the “Update” button to make sure that the bridge tables and ARP cache information is current.

Note: The mapping will display the current path that packets take. If the network configuration or state was different at a previous point in time, this mapping may not reflect the previous conditions. Enter the Source IP address where you want the mapping to start and the Destination IP address where the packets would be destined. Click the “Map” button to initiate the mapping.

This will perform a one-way path mapping from the starting IP address to the ending IP address. It is a one-way view of how packets would flow from the starting IP to the ending IP. To view how packets would return, you should click on “Reverse Historical”, as the reverse path may be different than the outbound path if asymmetric routing is occurring.

Each interface will display the historical percent utilization (received for inbound interfaces and transmit for outbound interfaces) along with the error rate.

You can also view the duplex setting of each interface to make sure that each outbound interface matches the duplex setting on the inbound interface.

On outbound Cisco router interfaces, the Queuing configuration of the interface is also shown to aid in determining if QoS is configured properly on the interface.

Note: If the mapping is unable to complete, it may be due to the fact that all switches and routers along the path may not be monitored. Add these devices to monitoring for complete visibility of the entire path.

Note: If a switch or router is unable to be monitored (For example: A WAN service provider does not allow SNMP access to the device), then a static route mapping can be made through the device to the far end. Refer to Appendix K on how to add a static route to the configuration.

An example of a full Path Map:

pathSolutions | TotalView

Poll frequency: 00:05:00
 Last poll: 5/9/2018 5:29:37 PM
 Network health: DEGRADED (0.8%)

Dashboard | NLT | Network | VoIP | Cloud | Internet | Predictors

Path | Map | Diagram | Gremlins | Devices | Favorites | Issues | Netflow | Top-10 | WAN | Interfaces | SD-WAN | Tools

Mapping from one IP address to another IP address Path information updated as of: 5/9/2018, 2:54:10 PM [Update](#)

Source IP Address: Mapping will display the path that packets currently take. If the network configuration or state was different at a previous point in time, the mapping may not reflect the previous conditions.

Destination IP Address: [Map](#)

Mapping from 10.0.0.64 to 10.30.0.12 Forward Historical Reverse Historical

Source IP: 10.0.0.64

Inbound
Int #7: 7 (To Barbera fe1/1/8)

Speed: 100,000,000 bps
 MTU: 1600
 Mac Addresses: 1
 Duplex: Full
 Error Rate: 0.000% peak 0.000% avg
 Peak Utilization Rate: 0.088% Rx

Burgundy Layer-2 Switch (10.0.0.19)

Outbound
Int #3: 3

Speed: 100,000,000 bps
 MTU: 1500
 Mac Addresses: 1
 Duplex: Full
 Error Rate: 0.000% peak 0.000% avg
 Peak Utilization Rate: 0.116% Tx

Inbound
Int #2: Fa0/0 (FastEthernet0/0)

IP Address: 10.0.0.2
 Speed: 100,000,000 bps
 MTU: 1500
 Duplex: Full
 Error Rate: 4.803% peak 0.170% avg
 Peak Utilization Rate: 2.228% Rx

Santa Clara Router (10.0.0.2)

Outbound
Int #1: Se0/0/0: Serial0/0/0

IP Address: 192.168.10.1
 Speed: 1,536,000 bps
 MTU: 1500
 Duplex: Full
 Error Rate: 6.864% peak 0.164% avg
 Peak Utilization Rate: 5.609% Tx
 Queuing: CBQoS:WAN-EDGE (Serial interface policies)

Queue: VOICE (High priority VoIP RTP)

EBits

Queue: class-default

EBits

Outbound

Percentage

Assumed mapping through unmanaged section of the network

Page 36

Map Tab

On the “Map” tab, TotalView includes the Dynamic Network Map, with a zoom, click and drag user interface. This capability gives you an “eagle’s eye” view of what your network is doing at the current point in time.

The map updates every 5 seconds and audible alerts play when links or devices go down so you can remedy the problem immediately.


The map permits two different element types to be displayed:

1. Link: This is an interface that will change color depending on the utilization of the link, or change to white if no status could be determined, or black if the link shows as down.
2. Device Ping: This is a single point that relates to an IP address that is checked for status. It will show green if responding, or red if not responding.

TotalView also provides Multiple Map Views for Multiple Locations.

To zoom in and out on the map, use the zoom plus **+** and minus **-** buttons at the top left of the screen.

To pan, use your cursor in the center of the screen to move around.

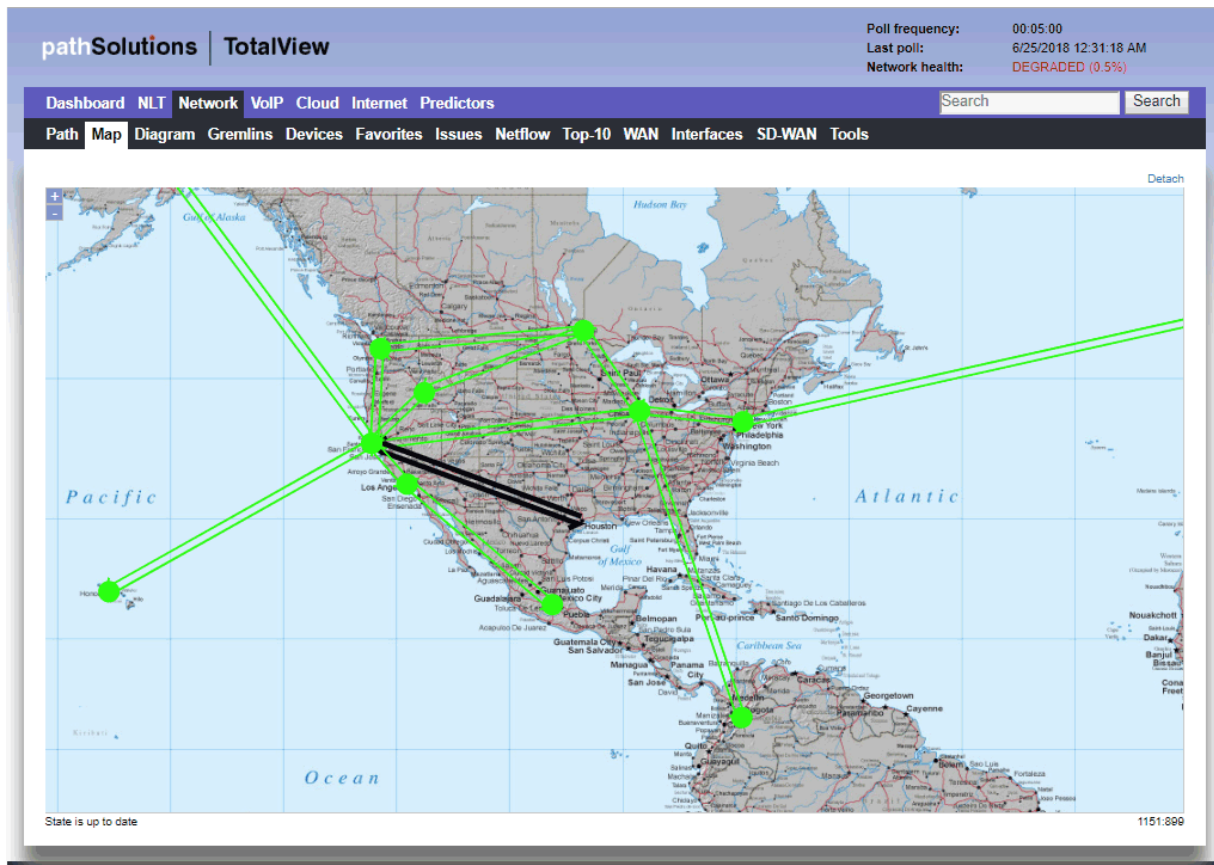

Line Color


Green
Yellow
Red
Black
White

Description

<10% utilized (lightly utilized)
~50% utilized
>90% utilized (heavy utilized)
Interface is down
Communication failure (could not read interface status)

Diagram Tab

This shows the automatic, interactive network diagram. This flexible map gives a pictorial view of your network connections. You can zoom and scroll the diagram, move elements around, and lock them into place.

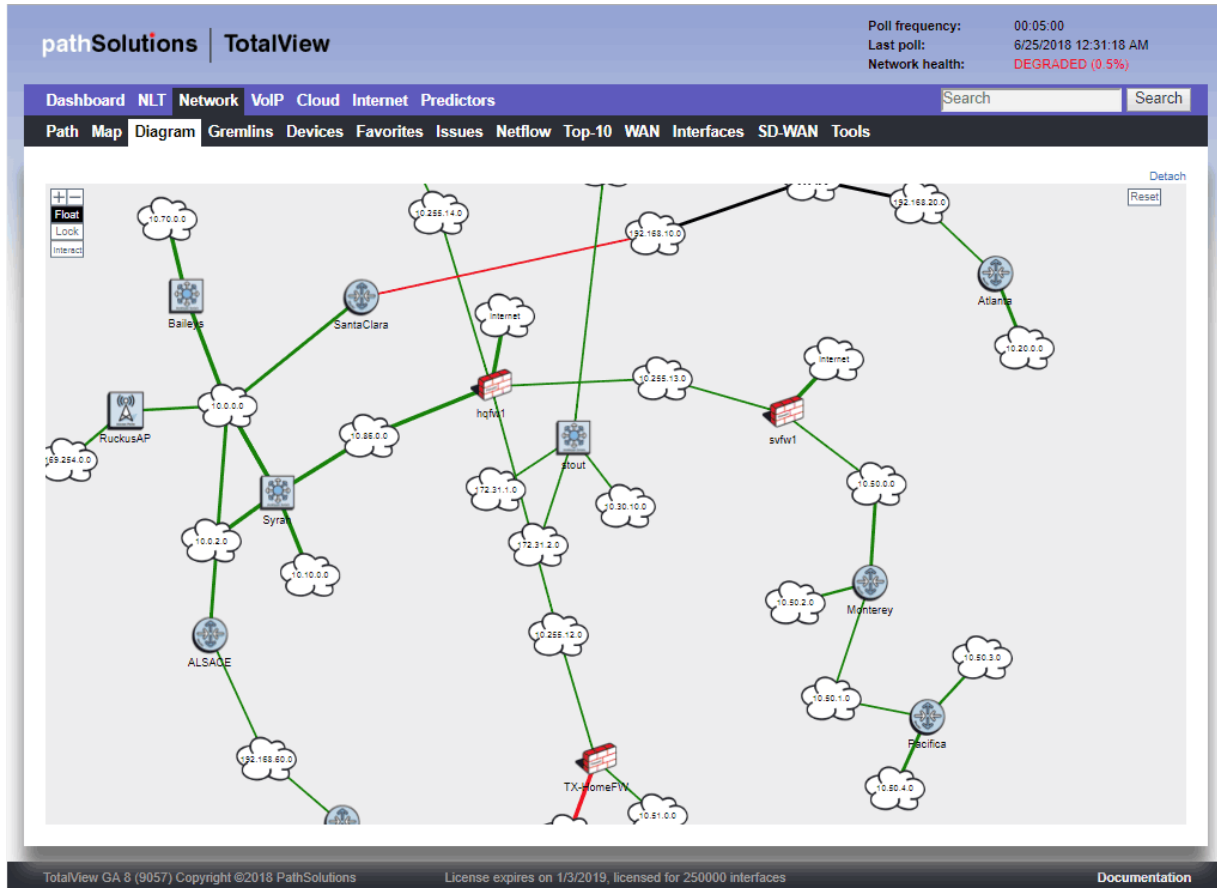

As new devices and subnets are added to your network, the diagram will automatically update with the layer-3 devices and subnets.

Gremlins Tab

The Gremlins tab is a correlation engine that allows you to quickly understand what events happened at a specific timeframe on the network.

The screenshot shows the PathSolutions TotalView interface. At the top right, it displays system information: Poll frequency: 00:05:00, Last poll: 6/26/2018 7:13:57 PM, and Network health: DEGRADED (0.8%). The main navigation bar includes Dashboard, NLT, Network, VoIP, Cloud, Internet, and Predictors. Below this, a secondary bar contains Path, Map, Diagram, Gremlins (selected), Devices, Favorites, Issues, NetFlow, Top-10, WAN, Interfaces, SD-WAN, and Tools. The Gremlins section is titled 'What happened' and shows a dropdown menu set to 'ago on the network' and a 'Group: All' dropdown. An event is listed in a table with the following details:

Event
Int #18 (imq0: imq0 (imq0)) on device hqfw1 (10.86.0.2) had 50.00% Error rate during this period

The left dropdown allows you to choose a specific point in time to analyze.


The right Group dropdown allows you to narrow the scope to look at events that occurred within that group.

It will present events in the following order of priority:

1. Devices that went offline
2. Devices that went online
3. Interfaces that went down
4. Interfaces that went up
5. Devices that had high packet loss
6. Interfaces that had high utilization
7. Interfaces that had packet loss

Devices Tab

The Devices tab view shows you a list of your monitored network devices and information about each.

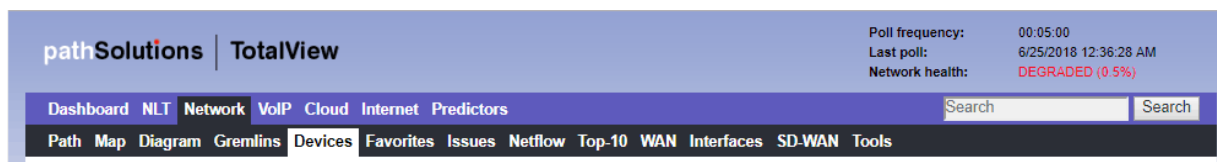

From this tab you can also view more specific device sub-tabs:

General Sub-tab

The "General" sub-tab allows you to manage the device as well as learn about the device capabilities:

Device Name	Device IP Address	SNMP Version	Manage	Int	Oper Down	Admin Down	Location	Contact	
HQ-Firewall (3 devices)									
hqlpa500	10.0.0.7	v2c	Telnet SSH Web HTTPS Syslog	15	10	10	Santa Clara	itops@pathsolutions.com	187d
hqfw1	10.86.0.2	v2c	Telnet SSH Web HTTPS Syslog	23	15	9	Santa Clara HQ	noc@pathsolutions.com	53d
CiscoASA	10.0.0.8	v3	Telnet SSH Web HTTPS Syslog	22	15	0	Santa Clara, CA	Tim Titus x111	17d
HQ (21 devices)									
Chardonnay	10.0.0.20	v2c	Telnet SSH Web HTTPS Syslog	29	25	0	new york	noc@pathsolutions.com	21d
Syrach	10.0.0.1	v2c	Telnet SSH Web HTTPS Syslog	37	9	3	"Santa Clara"	noc@pathsolutions.com	81d
Pinot	10.0.0.21	v2c	Telnet SSH Web HTTPS Syslog	30	21	0	Santa Clara	noc@pathsolutions.com	87d
Merlot	10.0.0.22	v2c	Telnet SSH Web HTTPS Syslog	28	25	0	Santa Clara	noc@pathsolutions.com	230d
Muscat	10.0.0.23	v2c	Telnet SSH Web HTTPS Syslog	29	25	0		noc@pathsolutions.com	76d
Burgundy	10.0.0.19	v2c	Telnet SSH Web HTTPS Syslog	30	9	0	Sunnyvale, CA	noc@pathsolutions.com	187d
Ribolla	10.0.0.26	v2c	Telnet SSH Web HTTPS Syslog	27	25	0	Santa Clara	itops@pathsolutions.com	446d
Grenache	10.0.0.27	v2c	Telnet SSH Web HTTPS Syslog	25	22	0	Sunnyvale, CA	noc@pathsolutions.com	0d
Riesling	10.0.0.29	v2c	Telnet SSH Web HTTPS Syslog	29	28	0	Santa Clara, CA	noc@pathsolutions.com	123d
Baileys	10.0.0.32	v2c	Telnet SSH Web HTTPS Syslog	31	29	2	Santa Clara, CA	noc@pathsolutions.com	125d
BarleyWine	10.0.0.33	v2c	Telnet SSH Web HTTPS Syslog	10	9	0	Unknown	UNKNOWN	30d

The first column includes a green dot, red dot, or a ? status indicator. If a device has all interfaces healthy, the status for the device will be green. If a device has an interface that is degraded (utilization or error rate is higher than the configured threshold), the status for the device will be red. A red ? will be shown if there is communication failure with that device.

The device type icon is displayed to the right of the status indicator. This will automatically be determined based on the features and capabilities of the device.

Note: The Device type can be overridden to have it display a different type of device by using the Config Editor and changing the DeviceType.cfg file.

The Device Name (programmed into the switch as the system name, hostname, or sysName) is displayed in the second column. To change this, you should login to the device and change the device's internal name (hostname) or "sysName". Refer to the device manufacturer's documentation to determine how to change this information.

If you click on the device name, it will link to a summary of the device, listing all of the interfaces that exist on the device, along with detailed information about the device. Refer to the "Interface Summary" section on page 46.

The managed IP address of the device is listed in the third column.

The Manage Device column includes links to Telnet, SSH, Web, and HTTP into the device, as well as the syslog information received from the device.

The # of Int column displays the total number of interfaces on the device.

The Oper down column displays the total number of operationally shut down interfaces on the device. These interfaces are not in-use and will have an inactive link light.

The Admin down column displays the total number of administratively shut down interfaces on the device. These interfaces have been manually disabled by the network administrator and will not function if a node is connected to the interface.

The Location column of information displays the location of the device. This information is configured on the switch as the location or "sysLocation" of the device. Refer to the device manufacturer's documentation to determine how to change this information.

The Contact column of information displays the contact for the device. This information is configured on the device as the contact or "sysContact" of the switch. Refer to the device manufacturer's documentation to determine how to change this information.

Note: If TotalView reads an email address in the sysContact field, it will create a web link to the email address.

Device is the last column. This will show how long the device has been online since it was last rebooted.

Traffic Sub-tab

The "Traffic" sub-tab displays information about the device's packets and broadcasts seen:

Device Name	Device IP Address	Avg Daily Packets		Avg Daily Broadcasts		Avg Daily Broadcast Rate		Last Poll Broadcast Rate	
		Tx	Rx	Tx	Rx	Tx	Rx	Tx	Rx
HQ-Firewall (3 devices)									
hqpa500	10.0.0.7	13,043k	13,041k	0	0	0.000%	0.000%	0.000%	0.000%
hqfw1	10.86.0.2	35,010k	34,810k	0	3k	0.000%	0.011%	0.000%	0.033%
CiscoASA	10.0.0.8	9,744k	9,985k	494k	694k	4.826%	6.501%	1.656%	4.418%
HQ (21 devices)									
Chardonnay	10.0.0.20	66,969k	72,428k	4,225k	10,594k	5.935%	12.761%	42.292%	57.345%
Syrah	10.0.0.1	150,783k	149,883k	5,186k	1,558k	3.325%	1.029%	3.885%	1.853%
Pinot	10.0.0.21	162,817k	159,120k	17,041k	3,731k	9.475%	2.291%	6.446%	1.138%
Merlot	10.0.0.22	16,324k	16,338k	1,252k	941k	7.126%	5.447%	39.316%	39.018%
Muscat	10.0.0.23	1,883k	1,891k	997k	495k	34.611%	20.748%	29.548%	17.304%
Burgundy	10.0.0.19	16,587k	16,614k	7,889k	554k	32.231%	3.228%	30.680%	3.042%
Ribolla	10.0.0.26	391k	595k	9k	350k	2.459%	37.009%	1.125%	26.688%
Grenache	10.0.0.27	550k	435k	0	0	0.000%	0.000%	0.000%	0.000%

This permits you to determine the average daily broadcast rate and compare it to the last poll broadcast rate to help identify devices that are transmitting or receiving a high level of broadcasts.

Note: If a device is transmitting a high percentage of broadcasts, it is more likely that one of its interfaces is receiving a high percentage of broadcasts from one of its ports, and then transmitting those broadcasts to all interfaces on the device. Click on the device and look for interfaces that are receiving a high broadcast rate to determine the device that is broadcasting.

PoE Sub-tab

The “PoE” sub-tab shows information on the status and power consumption of the devices, the percentage of utilization that is running, and the level of alarms that have been set to alert you if power is running low.

The screenshot shows the PoE sub-tab in TotalView. At the top right, it displays: Poll frequency: 00:05:00, Last poll: 6/25/2018 12:36:28 AM, and Network health: DEGRADED (0.5%). The navigation bar includes: Dashboard, NLT, Network, VoIP, Cloud, Internet, Predictors, Path, Map, Diagram, Gremlins, Devices, Favorites, Issues, Netflow, Top-10, WAN, Interfaces, SD-WAN, Tools. The sub-tab is titled "Power Supply (PSU)".

Device Name	Device IP Address	Group	Status	Rating (Watts)	Consumption	% Power Utilization	Alarm Threshold
HQ-Firewall (3 devices)							
hqp500	10.0.0.7	-	-	-	-	-	-
hqfw1	10.86.0.2	-	-	-	-	-	-
CiscoASA	10.0.0.8	-	-	-	-	-	-
HQ (21 devices)							
Chardonnay	10.0.0.20	-	-	-	-	-	-
Syrah	10.0.0.1	1	On	780 W	8 W	1%	-n/a-
Pinot	10.0.0.21	-	-	-	-	-	-
Merlot	10.0.0.22	-	-	-	-	-	-
Muscat	10.0.0.23	-	-	-	-	-	-
Burgundy	10.0.0.19	1	On	406 W	29 W	7%	80%
Ribolla	10.0.0.26	1	On	370 W	0 W	0%	-n/a-
Grenache	10.0.0.27	-	-	-	-	-	-

This allows you to quickly determine if there are any high-power drawing devices that are connected to the switch or if there are any power faults.

PoE allows you to watch the status and monitor the power usage for your PoE switches to make sure that you are not getting close to limitations of the switch. It also monitors the power draw for each port on the switch so you can determine where high-power drawing devices are connected to and quickly determine any power faults.

Note: PoE Historical Utilization can be optionally tracked over time by enabling data retention of PoE stats. This permits organizations to track their power usage and generate reports showing when and where additional power is being drawn from PoE switches. See Appendix B on how to enable reporting and how to extract data from the database.

STP Sub-tab

The “STP” sub-tab shows the device’s Spanning Tree information:

The screenshot shows the STP sub-tab in TotalView. At the top right, it displays: Poll frequency: 00:05:00, Last poll: 6/25/2018 12:36:28 AM, and Network health: DEGRADED (0.5%). The navigation bar includes: Dashboard, NLT, Network, VoIP, Cloud, Internet, Predictors, Path, Map, Diagram, Gremlins, Devices, Favorites, Issues, Netflow, Top-10, WAN, Interfaces, SD-WAN, Tools. The sub-tab is titled "Topology".

Device Name	Device IP Address	Protocol	Version	Priority	Topology		Root Bridge	Root Cost	Root Port	Hold Time
					Last change	Changes				
HQ-Firewall (3 devices)										
hqp500	10.0.0.7	-	-	-	-	-	-	-	-	-
hqfw1	10.86.0.2	-	-	-	-	-	-	-	-	-
CiscoASA	10.0.0.8	-	-	-	-	-	-	-	-	-
HQ (21 devices)										
Chardonnay	10.0.0.20	ieee8021d	-	32768	0 days 05:40:33.10	1791	8000001188c90c48	400023	Int #23	600
Syrah	10.0.0.1	ieee8021d	-	32769	0 days 05:41:42.00	191	8000001188c90c48	200023	Int #23	100
Pinot	10.0.0.21	ieee8021d	-	32768	0 days 05:41:05.10	326	8000001188c90c48	220023	Int #25	600
Merlot	10.0.0.22	ieee8021d	-	32768	76 days 13:40:11.70	26	8000001188c90c48	420023	Int #26	600
Muscat	10.0.0.23	ieee8021d	-	32768	0 days 05:40:33.35	1159	8000001188c90c48	400023	Int #3	600
Burgundy	10.0.0.19	ieee8021d	-	32768	0 days 05:41:07.85	796	8000001188c90c48	200019	Int #20	600
Ribolla	10.0.0.26	ieee8021d	-	32769	0 days 05:42:14.00	0	8000001188c90c48	200061	Int #8	100
Grenache	10.0.0.27	ieee8021d	-	32768	0 days 00:03:25.35	1	8000001188c90c48	200042	Int #22	100

Determine when your last STP root bridge election occurred and which device is acting as the root bridge. Also know which interfaces are active as well as listening so you don't cause a reconfiguration by disconnecting the wrong interface.

Inventory Sub-tab

The "Inventory" sub-tab shows details about a device's internal information. For any make/model of device discovered on your network, the Manufacture Date, Model, Serial Number, Hardware, Firmware and Software OS revisions are reported.

Device Name	Device IP Address	Inventory			Code Revision		
		Manufacturer	Model	Serial Num	Hardware	Firmware	Software
HQ-Firewall (3 devices)							
hqlpa500	10.0.0.7	Palo Alto Networks	PA-500	009401003580	2.1		8.0.6
hqlfw1	10.86.0.2	Ubiquiti Networks					
CiscoASA	10.0.0.8	cisco Systems Inc.	ASA5505	JMX143540LX	V08	1.0(12)13	8.2(1)
HQ (21 devices)							
Chardonnay	10.0.0.20	Hewlett-Packard	J9085A	CN810ZT3QY		R.10.06	R.11.22
Syrah	10.0.0.1	Cisco Systems, Inc	WS-C3650-24PS-E	FDO1845E18S	V01	0.1	Denali 16.3.5b
Pinot	10.0.0.21	Hewlett-Packard	J9085A	CN128ZTOR1		R.10.06	R.11.70
Merlot	10.0.0.22	Hewlett-Packard	J9019A	CN720WX0PB		Q.10.02	Q.11.67
Muscat	10.0.0.23	Hewlett-Packard	J9085A	CN045ZT1PN		R.10.06	R.11.30
Burgundy	10.0.0.19	Hewlett-Packard	J9087A	CN124ZROLD		R.10.06	R.11.121
Ribolla	10.0.0.26	Cisco Systems, Inc	WS-C3560-24PS-S	CAT0947R1GA	V05	12.2(55)SE1	12.2(55)SE1
Grenache	10.0.0.27	Cisco Systems, Inc					

An Inventory Excel spreadsheet can be downloaded by clicking on the "Inventory" link and clicking on the Excel icon. Additional detailed inventory information is available in that spreadsheet that is not available via the web UI.

Description Sub-tab

The "Description" sub-tab shows the internal system description for the device.

Device Name	Device IP Address	Internal Device Description
HQ-Firewall (3 devices)		
hqlpa500	10.0.0.7	Palo Alto Networks PA-500 series firewall
hqlfw1	10.86.0.2	EdgeOS v1.10.1.5067575.180305.1804
CiscoASA	10.0.0.8	Cisco Adaptive Security Appliance Version 8.2(1)
HQ (21 devices)		
Chardonnay	10.0.0.20	ProCurve J9085A Switch 2610-24, revision R.11.22, ROM R.10.06 (/sw/code/build/nemo(ndx))
Syrah	10.0.0.1	Cisco IOS Software [Denali], Catalyst L3 Switch Software (CAT3K_CAA-UNIVERSALK9-M), Version 16.3.5b, RELEASE SOFTWARE (fc1) Technical Support: http://www.cisco.com/techsupport Copyright (c) 1986-2017 by Cisco Systems, Inc. Compiled Thu 02-Nov-17 11:07
Pinot	10.0.0.21	ProCurve J9085A Switch 2610-24, revision R.11.70, ROM R.10.06 (/sw/code/build/nemo(R_ndx))
Merlot	10.0.0.22	ProCurve J9019A Switch 2510-24, revision Q.11.67, ROM Q.10.02 (/sw/code/build/harp)
Muscat	10.0.0.23	ProCurve J9085A Switch 2610-24, revision R.11.30, ROM R.10.06 (/sw/code/build/nemo(ndx))
Burgundy	10.0.0.19	ProCurve J9087A Switch 2610-24-PWR, revision R.11.121, ROM R.10.06 (/sw/code/build/nemo)
Ribolla	10.0.0.26	Cisco IOS Software, C3560 Software (C3560-IPBASEK9-M), Version 12.2(55)SE1, RELEASE SOFTWARE (fc1) Technical Support: http://www.cisco.com/techsupport Copyright (c) 1986-2017 by Cisco Systems, Inc. Compiled Thu 02-Nov-17 11:07


Support Sub-tab

The “Support” sub-tab provides Contract ID, Expiration Date, and Contract Phone number for your devices. You can enter this information using the “Device” tab in the Config Tool for easy access to this information in one location.

Device Name	Device IP Address	Support Contract		
		Expiration Date	Contract ID	Contract Phone
HQ-Firewall (3 devices)				
hqpa500	10.0.0.7	06-17-2019	B-4837DG	1-888-555-2883
hqfw1	10.86.0.2	03-04-2020	22932832	1-888-555-2883
CiscoASA	10.0.0.8	-	-	-
HQ (21 devices)				
Chardonnay	10.0.0.20	11-23-2020	F-483823-01	1-800-555-3412
Syrah	10.0.0.1	08-14-2020	GH-47382933	1-888-555-8900
Pinot	10.0.0.21	09-06-2020	9298382	1-408-555-6651
Merlot	10.0.0.22	04-12-2019	982738212	1-650-555-9810
Muscat	10.0.0.23	05-16-2019	8272832-45	1-415-555-4923
Burgundy	10.0.0.19	05-18-2019	93848323	1-888-555-7680
Ribolla	10.0.0.26	09-12-2018	S48293	1-916-555-6553
Grenache	10.0.0.27	04-11-2020	H82982821	1-719-555-6000

The “Support” sub-tab displays support contract information for each monitored device:

This information can be entered via the Configuration Tool associated with each device:

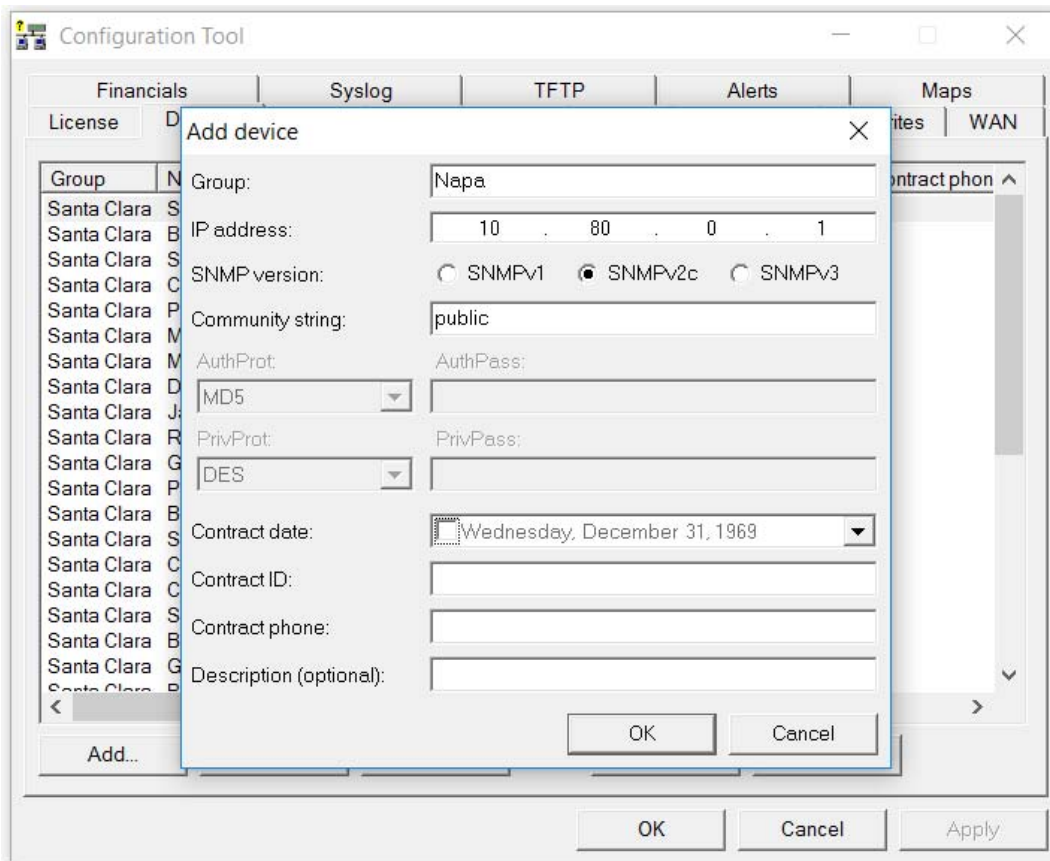

The system will send an email if any of the support contracts are within 30 days of expiration to help make sure support contracts don't lapse.

Financials Sub-Tab

The “Financials” sub-tab provides financial insights into the operational costs of your network in one location. You can add additional information to manage inventory and track and amortize operational costs and compliance requirements. Ensure that you aren’t running equipment older than expected.

Enter and track when a device was Deployed, Procurement Cost, Amortizations Months, Annual Support Cost, and Monthly Operating Cost.

Device Name	Device IP Address	Compliance		Costs			
		MFG Date	Deploy Date	Procurement Cost	Amort Months	Annual Support Cost	Monthly Operating Cost
HQ-Firewall (3 devices)							
hqp500	10.0.0.7	-	1/5/2017	\$4,821	60	\$389	\$112.77
hqfw1	10.86.0.2	-	5/18/2016	\$3,982	48	\$459	\$121.21
CiscoASA	10.0.0.8	8/30/2010	-		48		
HQ (21 devices)							
Chardonnay	10.0.0.20	3/3/2008	4/19/2015	\$2,237	48	\$682	\$103.44
Syrah	10.0.0.1	11/3/2014	6/25/2015	\$3,781	60	\$482	\$103.18
Pinot	10.0.0.21	7/11/2011	6/23/2015	\$3,701	48	\$730	\$137.94
Merlot	10.0.0.22	5/14/2007	2/21/2014	\$2,571	60	\$302	\$68.02
Muscat	10.0.0.23	11/8/2010	5/17/2014	\$2,091	60	\$271	\$57.43
Burgundy	10.0.0.19	6/13/2011	10/1/2016	\$1,582	48	\$482	\$73.13
Ribolla	10.0.0.26	11/21/2005	5/17/2016	\$2,821	48	\$356	\$88.44
Grenache	10.0.0.27	-	9/7/2015	\$728	48	\$321	\$41.92

This information can be changed via the Config Tool on the “Financials” sub-tab.

Add Financials record ✕

IP address:

Install date: 10/17/2017

Procurement cost:

Amortization Months:

Annual support cost:

Interface Summary

You can get Device and Interfaces information on any of the devices listed on the Network Devices Tab and clicking on any device name, and it will bring up an Interfaces Summary for that device. (Note: These Interface Summaries are also reachable by selecting Device Names in other tabs). The Device's Interfaces table will list the specific switch information that you selected and a table showing all of the interfaces on the switch.

Interface Summary Fields: General Tab

First click on a Device Name to get the Interfaces table to appear for the device. The first and default tab is the "General" tab. The "General" tab shows the following interface summary table:

The screenshot shows the PathSolutions TotalView interface. At the top, there's a navigation bar with 'pathSolutions | TotalView' and a search box. Below that, there are tabs for 'Dashboard', 'NLT', 'Network', 'VoIP', 'Cloud', 'Internet', and 'Predictors'. The 'Network' tab is active, and within it, the 'Devices' sub-tab is selected. The device 'Chardonnay' is chosen, and the 'General' tab of its 'Interfaces' section is displayed. The interface table shows columns for Interface, IP Address, Description, Peak Daily Error Rate, Peak Daily Utilization (Tx/Rx), Interface Speed, Duplex, Admin, and Oper. The status of each interface is indicated by a colored dot (green for up, red for down, yellow for suppressed).

Interface	IP Address	Description	Peak Daily Error Rate	Peak Daily Utilization Tx	Peak Daily Utilization Rx	Interface Speed	Duplex	Admin	Oper
INT#1		1: 1	0.000%	0.000%	0.000%	-	-	up	down
INT#2		2: 2	0.000%	0.000%	0.000%	-	-	up	down
INT#3		3: 3	0.000%	0.004%	0.000%	100,000,000	Full	up	up
INT#4		4: 4	0.000%	0.000%	0.000%	-	-	up	down
INT#5		5: 5	0.000%	0.000%	0.000%	-	-	up	down
INT#6		6: 6	0.000%	0.000%	0.004%	100,000,000	Full	up	up
INT#7		7: 7	0.000%	0.000%	0.000%	-	-	up	down
INT#8		8: 8	0.000%	0.000%	0.000%	-	-	up	down
INT#9		9: 9	0.000%	0.000%	0.000%	-	-	up	down
INT#10		10: 10	0.000%	0.000%	0.000%	-	-	up	down

The first column includes a green or red status indicator. If a device has an interface that is healthy the status for the device will be green. If an interface is degraded (utilization or error rate is higher than the configured threshold), the status for the interface will be red, and the Error Rate or Utilization Rate will be marked in red. An interface will be yellow if an interface is manually marked as suppressed by the user. Suppressing an interface can be done by clicking on the status (colored dot) and selecting to suppress that particular interface.

Note: If the status indicator shows up blank, then the interface is operationally shut down, and is not relevant.

The Interface Number column is the interface number on the device. Each device manufacturer will create a unique number for each interface. You can use this interface number to correlate physical interfaces on the switch. Clicking on the interface number will display the "Interface Details" page. Refer to the "Interface Details" section for more information.

The third column is the IP address associated with the interface (if any). Routers and servers will generally have an IP address assigned to each interface, whereas switches may only have an IP address associated with the management interface. If multiple IP addresses are associated with an interface, it will appear on the tooltip if you hover over the IP address field.

The Description column is the interface description. This information is provided by the device as a way of describing the interface. It may contain information on the type of interface, or the interface identifier used on the device. If an interface alias is configured on the device, this custom description will show up.

The Peak Daily Error Rate column is the error rate of the interface. The error rate is calculated as a combination of all inbound and outbound errors on the interface, compared to the number of packets that have passed through the interface.

If the error rate is above the error threshold, it will be displayed in red.

Note: There are some devices that do not report error information correctly, and can lead you to believe that there are faults on interfaces that actually are functioning correctly. If you perceive errors on an interface that is abnormal, contact the device manufacturer to attempt to determine more about its SNMP reporting capabilities.

The Peak Daily Tx column is daily peak utilization transmitted data. This statistic reports the maximum transmitted utilization on the interface (as a percentage of bandwidth) that was seen over the past 24 hour period.

If this statistic is over the utilization threshold, it will be displayed in red.

Note: If PathSolutions TotalView is unable to read the correct interface speed from the device, this number may not be accurate.

The Peak Daily Rx column is daily peak utilization received data. This statistic reports the maximum received utilization on an interface (as a percentage of bandwidth) that was seen over the past 24 hour period.

If this statistic is over the utilization threshold, it will be displayed in red.

Note: If PathSolutions TotalView is unable to read the correct interface speed from the device, this number may not be accurate.

The Interface Speed column is interface speed, rated in bits per second. If the interface is operationally shut down, or the device does not report a valid speed, then the speed is listed as "Unknown".

The Duplex column shows the duplex status of the interface. Duplex information cannot easily be determined from different switch manufacturers, so this field is calculated based on the presence or absence of collisions. If there are any collisions on the interface, then the interface must be half-duplex. If there are no collisions on the interface, then the interface may be full-duplex, or it may be a half-duplex interface that has not yet received any collisions.

The Status column shows the operational and administrative status of the interface. If the network administrator has configured an interface to be shut down it will be listed as "down" in this column.

Interface Summary Fields: Traffic

First click on a Device Name to get the Interfaces table to appear for the device. Then select the “Traffic” tab in the Interfaces table that will appear under the Device Name.

The screenshot shows the TotalView interface for a device named 'Chardonnay'. The 'Interfaces' table is displayed with the 'Traffic' tab selected. The table has columns for Interface, IP Address, Description, Avg Packet Size, Historical Broadcast Percent (Tx, Rx), Last Poll Broadcast Percent (Tx, Rx), and Last Poll Utilization Percent (Tx, Rx).

Interface	IP Address	Description	Avg Packet Size	Historical Broadcast Percent		Last Poll Broadcast Percent		Last Poll Utilization Percent	
				Tx	Rx	Tx	Rx	Tx	Rx
INT#1	1: 1		-	21.740%	0.578%	0.000%	0.000%	0.000%	0.000%
INT#2	2: 2		-	0.000%	0.000%	0.000%	0.000%	0.000%	0.000%
INT#3	3: 3		89 bytes	98.590%	44.067%	0.000%	0.000%	0.003%	0.000%
INT#4	4: 4		-	0.000%	0.000%	0.000%	0.000%	0.000%	0.000%
INT#5	5: 5		-	0.000%	0.000%	0.000%	0.000%	0.000%	0.000%

The Interface Number, IP Address, and Description columns will remain unchanged from the “General” tab.

The Average Packet Size column will show the average packet size tracked per interface. Knowing if an interface is typically used for large or small packets allows you to configure queuing and enable proper policies (jumbo frames) to further improve the performance of a link.

The Historical Broadcast Percent columns show the historical (all time) broadcast percentages. This field will inform you of the activity on the link regarding its general broadcast percentage rate to be used as a comparison against the Last Poll Broadcast Percentage.

The Last Poll Broadcast Percent columns show the broadcast percentage of the last polling period. This information can be compared with the Historical Broadcast percentage to determine if an interface is transmitting or receiving a higher broadcast rate during the last poll than its overall historical average.

The Last Poll Utilization Percent columns show the Last Poll utilization percentage. This is useful for determining which interfaces were the most heavily utilized on the network during the last polling period.

Interface Summary Fields: PoE Tab

First click on a Device Name to get the Interfaces table to appear for the device. Then select the “PoE” tab in the Interfaces table that will appear under the Device Name.

The “PoE” tab includes the following fields.

The screenshot shows the PathSolutions TotalView interface. At the top, there's a navigation bar with 'path Solutions | TotalView' and a search bar. Below that, a menu bar contains 'Dashboard NLT Network VoIP Cloud Internet Predictors'. A secondary menu bar includes 'Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools'. The 'Devices' tab is active, showing a table with columns: Device Name, Device IP Address, SNMP Version, Manage, Oper Down, Admin Down, Location, Contact, and Uptime. The device 'Syrah' is selected, with IP 10.0.0.1 and contact 'noc@pathsolutions.com'. Below this, the 'Interfaces' section is open, showing a table with columns: Interface, IP Address, Description, PoE, PoE PSU, State, Max Draw, PoE Class, and Priority. The table lists interfaces INT#1 through INT#11, with INT#10 showing 'Delivering Power' and 12.94 W Max Draw.

The Interface Number, IP Address, and Description columns will remain unchanged from the “General” tab.

The PoE column will show you if power is turned on and available for that interface.

The PoE PSU column shows the specific Power Supply Unit (PSU) that powers the interface. This number will either be a 1 or a 2. If the number in the PSU column shows a 1 it is PoE device. And if the PSU column shows a 2 it is a PoE+ device.

The State column will show you if power is being delivered to that interface.

The Max Draw column will show you the maximum wattage that can be drawn by that interface. Hovering over the Max Draw number will show a minimum to maximum range of power that the interface can draw.

The ninth column, the PoE Class, will be a number from 0 to 4 depending on the Class of PoE.

Class	Plain Language Description	Power Range (Watts)
0	Unclassified	0.44-12.94
1	Very Low Power	0.44-3.84
2	Low Power	3.84-6.49
3	Mid Power	6.49-12.95
4	PoE+ / Type II Devices	>12.95

And the tenth column shows the power priority configured on ports enabled for PoE which can be Low, High, or Critical. The switch invokes configured PoE priorities only when it cannot deliver power to all active PoE ports.

Interface Summary Fields: STP Tab

First click on a Device Name to get the Interfaces table to appear for the device. Then, select the “STP” tab in the Interfaces table.

“STP” tab includes the following fields.

The screenshot shows the PathSolutions TotalView interface. At the top, there's a navigation bar with tabs for Dashboard, NLT, Network, VoIP, Cloud, Internet, and Predictors. Below that, there's a search bar and a secondary navigation bar with tabs for Path, Map, Diagram, Gremlins, Devices, Favorites, Issues, Netflow, Top-10, WAN, Interfaces, SD-WAN, and Tools. The main content area is divided into several sections. The first section is a summary table for the device 'Syrah'. The second section is the 'Interfaces' table, which is currently showing the 'STP' tab. The 'STP' tab table has columns for Interface, IP Address, Description, Priority, State, Enable, Path Cost, Root, Cost, Bridge, Port, and Forward Transactions.

Device Name	Device IP Address	SNMP Version	Manage	Int	Oper Down	Admin Down	Location	Contact	Uptime
Syrah	10.0.0.1	v2c	Telnet SSH Web HTTPS Syslog	37	9	3	"Santa Clara"	noc@pathsolutions.com	81d 07h 42m

Interface	IP Address	Description	Priority	State	Enable	Path Cost	Root	Cost	Bridge	Port	Forward Transactions
INT#1		Gi0/0: GigabitEthernet0/0	-	-	-	-	-	-	-	-	-
INT#3		Gi1/0/1: GigabitEthernet1/0/1 (PA and Ubiquiti Firewall Uplink)	0	unknown		0		0			0
INT#4		Gi1/0/2: GigabitEthernet1/0/2	-	-	-	-	-	-	-	-	-
INT#5		Gi1/0/3: GigabitEthernet1/0/3 (Fred Server)	0	unknown		0		0			0
INT#6		Gi1/0/4: GigabitEthernet1/0/4	128	forwarding	●	19	8000001188c90c48	200023	Syrah	8004	1
INT#7		Gi1/0/5: GigabitEthernet1/0/5	128	forwarding	●	4	8000001188c90c48	200023	Syrah	8005	1
INT#8		Gi1/0/6: GigabitEthernet1/0/6	128	forwarding	●	4	8000001188c90c48	200023	Syrah	8006	1
INT#9		Gi1/0/7: GigabitEthernet1/0/7	128	forwarding	●	4	8000001188c90c48	200023	Syrah	8007	1
INT#10		Gi1/0/8: GigabitEthernet1/0/8	128	forwarding	●	19	8000001188c90c48	200023	Syrah	8008	1

The Interface Number, IP Address, and Description columns will remain unchanged from the “STP” tab.

The State column will show which of port state the interface is: Blocking, Listening, Learning, Forwarding, or Disabled.

The Enable column shows if the interface is enabled for STP.

The Path Cost column will show the Path Cost of the interface.

The Root column will show the Designated Root of the interface.

The Cost Column will show the Designated STP Cost of the interface.

The Bridge Column shows the Designated Bridge for the interface.

The Port Column shows the Designated Port for the interface.

The Forward Transactions Column shows the Interface Forward Transactions for the interface.

Interface Summary Fields: Details Tab

First, click on a Device Name to get the Interfaces table to appear for the device. then, select the “Details” tab in the Interfaces table.

The “Details” tab includes the following fields.

The screenshot shows the PathSolutions TotalView interface. At the top, there is a navigation menu with options like Dashboard, NLT, Network, VoIP, Cloud, Internet, Predictors, Path, Map, Diagram, Gremlins, Devices, Favorites, Issues, Netflow, Top-10, WAN, Interfaces, SD-WAN, and Tools. The 'Devices' tab is selected, and the 'Syrah' device is chosen. Below the navigation, there are several tabs: General, Traffic, PoE, STP, Inventory, Description, Support, and Financials. The 'General' tab is active, showing a table with columns: Device Name, Device IP Address, SNMP Version, Manage, Int, Oper Down, Admin Down, Location, Contact, and Uptime. The device 'Syrah' has an IP of 10.0.0.1, SNMP version v2c, and is located in Santa Clara. Below this, the 'Interfaces' section is visible, with tabs for General, Traffic, PoE, STP, Details, CDP/LLDP, and Connected. The 'Details' tab is selected, showing a table with columns: Interface, IP Address, Description, X, Queue Type, MAC Address, MTU, Type, and Last Changed. The table lists six interfaces (INT#1 to INT#6) with their respective descriptions, MAC addresses, and last changed times.

Device Name	Device IP Address	SNMP Version	Manage	Int	Oper Down	Admin Down	Location	Contact	Uptime
Syrah	10.0.0.1	v2c	Telnet SSH Web HTTPS Syslog	37	9	3	"Santa Clara"	noc@pathsolutions.com	81d 07h 42m

Interface	IP Address	Description	X	Queue Type	MAC Address	MTU	Type	Last Changed
INT#1		Gi0/0: GigabitEthernet0/0	●		a0ecf9d05100	1500	ethernetCsmacd	81 days 07:41:29.59
INT#3		Gi1/0/1: GigabitEthernet1/0/1 (PA and Ubiquiti Firewall Uplink)	●		a0ecf9d05101	1500	ethernetCsmacd	53 days 05:57:08.22
INT#4		Gi1/0/2: GigabitEthernet1/0/2	●		a0ecf9d05102	1500	ethernetCsmacd	58 days 14:10:15.74
INT#5		Gi1/0/3: GigabitEthernet1/0/3 (Fred Server)	●		a0ecf9d05103	1500	ethernetCsmacd	16 days 07:05:44.65
INT#6		Gi1/0/4: GigabitEthernet1/0/4	●		a0ecf9d05104	1500	ethernetCsmacd	81 days 07:40:47.55

The Interface Number, IP Address, and Description columns will remain unchanged from the “General” tab.

The X column shows an indicator if this interface has a physical connector associated with the interface.

Note: If the device does not support RFC 2863 and the ifConnector Present OID, then this column will be empty.

The MAC Address column shows the MAC address that is associated with this interface.

Note: The MAC address displayed here is the physical interface’s own MAC address, not the MAC address of any devices connected to this interface.

The MTU column displays the MTU (Maximum Transmission Unit) of the interface. This is the largest frame that can be transmitted or received on this interface. Typically, this will show 1500 bytes as the maximum for normal frames, but may be above 9,000 bytes if the interface is configured for supporting Jumbo Frames.

The Type column presents the type of interface.

The Last Changed column shows the time the interface last changed status from up to down, or from down to up.

Interface Summary Fields: CDP/LLDP Tab

First click on a Device Name to get the Interfaces table to appear for the device. Then, select the “CDP/LLDP” tab in the Interfaces table.

The screenshot shows the PathSolutions TotalView interface. At the top, there's a navigation bar with 'pathSolutions | TotalView' and a search box. Below that, there are tabs for 'Dashboard', 'NLT', 'Network', 'VoIP', 'Cloud', 'Internet', and 'Predictors'. The 'Network' tab is active, and within it, the 'Devices' sub-tab is selected. A table lists device information for 'Syrah'.

Device Name	Device IP Address	SNMP Version	Manage	Int	Oper Down	Admin Down	Location	Contact	Uptime
Syrah	10.0.0.1	v2c	Telnet SSH Web HTTPS Syslog	37	9	3	"Santa Clara"	noc@pathsolutions.com	81d 07h 42m

Below the device table, the 'Interfaces' section is visible. It has several tabs: 'General', 'Traffic', 'PoE', 'STP', 'Details', 'CDP/LLDP', and 'Connected'. The 'CDP/LLDP' tab is selected, showing a table of interfaces and their connections to remote devices.

Interface	IP Address	Description	Remote Device				
			Method	Name	Platform	IP Address	Interface
INT#1		Gi0/0: GigabitEthernet0/0					
INT#3		Gi1/0/1: GigabitEthernet1/0/1 (PA and Ubiquiti Firewall Uplink)					
INT#4		Gi1/0/2: GigabitEthernet1/0/2					
INT#5		Gi1/0/3: GigabitEthernet1/0/3 (Fred Server)					
INT#6		Gi1/0/4: GigabitEthernet1/0/4	LLDP	Pinot	9c8e9990a140	10.0.0.21	25

Each interface is queried for CDP and LLDP information and displays exactly what device and OS version is connected to that switch/router interface. To view CDP/LLDP information on an interface, click on a switch. You will then see all of the interfaces. Click on the sub-tab named “CDP/LLDP”.

If you see some information displayed, it means that the connected device is providing CDP/LLDP information and should display the remote device’s interface that connects to the local switch interface, the remote device’s IP address, platform, name, and method (CDP or LLDP).

Note: *Cisco CDP only shows other Cisco CDP Devices
 *LLDP Devices (Including configured Cisco Device) may show other LLDP devices
 *Some Devices (Enterasys/Extreme, HP) show both CDP and LLDP

Interface Summary Fields: Connected Tab

First click on a Device Name to get the Interfaces table to appear for the device. Then, select the “Connected” tab in the Interfaces table.

The “Connected” tab includes the following fields.

Note: The results for the “Connected” tab will show up differently depending if the device is a switch or not.

Ethernet Switch Results

The screenshot shows the PathSolutions TotalView interface. At the top, there's a navigation bar with 'path Solutions | TotalView' and a search box. Below that, a menu bar includes 'Dashboard NLT Network VoIP Cloud Internet Predictors' and 'Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools'. The 'Devices' tab is active, showing a table with columns: Device Name, Device IP Address, SNMP Version, Manage, Int, Oper Down, Admin Down, Location, Contact, and Uptime. The device 'Syrah' is listed with IP 10.0.0.1, SNMP v2c, and location 'Santa Clara'. Below this, the 'Interfaces' section is open, showing a table with columns: Interface, IP Address, Description, and a 'Connected' tab. The 'Connected' tab shows a table with columns: Interface, IP Address, Description, and 'Devices connected to this switch port'. The 'Connected' tab also has an 'Update' button.

Device Name	Device IP Address	SNMP Version	Manage	Int	Oper Down	Admin Down	Location	Contact	Uptime
Syrah	10.0.0.1	v2c	Telnet SSH Web HTTPS Syslog	37	9	3	"Santa Clara"	noc@pathsolutions.com	81d 07h 42m

Interface	IP Address	Description	Devices connected to this switch port
INT#1		Gi0/0: GigabitEthernet0/0	
INT#3		Gi1/0/1: GigabitEthernet1/0/1 (PA and Ubiquiti Firewall Uplink)	HQ-Transit: 24-A4-3C-3D-B3-AE → 10.86.0.2
INT#4		Gi1/0/2: GigabitEthernet1/0/2	
INT#5		Gi1/0/3: GigabitEthernet1/0/3 (Fred Server)	HQ-Voice: A4-BA-DB-E0-8A-49 → 10.10.0.10
INT#6		Gi1/0/4: GigabitEthernet1/0/4	default: 00-10-49-00-6F-60 → 10.0.0.71

The Interface Number, IP Address, and Description columns will remain unchanged from the “General” tab.


The last column will show the VLAN associated with the device connected, followed by the MAC address and IP address (if found in router/server ARP caches). MAC address manufacturers are identified by hovering over the MAC address.

Reverse-DNS lookups for switch ports can be identified by clicking on the IP address. The DNS name will then be shown.


Note: If the results are blank, or the information is not as expected, click on the “Update” button to collect the current bridge table, MAC addresses, and ARP cache information from network equipment.

Device Overall Statistics

Below the Interface Summary Fields Table (shown on the previous pages) is a view of the overall statistics for the device:

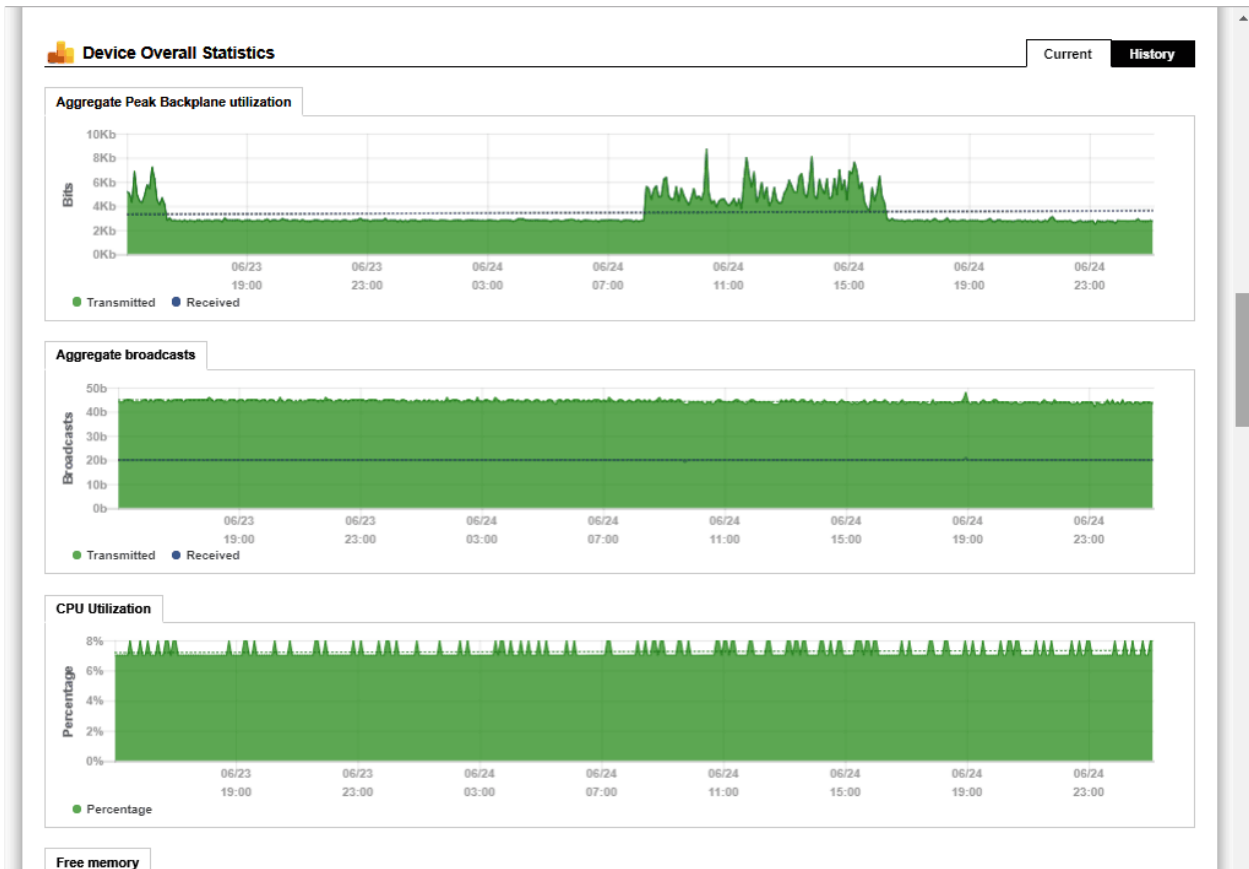


You can view the daily or historical information for the aggregate utilization for the device. Drag the Yellow bubble to move or decrease or increase the historical data you want to see.

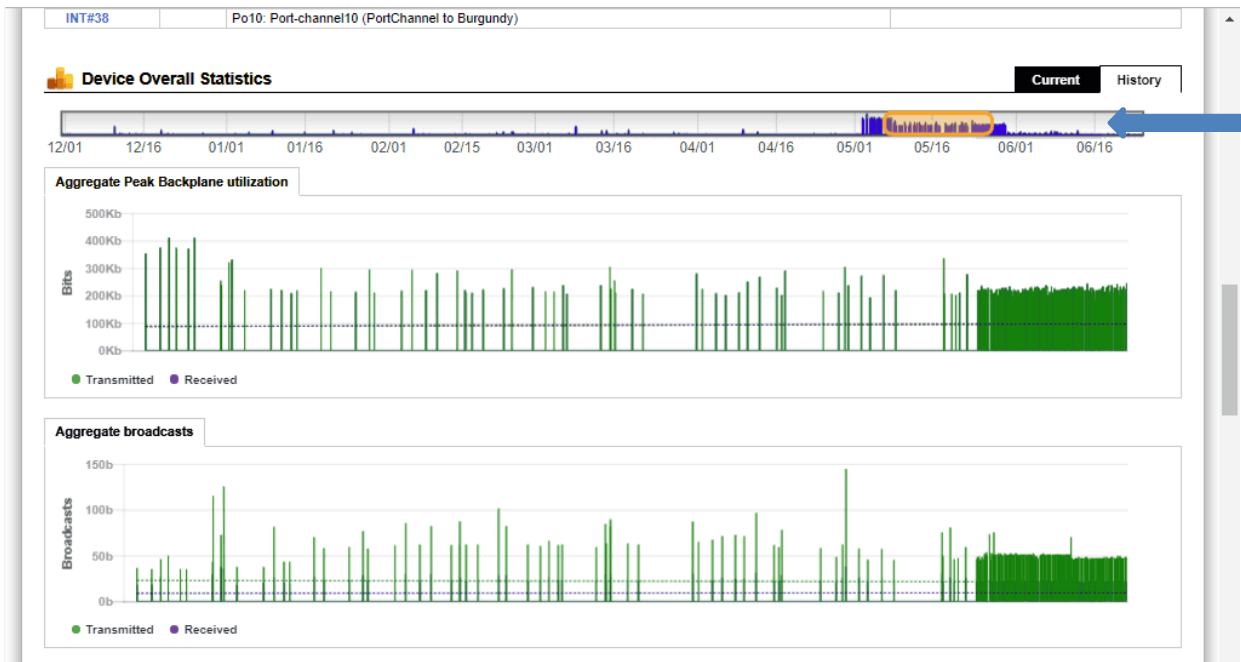

This is valuable for determining when the device is passing more or less traffic. This equates to a graph showing how much work was performed by the device over time, and is useful for determining when to schedule downtime for the device.

If the device is a Cisco router or switch, the CPU utilization and Free RAM is also displayed.

Device MOS, Latency, Jitter, and Loss graphs are displayed below the utilization and CPU graphs:

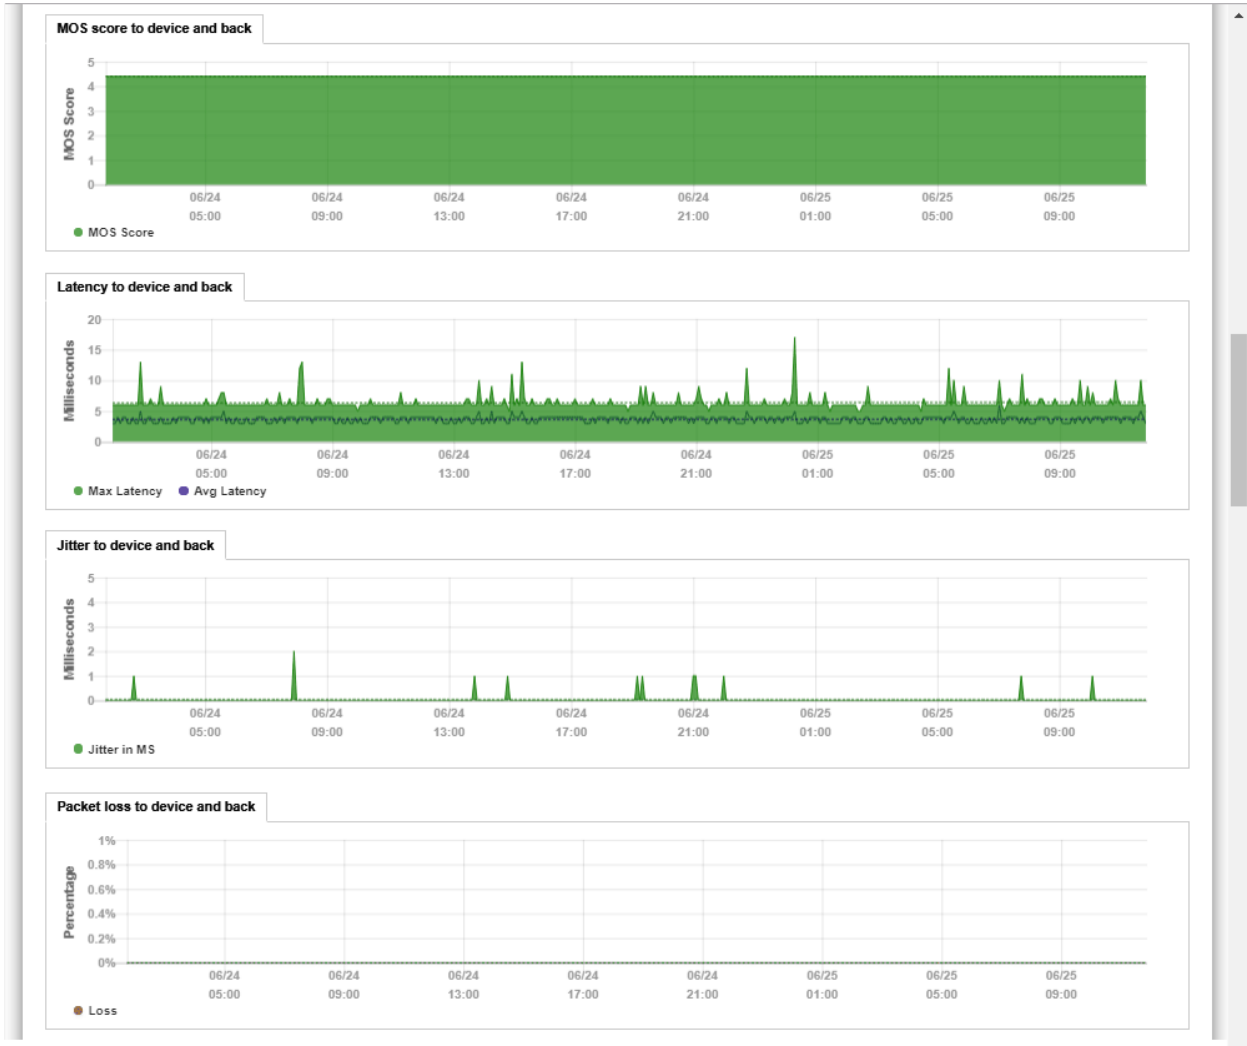

The device's routing table is displayed below the graphs:

Routing Table Entries (IpForward)

Interface	Route	Mask	Next Hop	Policy	Metric1	Status	Protocol
Int #101	0.0.0.0	0.0.0.0	10.0.0.1	0	0	1	other
Int #101	10.0.0.0	255.255.255.0	10.0.0.21	0	0	1	local
Int #0	127.0.0.0	255.0.0.0	0.0.0.0	0	0	1	other
Int #4196	127.0.0.1	255.255.255.255	0.0.0.0	0	0	1	local
Int #101	192.168.210.10	255.255.255.255	10.0.0.8	0	0	1	icmp

If the device is a Cisco device, additional chassis information will be displayed below the routing table:


Cisco Chassis Information	
Chassis Type	unknown
Chassis Version	D0
Chassis ID (Serial Number)	FDO1845E18S
BootROM Version	IOS-XE ROMMON
RAM	885,832,256 bytes
Non Volatile RAM Size	2,097,152 bytes
Non Volatile RAM Used	24,371 bytes
Config Register	258
Next Boot Config Register	258
Chassis Slots	0 slots
Community String Indexing	TRUE
VLANs detected: 9	1, 100, 110, 186, 1001, (1002-1005)

Device overall utilization traffic information is displayed next:

	Packets		Broadcasts		% Broadcasts	
	Tx	Rx	Tx	Rx	Tx	Rx
Historical	14,124,795,000	13,803,111,000	1,479,710,000	324,133,000	9.483%	2.294%
Last Poll	124,223	124,275	8,916	1,490	6.697%	1.185%

Device Notes

Notes can be added to a device so you can track when you performed work on a device:

 Add a Note
✕

Enter a note

256 characters left

Clear errors on all interfaces on this device

Note: If you have authentication turned on, then the Username field will use the logged in user who entered the note.

Note: The notes are stored in comma separated values (CSV) format in the following directory:

C:\Program Files (x86)\PathSolutions\TotalView\Notes

You can edit the files with any text editor like Notepad or use Excel to open the file in CSV format.

The filename for device notes is the IP address of the device. For example, the notes for device 38.102.148.163 would be stored in filename 38.102.148.163.csv.

Interface Details

If you click on an interface number, you will see details about that specific interface:

The errors graph in addition to the utilization graph will be displayed to correlate periods of high packet loss with high utilization.

From this page, you can view all information about an interface's performance.

pathSolutions | TotalView

Poll frequency: 00:05:00
 Last poll: 6/25/2018 1:31:32 AM
 Network health: DEGRADED (0.5%)

Dashboard MLT Network VoIP Cloud Internet Predictors

Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools

Device Name	Device IP Address	SNMP Version	Manage	Int	Oper Down	Admin Down	Location	Contact	Uptime
SantaClara	10.0.0.2	v2c	Teinet SSH Web HTTPS Syslog	3	1	1	"Santa Clara"	noc@pathsolutions.com	109d 08h 11m

Interface:INT#2

Interface	IP Address	Description	Peak Daily Error Rate	Peak Daily Utilization	Interface Speed	Duplex	Status
INT#2	10.0.0.2	Fa0/0: FastEthernet0/0	0.328%	1.538%	100,000,000	Half	up up

Interface Utilization

View Packets & Broadcasts	Tx	Rx
Min	9	45
Avg	18	148
Max	72	1,538
95th	47	736
95th %	0.048%	0.002%

Errors

View Error Counters
Errors

Outbound QueueVision

First In First Out (FIFO)

Network Prescription

- Inbound Unknown Protocols exist on this interface**
 This interface received a valid frame with a protocol that was unrecognized. (Example: If AppleTalk, IPX, or IPv6 is configured on two devices, these two devices will send broadcasts to each other. All other devices on the network will also receive the broadcast frames. These devices will not know what to do with the packets and will discard them.) If you encounter a lot of Inbound Unknown Protocols on an interface, you should consider setting up VLANs and separating devices that don't need to communicate via other protocols. Broadcasts can steal CPU attention on a machine (each broadcast generates a system interrupt and requires the CPU to evaluate the frame). If your network is saturated with many protocols, up to 5% of your computer's CPU cycles can be dedicated to processing and discarding these broadcast packets.
- Inbound Errors exist on this interface**
 Inbound errors are packets that are mal-formed, but are enclosed in a valid frame. This can be caused by a bad NIC driver or protocol driver on the sending device. To track down this error, you will need to connect a packet analyzer in front of this interface to capture the actual mal-formed packet to determine which device is at fault.
- Inbound Discards exist on this interface**
 Inbound packets had to be discarded because of a lack of available packet receive buffers. This can indicate that the device's internal CPU may be unable to process all of the inbound data that it is receiving.
- Collisions exist on this interface**
 This can be eliminated by configuring the interface and device to work in full-duplex mode. This may not be possible if more than one device is connected to this interface. If this interface is plugged into a single device, then full-duplex may be enabled (providing the network card can recognize full duplex). If this interface has a hub plugged in, then full-duplex operation cannot be enabled.
- Interface configured for half-duplex operation**
 This interface should be configured for full-duplex operation to prevent collisions from occurring and error rates rising.

Notes

[+ Add a Note](#)


Status	Name	Note

TotalView GA 3 (9057) Copyright ©2018 PathSolutions License expires on 1/3/2019, licensed for 250000 interfaces [Documentation](#)

Utilization Graphs

The utilization graphs provide both current (daily) as well as historical utilization of an interface. You may click on and drag the yellow bars on the graph to change the historical timeframe you are viewing.

You can also view the information in bits per second, percent utilization, or peak percent utilization. If there is a dotted line overlay on a graph, it shows a trend developing over time (increasing or decreasing).

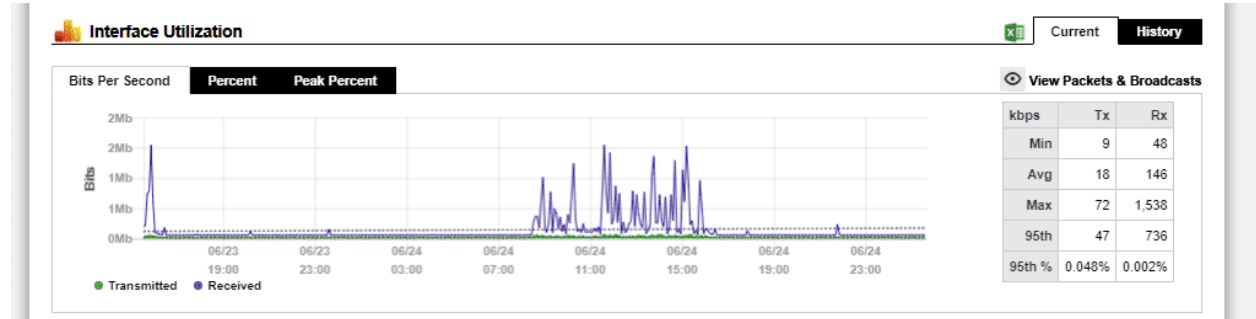

In the History view, the left and right edges of the yellow bubble can be stretched or shrunk to display different date ranges. You can also move the bubble right and left, to see different time ranges.




Exporting Utilization Graph Data for an Interface

The "Download Excel" button allows you to download all of the graph data into an .xls file for charting and graphing with a spreadsheet.


QueueVision®

If the interface is on a Cisco router configured for class-based QoS (CBQoS) with Modular QoS CLI, then the queues will show below the packet loss graph along with their queue match criteria.

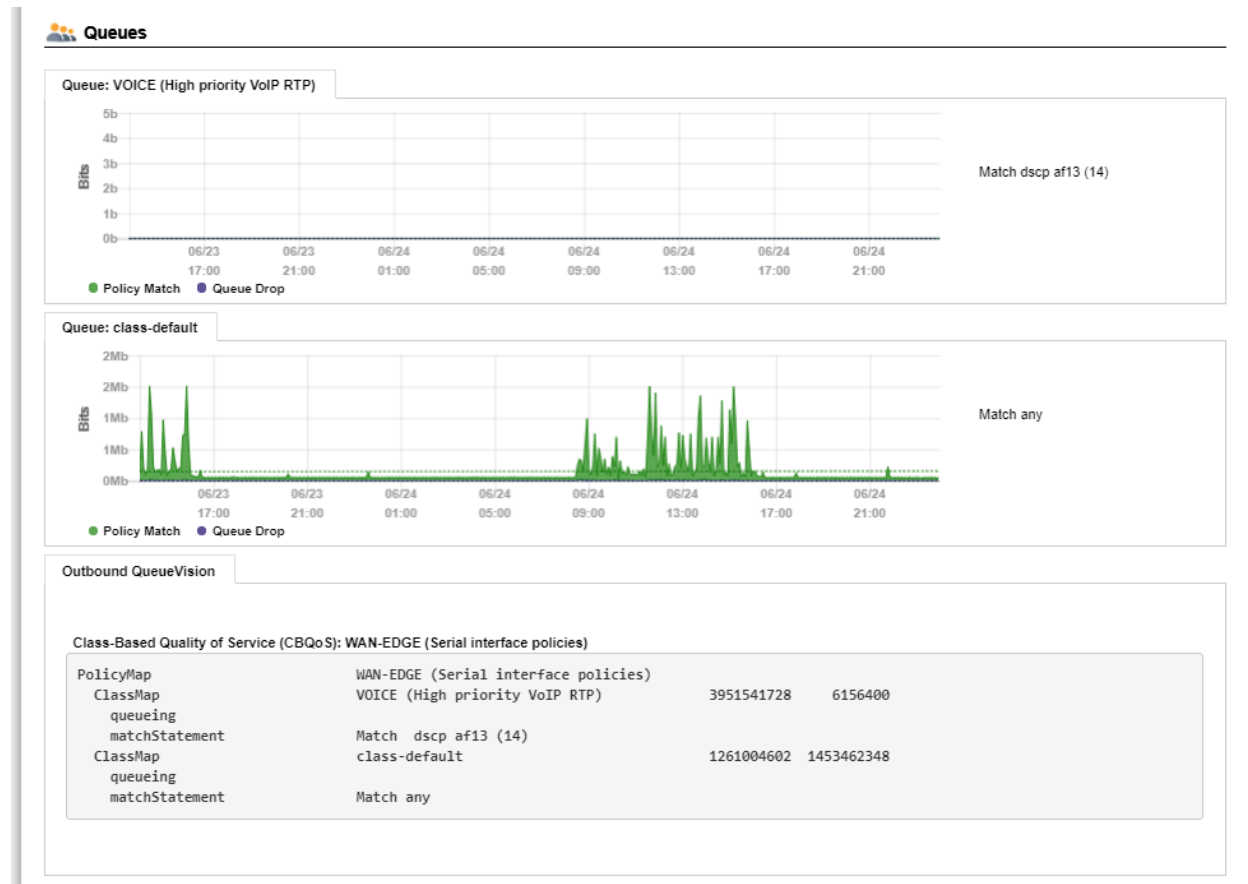

Network Prescription

Below the Utilization graph is the Network Prescription for the interface. This is an analysis of any problems that exist on the interface, including errors and utilization.

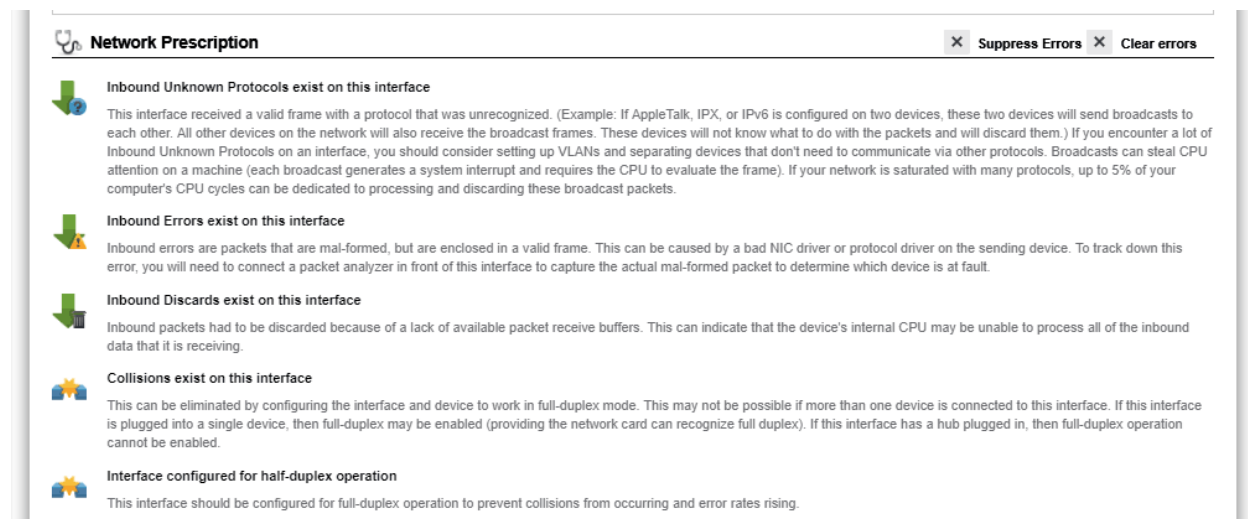

Interface Notes

Below the Prescription and near the bottom of the screen, Notes can be added to an interface so you can track when you performed work on an interface:



Note: If you have authentication turned on, then the Username field will use the logged in user who entered the note.

Note: The notes are stored in comma separated values (CSV) format in the following directory:

C:\Program Files (x86)\PathSolutions\TotalView\Notes

You can edit the files with any text editor like Notepad or use Excel to open the file in CSV format.

The filename for device notes is the IP address of the device. For example, the notes for device 38.102.148.163 interface #2 would be stored in filename 38.102.148.163-2.csv.

View Error Counters

If you click on the “View Error Counters” button to the right of the Packet loss graph, you will be presented with a list of all 19 error counters that are collected on the interface:

Errors
Hide Error Counters

Error Counter	Tracked	Type	Errors		Errors per Packet	
			Current	Total	Current	Average
Inbound Unknown Protocols		Common	0	0	-	-
Inbound Discards	●	Rare	0	0	-	-
Inbound Errors	●	Rare	0	1	-	0.000%
Outbound Discards	●	Rare	0	167	-	0.004%
Outbound Errors	●	Common	0	0	-	-
Outbound Queue Length		Reference	0	0	-	-
Single Collision Frames	●	Common	0	0	-	-
Multiple Collision Frames	●	Rare	0	0	-	-
Deferred Transmissions	●	Common	0	167	-	0.004%
Carrier Sense Errors	●	Rare	0	0	-	-
Excessive Collisions	●	Rare	0	0	-	-
Alignment Errors	●	Rare	0	0	-	-
FCS Errors	●	Rare	0	239,113	-	6.290%
SQE Test Errors	●	Rare	0	0	-	-
Late Collisions	●	Rare	0	0	-	-
Internal MAC Transmit Errors	●	Rare	0	0	-	-
Frame Too Longs	●	Rare	0	0	-	-
MAC Receive Errors	●	Rare	0	0	-	-
Symbol Errors	●	Rare	0	0	-	-
Errors Total			0	310,604	0.000%	8.171%

FCSErrors (Rare event)

Official definition: A count of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS (Frame Check Sequence) check. The count represented by an instance of this object is incremented when the frameCheckError status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions obtain are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.

Basic definition: An FCS error is a legal sized frame with a bad frame check sequence (CRC error). An FCS error can be caused by a duplex mismatch, faulty NIC or driver, cabling, hub, or induced noise.

What you should do to fix this problem:

Cause 1: FCS errors can be caused by a duplex mismatch on a link. Check to make sure that both interfaces on this link have the same duplex setting.

Cause 2: Sometimes FCS errors will increment when there is induced noise on the physical cable. Perform a cable test. Check the environment for electrical changes (industrial electrical motor turning on, EMI radiation, etc.). Make sure your physical wiring is safe from Electro-magnetic interference.

Cause 3: If you notice that FCS Errors increases, and Alignment Errors increase, attempt to solve the Alignment error problem first. Alignment errors can cause FCS errors.

Cause 4: If you see FCS errors increase, check the network cards and transceivers on that segment. A failing network card or transceiver may transmit a proper frame, but garble the data inside, causing a FCS error to be detected by listening machines.

Cause 5: Check network driver software on that segment. If a network driver is bad or corrupt, it may calculate the CRC incorrectly, and cause listening machines to detect an FCS Error.

Cause 6: If you have an Ethernet cable that is too short (less than 0.5meters), FCS errors can be generated.

Cause 7: If you have an Ethernet cable that is too long (more than 100meters), FCS errors can be generated.

Cause 8: If you are using 10Base-2, and have poor termination, or poor grounding, FCS errors can be generated.

If you click on an error counter name, it will display the official IEEE definition in the engineer’s library to the right along with a more basic definition and what should be done to fix the problem.

Favorites Tab

If you have specific interfaces that you want to group together to view from one page, they can be added to the “Favorites” tab:

The screenshot shows the 'Favorites Interfaces List' table in the TotalView interface. The table has columns for Device Name, Device IP Address, Interface Number, Description, View Current Utilization, Last Poll Errors, and Last Poll Utilization (Tx and Rx). The data is as follows:

Device Name	Device IP Address	Interface Number	Description	View Current Utilization	Last Poll Errors	Last Poll Utilization	
						Tx	Rx
hqpa500	10.0.0.7	Int #5	mgmt: mgmt	View Current	0.00%	0.01%	0.00%
hqfw1	10.86.0.2	Int #7	eth1: eth1 (Local)	View Current	0.00%	0.01%	0.01%
Syrah	10.0.0.1	Int #5	Gi1/0/3: GigabitEthernet1/0/3 (Fred Server)	View Current	0.00%	0.01%	0.01%
SantaClara	10.0.0.2	Int #1	Se0/0/0: Serial0/0/0	View Current	0.00%	3.19%	0.47%

This page displays the most recent utilization that was seen during the last polling period of all favorite interfaces.


How to Add an Interface to the Favorites List

The screenshot shows the 'Syrah' device page in TotalView. Under the 'Interfaces' section, the 'General' sub-tab is active. The table below shows the 'Favorite' column for each interface, with 'INT#3' highlighted and the 'Favorite' button highlighted in yellow.

Interface	Favorite	IP Address	Description	Ignore Int	Peak Daily Error Rate	Peak Daily Utilization		Interface Speed	Duplex	Status	
						Tx	Rx			Admin	Oper
INT#1	Favorite		Gi0/0: GigabitEthernet0/0	Ignore	0.000%	0.000%	0.000%	-	-	down	down
INT#3	Favorite		Gi1/0/1: GigabitEthernet1/0/1 (PA and Ubiquiti Firewall Uplink)	Ignore	0.000%	0.000%	0.000%	1,000,000,000	Full	up	up
INT#4	Favorite		Gi1/0/2: GigabitEthernet1/0/2	Ignore	0.000%	0.000%	0.000%	-	-	up	down
INT#5	Favorite		Gi1/0/3: GigabitEthernet1/0/3 (Fred Server)	Ignore	0.000%	0.000%	0.000%	1,000,000,000	Full	up	up
INT#6	Favorite		Gi1/0/4: GigabitEthernet1/0/4	Ignore	0.000%	0.000%	0.000%	100,000,000	Full	up	up
INT#7	Favorite		Gi1/0/5: GigabitEthernet1/0/5	Ignore	0.000%	0.000%	0.000%	1,000,000,000	Full	up	up

To add an interface to the favorites list, just click “Favorite” in the General sub-tab under the Device List tab.

You will be presented with a dialog confirming your selection:

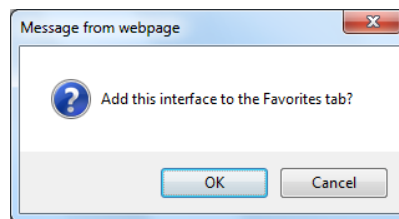

Click “OK” to add the interface to the “Favorites” tab, or “Cancel” if you do not want to do so.

If “Favorite” is greyed out for an interface, it means the interface is already on the Favorites “tab”.

Note: The web interface must be in Configuration Mode to be able to add an interface to the Favorites List. To access the web configuration tool, use the Config Tool and choose the “Output Tab”. If the web configuration is locked, and you want to unlock it, check the box “Unlock Web Configuration. See page 132 to see more about the Configuration Mode.

To remove an interface from the Favorites tab, use the Configuration Tool’s “Favorites” tab.

Issues Tab

Interfaces that have peak utilization rates or error rates that are over the threshold will be listed under the "Issues" tab:

path Solutions | TotalView

Poll frequency: 00:05:00
Last poll: 6/3/2018 5:56:55 AM
Network health: DEGRADED (1.1%)

Dashboard NLT Network VoIP Cloud Internet Predictors

Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools

Interfaces with peak daily utilization rates greater than 90% or error rate greater than 3% Print Group: All

Device Name	Device IP Address	Interface Number	Description	Interface Speed	MAC Addresses	Peak Daily Error Rate	Average Daily Error Rate	Peak Daily Utilization	
								Tx	Rx
tsxw2	172.17.2.5	-na-	ARP cache entry on this device for 10.10.0.10 does not match others Check	-	-	-	-	-	-
tsxw2	172.17.2.5	-na-	ARP cache entry on this device for 10.51.0.38 does not match others Check	-	-	-	-	-	-
Bardolino	10.0.0.47	Int #1	port 1: Gigabit Copper; port 1: Gigabit Copper	100,000,000	0	37.098%	9.328%	0.078%	2.314%
WinterAP	10.51.0.40	Int #7	ath2: ath2	0	0	26.434%	2.954%	0.000%	0.000%
WinterAP	10.51.0.40	Int #5	ath0: ath0	0	0	8.345%	0.593%	0.000%	0.000%
Burgundy	10.0.0.19	Int #3	3: 3	100,000,000	1	8.011%	0.906%	1.607%	0.137%
WinterAP	10.51.0.40	Int #3	wifi0: wifi0	0	0	7.743%	3.062%	0.000%	0.000%
ALSACE	10.0.0.39	Int #1	Se0/0/0: Serial0/0/0	1,536,000	0	6.156%	0.412%	98.498%	5.990%
Pacifica	10.50.1.2	Int #3	Fa0/1: FastEthernet0/1	10,000,000	0	5.479%	0.013%	0.002%	0.001%
Sauvignon	10.0.0.43	Int #4	ifc4 (Slot: 1 Port: 4): Avaya Ethernet Routing Switch 4850GTS-PWR+ Module - Port 4	100,000,000	48	5.102%	1.764%	93.565%	71.245%
SantaClara	10.0.0.2	Int #1	Se0/0/0: Serial0/0/0	1,536,000	0	4.606%	0.260%	98.528%	7.217%
LOIRE	10.60.0.1	Int #1	Se0/0/0: Serial0/0/0	1,536,000	0	0.306%	0.001%	6.009%	98.766%
Monterey	10.50.0.2	Int #1	Se0/0/0: Serial0/0/0	512,000	0	0.000%	0.000%	94.510%	94.620%
Pacifica	10.50.1.2	Int #1	Se0/0/0: Serial0/0/0	512,000	0	0.000%	0.000%	94.609%	94.505%

2 ARP cache entry problems, and 12 total interfaces listed Top of page

The threshold levels are displayed at the top of this table for reference.

If the error rate or peak utilization rate is over the threshold, it will be displayed in red for easy determination of the interface problem.


Use the drop-down in the upper right corner to view specific groups of issues, or choose “All” to view all issues in all groups.

You can click on the interface number to jump to the interface details page and view the utilization and error information.

Note: Interfaces that have been over threshold sometime in the past 24 hours are listed. Interfaces will roll off of the issues list if it is under the error rate and utilization rate for a full 24 hours

NetFlow Tab

TotalView's License Unlimited NetFlow capability permits an unlimited number of interfaces to be added to monitoring and viewed from the NetFlow tab. The initial view shows interface daily utilization, transmitted and received. If you click into a graph, it will show you who used the bandwidth at that time and what they were doing.

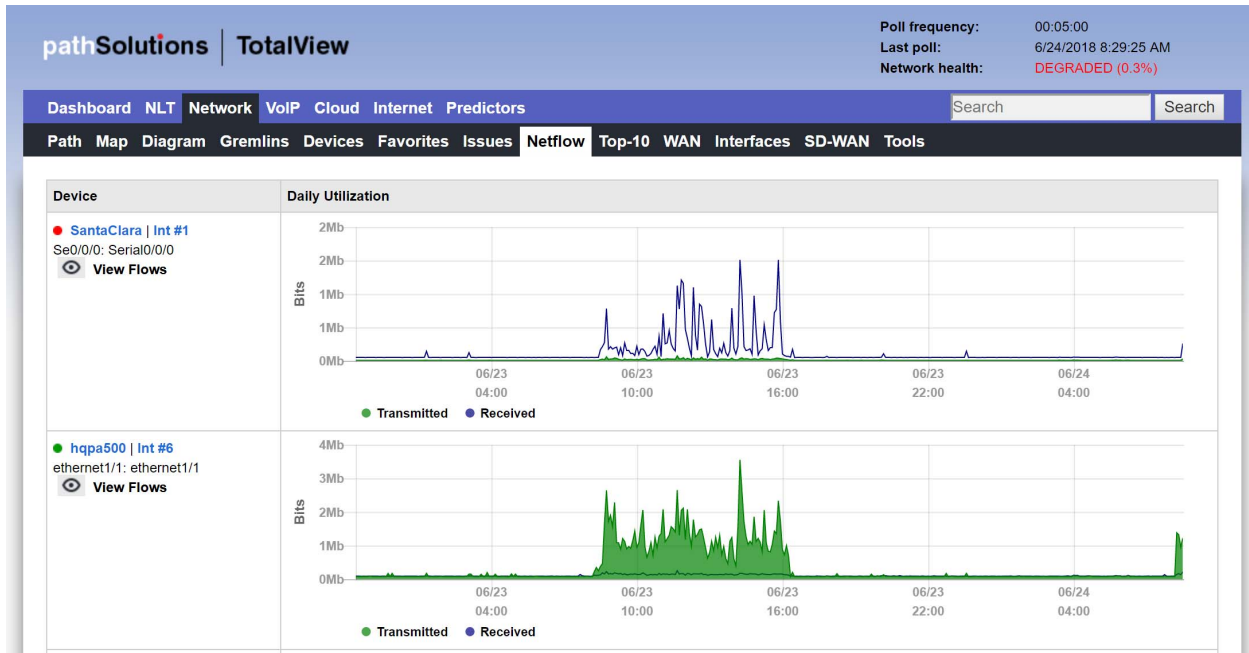

If you click on “View flows”, it will show you the current most recent flows received on the interface.

If you click on a timeslot on the graph, it will jump into that interface flows and show you the flows that were happening at that time. A vertical red line will show you the selected timeslot.

pathSolutions | TotalView

Poll frequency: 00:05:00
 Last poll: 6/24/2018 8:24:22 AM
 Network health: **DEGRADED (0.3%)**

Dashboard NLT **Network** VoIP Cloud Internet Predictors Search Search

Path Map Diagram Gremlins Devices Favorites Issues **Netflow** Top-10 WAN Interfaces SD-WAN Tools

● **hqpa500 Interface Flows**

Device Name	Interface Number	Description
● hqpa500	Int #6	ethernet1/1: ethernet1/1

Transmitted Received

Protocol	Source			Destination			BPS	Bytes	Packets	TOS	Flow Duration
	Int	Address	Port	Int	Address	Port					
UDP	7	10.0.0.5	snmp(161)	6	10.50.0.82	62282	85,786	171,572	290	0x00 (0)	0 days 00:00:00.15
UDP	7	10.10.0.10	52595	6	10.86.0.2	snmp(161)	65,708	16,427	61	0x00 (0)	0 days 00:00:00.01
UDP	7	10.0.0.32	snmp(161)	6	10.50.0.82	62268	63,850	31,925	73	0x00 (0)	0 days 00:00:00.03

If you click on any IP address, it will perform a reverse-DNS lookup to determine the friendly name of the device.

Note: If you desire to include specific interfaces that are not displayed in this list, this can be accomplished by using the “Config Tool” and selecting the NetFlow tab. You can add, change, or delete any interfaces there as well as sort them in order by using the Shift Up or Shift Down keys. See Configuration section for details.


Add Netflow interface ✕

IP address:

Interface number:

Top-10 Tab

The “Top-10” tab provides you with overall network information for all monitored interfaces. This section is handy for determining what is occurring on the network regarding errors, utilization, and broadcast levels:

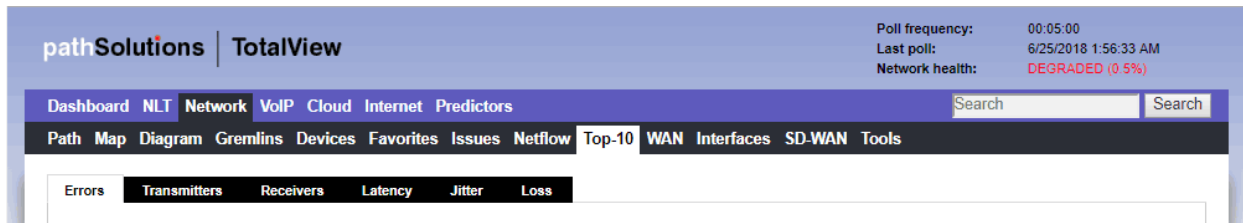


Errors Sub-Tab

The top 10 interfaces with the highest error rates are listed under the "Top-10" tab, in the "Errors" sub-tab.

This sub-tab allows you to see what interfaces have errors that are approaching the error threshold.

Click on the interface number to jump to the interface details page and view the utilization and error information.

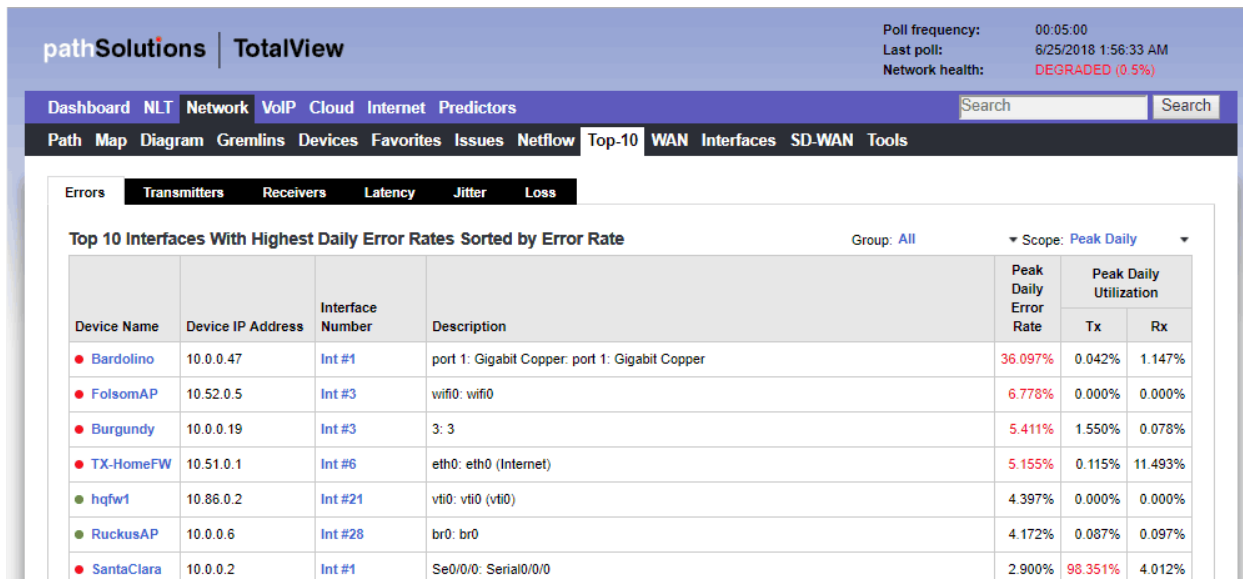

You can also modify the output to view your preferred “Scope” or device “Groups” by using the drop-down menu on the right-hand side. The “Scope” drop-down menu will allow you to either see Peak Daily Highest Error Rate within the last 24 hours or the Last Poll Error Rate within the last 5 minutes.

If a problem is currently happening on the network it’s valuable to know which interfaces are currently showing the highest utilization or error rates. The Last 5 Minute Poll allows you to target the right impingement points in the network and get the root-cause of the problem fixed rapidly.

Transmitters Sub-Tab

The top 10 interfaces with the Highest Daily Transmitted Rates sorted by Utilization are listed under the "Transmitters" sub-tab.

This sub-tab allows you to see what interfaces physically transmit the most data regardless of interface speed.

You can click on the interface number to jump to the interface details page and view the utilization and error information.

The screenshot shows the TotalView interface with the 'Transmitters' sub-tab selected. The main heading is 'Top 10 Interfaces With Highest Daily Transmitted Rates Sorted by Utilization'. The table below lists the top 10 interfaces with their respective metrics.

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization	
					Tx	Rx
SantaClara	10.0.0.2	Int #1	Se0/0/0: Serial0/0/0	2.900%	97.774%	4.012%
TX-HomeFW	10.51.0.1	Int #7	eth1: eth1 (Local Bridge)	0.348%	11.436%	0.122%
Atlanta	10.20.0.2	Int #1	Se0/0/0: Serial0/0/0	0.000%	2.507%	1.967%
Burgundy	10.0.0.19	Int #20	20: 20	0.052%	2.100%	0.352%
Cabernet	10.0.0.36	Int #10	e10: Ethernet Interface	0.000%	1.878%	0.103%
Burgundy	10.0.0.19	Int #3	3: 3	5.411%	1.544%	0.078%
Boston	10.30.0.2	Int #2	Fa0/1: FastEthernet0/1	0.000%	1.486%	0.086%

You can modify the output to view your preferred "Scope" or "Group" devices by using the drop-down menu on the right hand side.

Using the Scope, you can choose to see the Peak Daily Highest Error Rate within the last 24 hours or the Last Poll Error Rate within the last 5 minutes. You also have the option to view the 95th Percentile Highest Daily Transmitted Rates, Raw Data Highest Daily Transmitted Rates, or Broadcasts with The Highest Transmitted Broadcast Percentage.

The screenshot shows the TotalView interface with the 'Transmitters' sub-tab selected. The main heading is 'Top 10 Interfaces With Highest Daily Transmitted 95th Percentile Sorted by Utilization'. The table below lists the top 10 interfaces with their respective metrics. A dropdown menu is open over the 'Scope' field, showing options: Peak Daily, Last Poll, 95th Percentile (selected), Raw data, and Broadcasts.

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization	
					Tx	Rx
SantaClara	10.0.0.2	Int #1	Se0/0/0: Serial0/0/0	0.000%	3.021%	0.470%
Atlanta	10.20.0.2	Int #1	Se0/0/0: Serial0/0/0	0.000%	2.040%	1.618%
Burgundy	10.0.0.19	Int #20	20: 20	0.000%	0.228%	0.255%
Cabernet	10.0.0.36	Int #10	e10: Ethernet Interface	0.000%	0.021%	0.022%
LOIRE	10.60.0.1	Int #1	Se0/0/0: Serial0/0/0	0.000%	0.844%	0.719%
TX-HomeFW	10.51.0.1	Int #7	eth1: eth1 (Local Bridge)	0.000%	0.036%	0.002%

Receivers Sub-Tab

The top 10 interfaces with the highest daily received rates are listed under the “Receivers” sub-tab.

This sub-tab allows you to see what interfaces physically receive the most data regardless of interface speed.

Click on the interface number if you want to jump to the interface details page and view the utilization and error information.

The screenshot shows the TotalView interface with the 'Receivers' sub-tab selected. The main content area displays a table titled 'Top 10 Interfaces With Highest Daily Received Rates Sorted by Utilization'. The table has columns for Device Name, Device IP Address, Interface Number, Description, Peak Daily Error Rate, and Peak Daily Utilization (Tx and Rx). The data is as follows:

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Tx	Rx
TX-HomeFW	10.51.0.1	Int #6	eth0: eth0 (Internet)	5.155%	0.115%	11.493%
SantaClara	10.0.0.2	Int #1	Se0/0/0: Serial0/0/0	2.900%	97.774%	4.012%
Cabernet	10.0.0.36	Int #1	e1: Ethernet Interface	0.000%	0.349%	2.097%
Atlanta	10.20.0.2	Int #1	Se0/0/0: Serial0/0/0	0.000%	2.507%	1.967%
Corvina	10.0.0.49	Int #4227633	GigabitEthernet1/0/2: GigabitEthernet1/0/2	0.548%	0.103%	1.860%
SantaClara	10.0.0.2	Int #2	Fa0/0: FastEthernet0/0	0.328%	0.072%	1.538%

You can modify the output to view your preferred “Scope” or “Group” devices by using the drop-down menu on the right hand side.

Using the Scope, you can choose to see the Peak Daily Highest Error Rate within the last 24 hours or the Last Poll Error Rate within the last 5 minutes. You also have the option to view the 95th Percentile Highest Daily Transmitted Rates, Raw Data Highest Daily Transmitted Rates, or Broadcasts with The Highest Transmitted Broadcast Percentage.

The screenshot shows the TotalView interface with the 'Receivers' sub-tab selected. The main content area displays a table titled 'Top 10 Interfaces With Highest Daily Transmitted 95th Percentile Sorted by Utilization'. The table has columns for Device Name, Device IP Address, Interface Number, Description, Peak Daily Error Rate, and Peak Daily Utilization (Tx and Rx). The data is as follows:

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Tx	Rx
SantaClara	10.0.0.2	Int #1	Se0/0/0: Serial0/0/0	0.000%	3.021%	0.470%
Atlanta	10.20.0.2	Int #1	Se0/0/0: Serial0/0/0	0.000%	2.040%	1.618%
Burgundy	10.0.0.19	Int #20	20: 20	0.000%	0.228%	0.255%
Cabernet	10.0.0.36	Int #10	e10: Ethernet Interface	0.000%	0.021%	0.022%
LOIRE	10.60.0.1	Int #1	Se0/0/0: Serial0/0/0	0.000%	0.844%	0.719%

Note: If you have an interface that is receiving a high level of broadcasts, investigate the device that is connected to it to determine why it is transmitting a lot of broadcasts.

Latency Sub-Tab

The top 10 devices with the highest daily latency are listed under the “Latency” sub-tab.

This sub-tab allows you to see which devices have the highest latency sorted by latency.

You can click on the Device to jump to the Device Overall Statistics page and view the Latency, Jitter, and Packet Loss details.

Device Name	Device IP Address	Location	Peak Daily Latency	Peak Daily Jitter	Peak Daily Loss
WinterPTR.thewinters.net	10.51.0.98		662ms	0ms	0%
NP1134EF7	10.50.0.73		466ms	0ms	50%
stout	10.30.0.1	Santa Clara CA	382ms	76ms	0%
Shiraz	10.0.0.35	Santa Clara	305ms	7ms	0%
LASERJET4050	10.50.0.3	HP2100	301ms	0ms	33%
svfw1	10.50.0.1	Sunnyvale	241ms	14ms	4%
Sauvignon	10.0.0.43	SanFrancisco,CA	232ms	24ms	0%

You can also modify the output to view your preferred device “Groups” by using the drop-down menu on the right-hand side.

Device Name	Device IP Address	Location	Peak Daily Latency	Peak Daily Jitter	Peak Daily Loss
hqfw1	10.86.0.2	Santa Clara HQ	43ms	2ms	0%
hqpa500	10.0.0.7	Santa Clara	16ms	0ms	0%
CiscoASA	10.0.0.8	Santa Clara, CA	2ms	0ms	0%

Jitter Sub-Tab

The top 10 devices with the highest daily Jitter are listed under the “Jitter” sub-tab.

This tab allows you to see which devices have the highest daily Jitter sorted by Jitter.

You can click on the device to jump to the Device Overall Statistics page and view the Latency, Jitter, and Packet Loss details.

Device Name	Device IP Address	Location	Peak Daily Latency	Peak Daily Jitter	Peak Daily Loss
Folsom-PTR	10.52.0.42		184ms	271ms	40%
Bardolino	10.0.0.47	SanFrancisco	108ms	99ms	10%
Monterey	10.50.0.2	Denver, CO	210ms	94ms	11%
Pacifica	10.50.1.2	Atlanta, GA	185ms	82ms	11%
stout	10.30.0.1	Santa Clara CA	382ms	76ms	0%
Sauvignon	10.0.0.43	SanFrancisco,CA	232ms	24ms	0%

You can also modify the output to view your preferred device “Group” by using the drop-down menu on the right-hand side.

Loss Sub-tab

The top 10 devices with the highest daily packet loss are listed under the “Loss” sub-tab.

This tab allows you to see which devices have the highest packet loss sorted by packet loss.

You can click on the device to jump to the Device Overall Statistics page and view the Latency, Jitter, and Packet Loss details.

Device Name	Device IP Address	Location	Peak Daily Latency	Peak Daily Jitter	Peak Daily Loss
NPH134EF7	10.50.0.73		466ms	0ms	50%
Folsom-PTR	10.52.0.42		184ms	271ms	40%
SNAPSERVER1100	10.50.4.10	Sunnyvale	223ms	0ms	33%
LASERJET4050	10.50.0.3	HP2100	301ms	0ms	33%
Pacifica	10.50.1.2	Atlanta, GA	185ms	82ms	11%
Monterey	10.50.0.2	Denver, CO	210ms	94ms	11%

You can also modify the output to view your preferred device “Groups” by using the drop-down menu on the right-hand side.

WAN Tab

This section will automatically display WAN interfaces that are slower than 10meg, sorted by the 95th percentile:

Poll frequency: 00:05:00
 Last poll: 6/25/2018 2:21:30 AM
 Network health: DEGRADED (0.5%)

Dashboard
NLT
Network
VoIP
Cloud
Internet
Predictors

Search

Path Map
Diagram
Gremlins
Devices
Favorites
Issues
Netflow
Top-10
WAN
Interfaces
SD-WAN
Tools

WAN Interfaces

Device Name	Interface Number	Details	Utilization Graph
hqfw1	Int #6	eth0: eth0 (Internet) Provider: AT&T Circuit ID: CBW34-3827-DS232 Support Phone: (877) 555-1212 Monthly Cost: \$324 Contract Expiration: 12/15/2019 Cost per Gigabit: 0.19902690 Speed: 1,000,000,000 Type: ethernetCsmacd MTU: 1500 Queuing: Tx Peak: 0.02% Rx Peak: 0.30% Tx 95th Pct: 0.02% Rx 95th Pct: 0.16%	
TX-HomeFW	Int #6	eth0: eth0 (Internet) Steve's awesome internet Provider: AT&T Circuit ID: GigaPower Support Phone: 1-800-ATT-NOPE Monthly Cost: \$79 Contract Expiration: / Cost per Gigabit: 0.00634795 Speed: 1,000,000,000 Type: ethernetCsmacd MTU: 1500 Queuing: Tx Peak: 0.12% Rx Peak: 11.49% Tx 95th Pct: 0.08% Rx 95th Pct: 0.80%	

Note: The list of WAN interfaces on this list is automatically generated by the system. If you desire to include specific WAN interfaces that are not displayed in this list, this can be accomplished by using the “Config Tool” and selecting the WAN Tab. You can add, change, or delete any interfaces there as well as sort them in order by using the Shift Up or Shift Down keys. See Page 127 for details.

You can also editing the WAN.cfg file manually. This file is located in the following directory:

```
C:\Program Files (x86)\PathSolutions\TotalView\WAN.cfg
```

Edit this file with a text editor (like Notepad) and add the IP address and interface for each WAN interface that you want the program to list. The IP address and interface number should be separated by at least one <TAB> character. Save the file and then stop and re-start the PathSolutions TotalView service to have it take effect.

Interfaces

Under the Network “Interfaces” tab, the Interfaces section identifies interfaces with specific conditions.

Half Duplex Interface Report

Interfaces that are configured for half-duplex or are showing collision counters are displayed on this report:

pathSolutions | TotalView

Poll frequency: 00:05:00
Last poll: 6/25/2018 10:39:50 AM
Network health: **DEGRADED (0.7%)**

Dashboard NLT Network VoIP Cloud Internet Predictors Search Search

Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools

Half Duplex Trunk Ports Unknown Protocols < 10 meg 10 meg 100 meg 1 gig > 100 gig Oper Down Admin Down

Half Duplex Interface List sorted by Peak Daily Error Rate

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization		Interface Speed	Duplex
					Tx	Rx		
Burgundy	10.0.0.19	Int #3	3: 3	8.011%	1.546%	0.078%	100,000,000	Half
Chardonnay	10.50.4.2	Int #19	19: 19	1.149%	0.002%	0.002%	10,000,000	Half
SantaClara	10.0.0.2	Int #2	Fa0/0: FastEthernet0/0	0.328%	0.072%	1.538%	100,000,000	Half
Grenache	10.0.0.27	Int #14	Fa0/13: FastEthernet0/13 (Microscope, Inc.)	0.137%	0.023%	0.024%	100,000,000	Half*
Ribolla	10.0.0.26	Int #10006	Fa0/6: FastEthernet0/6 ((()))	0.023%	0.024%	0.023%	100,000,000	Half
Pacifica	10.50.1.2	Int #3	Fa0/1: FastEthernet0/1	0.000%	0.002%	0.001%	10,000,000	Half

6 total half-duplex interfaces displayed [Top of page](#)

With modern switched networks, no interfaces should be configured for half-duplex or creating collisions on the network. This report discloses all interfaces that are either configured for half-duplex operation or have collision error counters.

Note: If the Duplex value shows a red asterisk (*) behind the label, it indicates that the duplex setting could not be read from the device because the device does not support RFC 2665. In this case, the duplex setting is estimated based on the presence or absence of collision error counters on the interface.

Trunk Ports

This report shows all interfaces that have multiple MAC addresses showing on the interface. A trunk port is one that has more than 4 MAC addresses. The report is sorted by the number of MAC addresses so you can view the most critical interconnects in your network at the top, and evaluate which ones have high utilization along with high packet loss.

pathSolutions | TotalView

Poll frequency: 00:05:00
Last poll: 6/25/2018 10:39:50 AM
Network health: **DEGRADED (0.7%)**

Dashboard NLT Network VoIP Cloud Internet Predictors Search Search

Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools

Half Duplex Trunk Ports Unknown Protocols < 10 meg 10 meg 100 meg 1 gig > 100 gig Oper Down Admin Down

Interfaces With More than 4 MAC addresses sorted by number of MAC addresses

Device Name	Device IP Address	Interface Number	Description	MAC Addresses	Peak Daily Error Rate	Peak Daily Utilization		Average Daily, KBytes		Interface Speed
						Tx	Rx	Tx	Rx	
Corvina	10.0.0.49	Int #4227633	GigabitEthernet1/0/2: GigabitEthernet1/0/2	69	0.548%	0.112%	2.055%	35	279	100,000,000
Cabernet	10.0.0.36	Int #1	e1: Ethernet Interface	51	0.000%	0.408%	2.280%	279	499	100,000,000
Pinot	10.0.0.21	Int #25	25: 25	47	0.000%	0.070%	0.081%	500	574	1,000,000,000
Bordeaux	10.0.0.45	Int #1	1: Ethernet Interface	47	0.000%	0.094%	0.091%	69	67	100,000,000
Shiraz	10.0.0.35	Int #1	g1: Ethernet Interface	46	0.000%	0.030%	0.030%	22	22	100,000,000
Sauvignon	10.0.0.43	Int #4	ifc4 (Slot: 1 Port: 4): Avaya Ethernet Routing Switch 4850GTS-PWR+ Module - Port 4	45	0.000%	0.000%	0.000%	0	0	100,000,000

Unknown Protocols

This report shows all interfaces that received a valid frame with unknown protocols. Knowing which interfaces have devices transmitting strange protocols (IPX, AppleTalk, etc.) can be valuable for reducing unnecessary broadcasts on your network. This report will disclose the interfaces that are currently discarding packets.

pathSolutions | TotalView

Poll frequency: 00:05:00
Last poll: 6/25/2018 10:39:50 AM
Network health: **DEGRADED (0.7%)**

Dashboard NLT Network VoIP Cloud Internet Predictors Search Search

Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools

Half Duplex Trunk Ports Unknown Protocols < 10 meg 10 meg 100 meg 1 gig > 100 gig Oper Down Admin Down

Interfaces Currently Showing Unknown Protocols sorted by Peak Daily Error Rate

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization	
					Tx	Rx
SantaClara	10.0.0.2	Int #2	Fa0/0: FastEthernet0/0	0.328%	0.072%	1.538%
Baileys	10.0.0.32	Int #10005	Fa1/0/5: FastEthernet1/0/5	0.000%	0.009%	0.010%
ALSACE	10.0.0.39	Int #2	Fa0/0: FastEthernet0/0	0.000%	0.022%	0.020%
Atlanta	10.20.0.2	Int #2	Fa0/0: FastEthernet0/0	0.000%	0.033%	0.039%
LOIRE	10.60.0.1	Int #2	Fa0/0: FastEthernet0/0	0.000%	0.014%	0.015%
DallasRtR	172.17.2.1	Int #3	Fa0/0: FastEthernet0/0	0.000%	0.002%	0.002%

6 total unknown protocol interfaces displayed [Top of page](#)

For Example: If AppleTalk, IPX, or IPv6 is configured on two devices, these two devices will send broadcasts to each other. All other devices on the network will also receive the broadcast frames. These devices will not know what to do with the packets and will discard them.

Sub-10Meg

This report shows all interfaces that are configured under 10meg Ethernet. These interfaces may be critical WAN interfaces that need to be tracked more closely.

The screenshot shows the 'path Solutions | TotalView' dashboard. At the top right, it indicates 'Poll frequency: 00:05:00', 'Last poll: 6/25/2018 10:39:50 AM', and 'Network health: DEGRADED (0.7%)'. The navigation bar includes 'Dashboard NLT Network VoIP Cloud Internet Predictors' and 'Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools'. Below the navigation, there are filters for 'Half Duplex', 'Trunk Ports', 'Unknown Protocols', and speed ranges: '< 10 meg', '10 meg', '100 meg', '1 gig', and '> 100 gig'. The main content area is titled 'Under 10 Meg Interface List sorted by Peak Daily Utilization Rate' and contains a table with the following data:

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization		Interface Speed
					Tx	Rx	
SantaClara	10.0.0.2	Int #1	Se0/0/0: Serial0/0/0	6.770%	97.774%	4.012%	1,536,000
Monterey	10.50.0.2	Int #1	Se0/0/0: Serial0/0/0	4.814%	55.063%	55.109%	512,000
Pacifica	10.50.1.2	Int #1	Se0/0/0: Serial0/0/0	0.000%	55.109%	55.063%	512,000
Atlanta	10.20.0.2	Int #1	Se0/0/0: Serial0/0/0	0.000%	3.063%	2.420%	1,536,000
ALSACE	10.0.0.39	Int #1	Se0/0/0: Serial0/0/0	0.000%	0.990%	1.165%	1,536,000
LOIRE	10.60.0.1	Int #1	Se0/0/0: Serial0/0/0	0.000%	1.163%	0.990%	1,536,000
SanAntonioRTR	172.17.1.254	Int #1	Se0/1/0: Serial0/1/0	0.000%	0.161%	0.210%	1,536,000
DallasRHR	172.17.2.1	Int #2	Se0/1/0: Serial0/1/0	0.000%	0.208%	0.161%	1,536,000

10Meg Interface Report

This report shows all interfaces that are configured for 10meg Ethernet:

The screenshot shows the 'path Solutions | TotalView' dashboard. At the top right, it indicates 'Poll frequency: 00:05:00', 'Last poll: 6/25/2018 10:39:50 AM', and 'Network health: DEGRADED (0.7%)'. The navigation bar includes 'Dashboard NLT Network VoIP Cloud Internet Predictors' and 'Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools'. Below the navigation, there are filters for 'Half Duplex', 'Trunk Ports', 'Unknown Protocols', and speed ranges: '< 10 meg', '10 meg', '100 meg', '1 gig', and '> 100 gig'. The main content area is titled '10 Meg Interface List sorted by Peak Daily Utilization Rate' and contains a table with the following data:

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization		Interface Speed
					Tx	Rx	
RuckusAP	10.0.0.6	Int #20	wlan8: wlan8	0.000%	8.313%	0.248%	10,000,000
Folsom-PTR	10.52.0.42	Int #3	Wifi0 (UNKNOWN)	0.000%	0.094%	0.625%	10,000,000
RuckusAP	10.0.0.6	Int #28	br0: br0	4.172%	0.094%	0.107%	10,000,000
RuckusAP	10.0.0.6	Int #13	wlan1: wlan1	0.000%	0.060%	0.015%	10,000,000
RuckusAP	10.0.0.6	Int #12	wlan0: wlan0	0.000%	0.047%	0.046%	10,000,000
Monterey	10.50.0.2	Int #3	Fa0/1: FastEthernet0/1	0.000%	0.002%	0.001%	10,000,000
Chardonnav	10.50.4.2	Int #15	15: 15	0.000%	0.002%	0.002%	10,000,000
Chardonnav	10.50.4.2	Int #19	19: 19	1.149%	0.002%	0.002%	10,000,000

Since virtually all network adapters that have been sold in the past 10 years are both 10meg and 100meg capable, this report discloses interfaces that are configured for 10meg. Network performance can be generally improved by changing these adapters to use 100meg speeds instead of 10meg.

Note: Even if a network link has low utilization, it can still benefit from upgrading to 100meg, as the latency to stream small chunks of data across a 10meg link can be reduced significantly by increasing the bandwidth ten-fold.

100Meg Interface Report

This report shows all interfaces that are configured for 100meg Ethernet:

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization		Interface Speed
					Tx	Rx	
Cabernet	10.0.0.36	Int #1	e1: Ethernet Interface	0.000%	0.408%	2.280%	100,000,000
Burgundy	10.0.0.19	Int #20	20: 20	0.693%	2.269%	0.409%	100,000,000
Cabernet	10.0.0.36	Int #10	e10: Ethernet Interface	0.000%	2.059%	0.111%	100,000,000
Corvina	10.0.0.49	Int #4227633	GigabitEthernet1/0/2: GigabitEthernet1/0/2	0.548%	0.112%	2.055%	100,000,000
Burgundy	10.0.0.19	Int #3	3: 3	8.011%	1.546%	0.078%	100,000,000

The highest utilized of these interfaces should be considered for upgrading to Gigabit Ethernet.

Note: Even if a network link has low utilization, it can still benefit from upgrading to Gigabit Ethernet, as the latency to stream small chunks of data across a 100meg link can be reduced significantly by increasing the bandwidth ten-fold.

Note: Another consideration is that an interface that shows 20% peak utilization (during a 5 minute poll period) may actually have been 100% utilized for 1 minute of that 5 minute poll period, and 0% utilization for the remaining 4 minutes. Review the interface usage graph and/or reduce your poll frequency to see more granular historical utilization of interfaces.

1Gig Interface Report

This report shows all interfaces that are configured for 1gig Ethernet:

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization		Interface Speed
					Tx	Rx	
TX-HomeFW	10.51.0.1	Int #6	eth0: eth0 (Internet)	5.155%	0.315%	13.888%	1,000,000,000
TX-HomeFW	10.51.0.1	Int #7	eth1: eth1 (Local Bridge)	0.545%	13.850%	0.334%	1,000,000,000
svfw1	10.50.0.1	Int #2	eth0: eth0 (Internet)	0.000%	0.610%	1.359%	1,000,000,000
svfw1	10.50.0.1	Int #4	switch0: switch0 (Local Bridge)	0.000%	1.279%	0.607%	1,000,000,000

The highest utilized of these interfaces should be considered for upgrading to 10Gigabit Ethernet.

Note: Even if a network link has low utilization, it can still benefit from upgrading to 10Gigabit Ethernet, as the latency to stream small chunks of data across a Gigabit link can be reduced significantly by increasing the bandwidth ten-fold.

Over 100Gig Interface Report

This report shows all interfaces that are configured for over 100gig Ethernet:

The screenshot shows the TotalView interface with the 'Interfaces' tab selected. The filter '1 gig' is active. The report title is 'Above 100 Gigabit Interface List sorted by Peak Daily Utilization Rate'. The table below shows one interface: Syrah, IP 10.0.0.1, Int #31, StackPort1: StackPort1, with 0.000% error and utilization rates, and a speed of 160,000,000,000.

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization		Interface Speed
					Tx	Rx	
Syrah	10.0.0.1	Int #31	StackPort1: StackPort1	0.000%	0.000%	0.000%	160,000,000,000

1 total Above 100 Gigabit interfaces displayed

Operationally Down Interface Report

Operationally down interfaces are listed under the "Oper Down" tab. When the number of operationally down ports gets too low, additional switch ports should be acquired.

The screenshot shows the TotalView interface with the 'Oper Down' tab selected. The report title is 'Operationally Down Interface List sorted by Last Used'. The table below lists seven interfaces on device Chardonny, all with IP 10.0.0.20, and all last used 0 days ago.

Device Name	Device IP Address	Interface Number	Description	Type	Last Used
Chardonny	10.0.0.20	Int #13	13: 13	ethernetCsmacd	0 days 00:00:00.00
Chardonny	10.0.0.20	Int #7	7: 7	ethernetCsmacd	0 days 00:00:00.00
Chardonny	10.0.0.20	Int #21	21: 21	ethernetCsmacd	0 days 00:00:00.00
Chardonny	10.0.0.20	Int #26	26: 26	ethernetCsmacd	0 days 00:00:00.00
Chardonny	10.0.0.20	Int #15	15: 15	ethernetCsmacd	0 days 00:00:00.00
Chardonny	10.0.0.20	Int #22	22: 22	ethernetCsmacd	0 days 00:00:00.00
Chardonny	10.0.0.20	Int #19	19: 19	ethernetCsmacd	0 days 00:00:00.00

This list displays all available (operationally shut down) interfaces on your network, including:

- Device name
- Device IP Address
- Interface Number
- Interface Description
- Interface Type
- Interface Time Last Used

Administratively Shut Down Interface Report

Administratively shut down interfaces are listed under the "Admin Down" tab:


The screenshot shows the TotalView web interface. At the top right, it displays system information: Poll frequency: 00:05:00, Last poll: 6/25/2018 10:39:50 AM, and Network health: DEGRADED (0.7%). The navigation menu includes Dashboard, NLT, Network, VoIP, Cloud, Internet, Predictors, Path, Map, Diagram, Gremlins, Devices, Favorites, Issues, Netflow, Top-10, WAN, Interfaces, SD-WAN, and Tools. The 'Interfaces' section is active, and the 'Admin Down' tab is selected. Below the navigation, there are filter tabs for Half Duplex, Trunk Ports, Unknown Protocols, and bandwidth filters (< 10 meg, 10 meg, 100 meg, 1 gig, > 100 gig). The main content area shows a table titled 'Administratively Down Interface List sorted by Last Used'.

Device Name	Device IP Address	Interface Number	Description	Type	Last Used
Baileys	10.0.0.32	Int #5180	StackSub-St1-1: StackSub-St1-1	propVirtual	0 days 00:00:00.00
Baileys	10.0.0.32	Int #5181	StackSub-St1-2: StackSub-St1-2	propVirtual	0 days 00:00:00.00
TX-HomeFW	10.51.0.1	Int #10	np10: np10 (np10)	ethernetCsmacd	0 days 02:17:47.52
TX-HomeFW	10.51.0.1	Int #9	eth3: eth3 (eth3)	ethernetCsmacd	0 days 02:17:47.52
TX-HomeFW	10.51.0.1	Int #5	eth7: eth7 (eth7)	ethernetCsmacd	0 days 02:17:47.52
TX-HomeFW	10.51.0.1	Int #4	eth6: eth6 (eth6)	ethernetCsmacd	0 days 02:17:47.52
TX-HomeFW	10.51.0.1	Int #3	eth5: eth5 (eth5)	ethernetCsmacd	0 days 02:17:47.52

This list displays interfaces that have been administratively shut down and will not function unless the interface is enabled and brought online by the administrator.

SD-WAN Monitoring Tab

TotalView's SD-WAN monitoring shows the full route tree that connects to each link endpoint as well as what occurred along that path, and alerts you to problems with latency, loss, outages, and route changes.

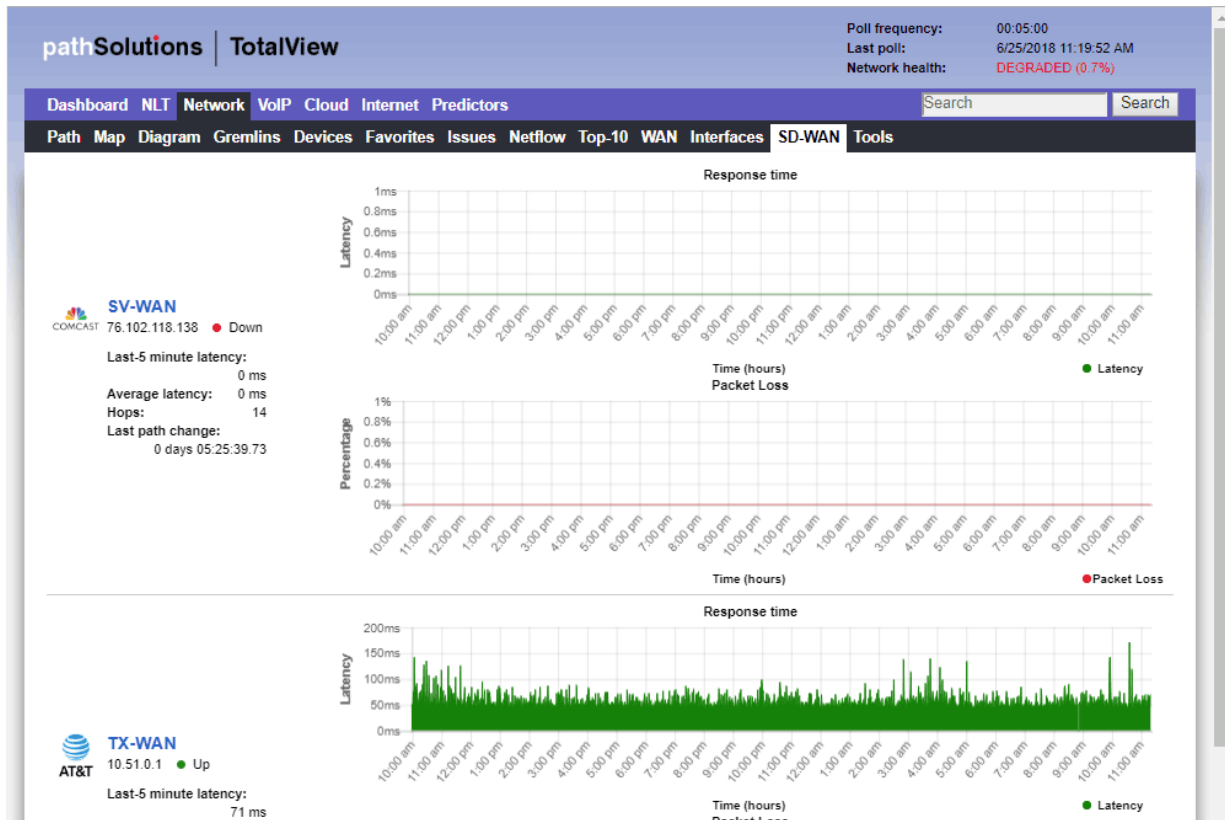

Click on an interface to see more details:

pathSolutions | TotalView

Poll frequency: 00:05:00
Last poll: 6/25/2018 11:19:52 AM
Network health: **DEGRADED (0.7%)**

Dashboard NLT Network VoIP Cloud Internet Predictors

Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools

Cloud Map to TX-WAN

AT&T TX-WAN 10.51.0.1 ● Up

Last-5 minute latency: 71 ms Average latency: 54 ms Hops: 3 Last path change: 0 days 21:05:00.82

Response time


Packet Loss

Packet Loss


Network diagram showing a path from a server icon to a switch icon, then to a router icon, and finally to a destination icon. The path is labeled with hop numbers: 7, 0, 68. A question mark icon is connected to the path by a dashed line.

Tools Tab

Tools are provided to help locate IP addresses and MAC addresses on your network: IP to MAC address search, MAC to Interface search, MAC to IP address search, Subnets and VLAN.

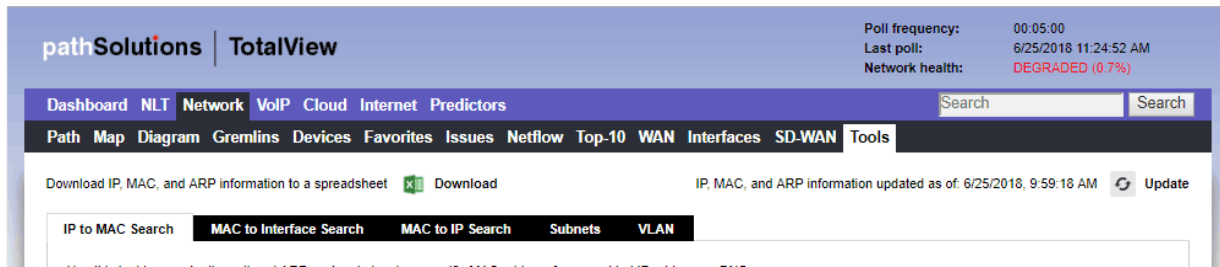

Before using any of the tools, you should click on the “Update” button to collect the Bridge table and ARP cache information from your network.

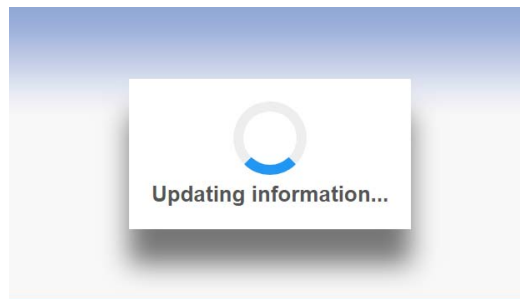

This process may take more than 10 minutes depending on the size of your network and the number of monitored devices.

After the update is complete, you can choose to download the information to an Excel spreadsheet, or perform queries against the information.

IP to MAC Address

Determining what MAC address goes with an IP address is easy if your computer is on the same subnet as the device, but can prove to be difficult if you have many subnets.

From the IP to MAC search screen, enter the IP address that you want to find and click “Search”.

If the IP address was discovered in any monitored device’s ARP cache, it will be displayed along with the device where it was discovered:

pathSolutions | TotalView

Poll frequency: 00:05:00
Last poll: 6/25/2018 11:24:52 AM
Network health: **DEGRADED (0.7%)**

Dashboard NLT Network VoIP Cloud Internet Predictors Search Search

Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools

Download IP, MAC, and ARP information to a spreadsheet Download IP, MAC, and ARP information updated as of: 6/25/2018, 9:59:18 AM Update

IP to MAC Search **MAC to Interface Search** MAC to IP Search Subnets VLAN

Use this tool to search all monitored ARP caches to locate a specific MAC address for a provided IP address or DNS name.

IP Address or DNS Name
10.0.0.26 Search

Use the following format: 192.168.1.12

10.0.0.26 was found

IP Address	MAC Address	ARP Cache
10.0.0.26	00-16-46-91-B1-40	Learned from the ARP cache on Syrah (10.0.0.1), interface #34
10.0.0.26	00-16-46-91-B1-40	Learned from the ARP cache on Ribolla (10.0.0.26), interface #1
10.0.0.26	00-16-46-91-B1-40	Learned from the ARP cache on ALSACE (10.0.0.39), interface #2

The MAC address will be displayed along with the device and interface where the MAC address was found in the device's ARP cache.

MAC to Interface Search

Locating where a MAC address exists on a switch port can be difficult if you have a lot of switches to query. This can easily be done on the MAC to Interface Search screen:

pathSolutions | TotalView

Poll frequency: 00:05:00
Last poll: 6/25/2018 11:24:52 AM
Network health: **DEGRADED (0.7%)**

Dashboard NLT Network VoIP Cloud Internet Predictors Search Search

Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools

Download IP, MAC, and ARP information to a spreadsheet Download IP, MAC, and ARP information updated as of: 6/25/2018, 9:59:18 AM Update

IP to MAC Search **MAC to Interface Search** MAC to IP Search Subnets VLAN

Use this tool to search all switch interfaces for a specific MAC address.

MAC Address
00-16-46-91-B1-40 Search

Use the following format: 00-00-00-00-00-00

Switch Name	Switch IP Address	Interface Number	Switch Interface Description	MAC Addresses	Interface Speed	Type
Grenache	10.0.0.27	Int #14	Fa0/13: FastEthernet0/13 (Microscope, Inc.)	2	100,000,000	ethernetCsmacd
Syrah	10.0.0.1	Int #16	Gi1/0/14: GigabitEthernet1/0/14	3	100,000,000	ethernetCsmacd
Burgundy	10.0.0.19	Int #25	25: 25 (Uplink to SBE-001)	39	1,000,000,000	ethernetCsmacd
Pinot	10.0.0.21	Int #25	25: 25	47	1,000,000,000	ethernetCsmacd

Enter the MAC address that you want to search for and click "Search". The MAC search will look for device MAC addresses (PCs, servers, phones, etc.) that are connected to switches.

If the MAC address is found on a switch, you will see the Switch Name, IP address and these other fields.

Notice that the MAC address was discovered on more than one interface. The "MAC Addresses" column will help you to determine how many MAC addresses exist on an interface. This is useful for determining if an interface is a switch to a switch trunk. If so, then more than one MAC address would exist on the link. If it is the interface where the device is physically connected to then there will only be one MAC address connected.

MAC to IP Search

If you have a MAC address and want to know what IP address it is associated with, use this “Mac to IP Search” tool:

pathSolutions | TotalView

Poll frequency: 00:05:00
Last poll: 6/25/2018 11:24:52 AM
Network health: **DEGRADED (0.7%)**

Dashboard NLT Network VoIP Cloud Internet Predictors Search Search

Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools

Download IP, MAC, and ARP information to a spreadsheet Download IP, MAC, and ARP information updated as of: 6/25/2018, 9:59:18 AM Update

IP to MAC Search **MAC to Interface Search** MAC to IP Search Subnets VLAN

Use this tool to search all monitored ARP caches to locate a specific IP address for a provided MAC address.

MAC Address

00-16-46-91-B1-40 Search

Use the following format: 00-00-00-00-00-00

00-16-46-91-B1-40 was found

MAC Address	IP Address	ARP Cache
00-16-46-91-B1-40	10.0.0.26	Learned from the ARP cache on Syrah (10.0.0.1) , interface #34
00-16-46-91-B1-40	10.0.0.26	Learned from the ARP cache on Ribolla (10.0.0.26) , interface #1
00-16-46-91-B1-40	10.0.0.26	Learned from the ARP cache on ALSACE (10.0.0.39) , interface #2

Enter the MAC address and click “Search”.

You should see the resulting IP address for the MAC address if it was found in any of the monitored devices’ ARP caches

The IP address will be displayed along with the device and interface where the IP address was found in the device’s ARP cache.

Subnets

The Subnets report discloses which subnets are in use on your network, and allows you to quickly determine which devices are associated with each subnet. Click on the “More” link under the Device Names column to learn which devices have an IP address configured to use that subnet.

pathSolutions | TotalView

Poll frequency: 00:05:00
Last poll: 6/25/2018 11:24:52 AM
Network health: **DEGRADED (0.7%)**

Dashboard NLT Network VoIP Cloud Internet Predictors Search Search

Path Map Diagram Gremlins Devices Favorites Issues Netflow Top-10 WAN Interfaces SD-WAN Tools

Download IP, MAC, and ARP information to a spreadsheet Download IP, MAC, and ARP information updated as of: 6/25/2018, 9:59:18 AM Update

IP to MAC Search MAC to Interface Search MAC to IP Search **Subnets** VLAN

Subnets in use

Subnet	Mask	Usable IP Addresses	Devices Using Subnet	Device Names
10.0.0.0	255.255.255.0	254	26	More...
10.0.2.0	255.255.255.0	254	1	More...
10.10.0.0	255.255.255.0	254	1	More...
10.20.0.0	255.255.255.0	254	2	More...
10.30.0.0	255.255.255.0	254	3	More...
10.30.10.0	255.255.255.0	254	1	More...
10.50.0.0	255.255.255.0	254	4	More...

VLAN Report

The VLAN report shows all VLANs associated with the device.


The screenshot shows the PathSolutions TotalView interface. At the top right, it displays system information: Poll frequency: 00:05:00, Last poll: 6/25/2018 11:24:52 AM, and Network health: DEGRADED (0.7%). The navigation bar includes Dashboard, NLT, Network, VoIP, Cloud, Internet, Predictors, and a search box. Below the navigation bar, there are tabs for Path, Map, Diagram, Gremlins, Devices, Favorites, Issues, Netflow, Top-10, WAN, Interfaces, SD-WAN, and Tools. A download link for IP, MAC, and ARP information is visible, along with an update button. The main content area shows a 'VLAN' report with a table containing the following data:

Device Name	IP Address	VLANs in use
Chardonnay	10.0.0.20	DEFAULT_VLAN
Syrah	10.0.0.1	default, HQ-Data, HQ-Voice, HQ-Transit, PSVoice, fddi-default, token-ring-default, fddinet-default, trnet-default
Pinot	10.0.0.21	DEFAULT_VLAN, VOIP_VLAN
Merlot	10.0.0.22	DEFAULT_VLAN, HQ-Voice
Muscat	10.0.0.23	DEFAULT_VLAN
Burgundy	10.0.0.19	DEFAULT_VLAN, HQ-Voice
Ribolla	10.0.0.26	default, fddi-default, token-ring-default, fddinet-default, trnet-default
Grenache	10.0.0.27	default, fddi-default, token-ring-default, fddinet-default, trnet-default
Bordeaux	10.0.0.28	DEFAULT_VLAN

Note: Cisco switches will show the VLANs configured on those switches. Other switches will only show VLANs if they are in use by a device on that VLAN on an interface.

VoIP Tab

VoIP reports and tools are all grouped now under the VoIP Tab, where you will find sub-tabs for phones, MOS, QoS, Calls, SIP-Trunks and Tools.

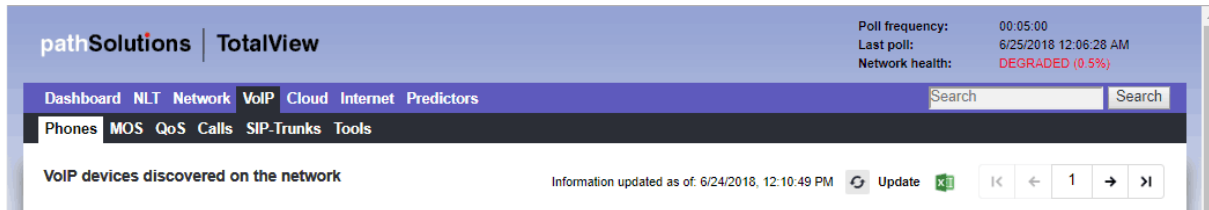

Phones Tab

The first tab in the VoIP section is the Phone tab. TotalView makes it easy to discover where all of your VoIP phones are connected to the network. The Phones tab shows each phone and the health of the connection to the network.

VoIP Device				Switch and interface where VoIP device is Connected						Peak Daily Error Rate	Peak Daily Utilizat		
IP Address	MFG	Platform	VLAN	PoE	Switch	Interface	Interface Description	MAC Addresses	Uptime		Duplex	Tx	Rx
10.0.0.57	Cisco	0	default	25.50 W	Syrah	Int #12	Gi1/0/10: GigabitEthernet1/0/10	1	81 days 06:40:39.74	0.000%	Full	0.004%	0.00
10.0.0.71	ShoreTel	9c8e9990a140	default	-	Syrah	Int #6	Gi1/0/4: GigabitEthernet1/0/4	1	81 days 06:40:44.11	0.000%	Full	0.005%	0.00
10.0.0.39	Cisco	0	default	-	Syrah	Int #24	Gi1/0/22: GigabitEthernet1/0/22	1	81 days 06:40:44.90	0.000%	Full	0.018%	0.01
10.0.0.26	Cisco	cisco WS-C2924-XL	default	-	Syrah	Int #16	Gi1/0/14: GigabitEthernet1/0/14	3	0 days 05:12:09.18	0.000%	Full	0.035%	0.03
	Aastra	-	HQ-Voice	-	Syrah	Int #26	Gi1/0/24: GigabitEthernet1/0/24	1	58 days 08:30:27.99	0.000%	Full	0.000%	0.00

The location of all VoIP phones in your network are detected by looking for the MAC address prefixes that VoIP phones use.

To learn the current location of phones, click the “Update” button to collect the bridge tables and ARP cache information.

In a few moments, you should see the phones in your environment along with the switch ports where they are connected.

If you notice that there is more than one MAC address on the interface, it would indicate that a PC is hooked up to the phone.


The error and utilization rates are shown for each switch interface to inform you of the health of these connections.

Note: If you have VoIP phones that are not showing up in the list, you can add device manufacturer OUIs (Organizationally Unique Identifier) to the OUIFilter.cfg file. Look in Appendix H for additional information on this.

Additionally, VoIP VLANs can be added to the VoiceVLAN.cfg file and any devices found on these VLANs will be added to this tab.

MOS Tab

The MOS tab displays the MOS graphs for each monitored device on the network:

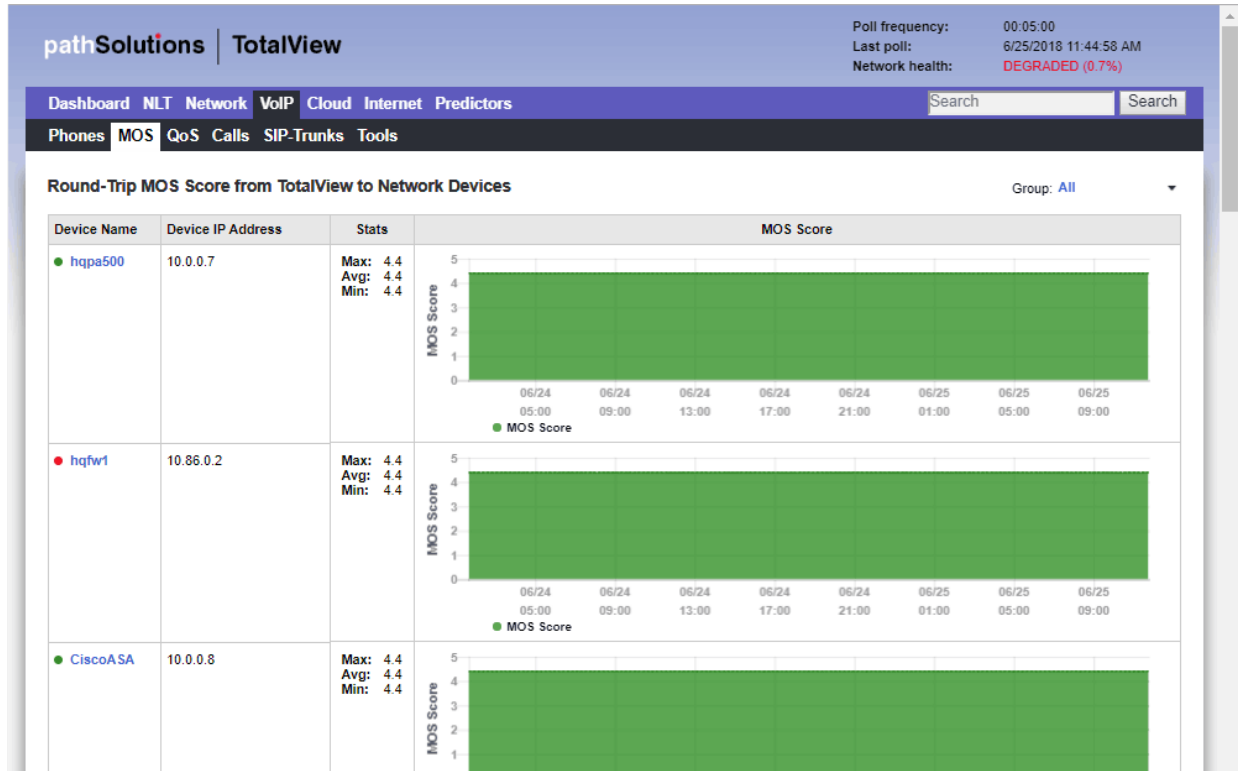

Device MOS Score, Latency, Jitter, and Packet Loss


TotalView is able to provide visibility into the DSCP, Packet Order, Latency, Jitter, Packet Loss, and MOS score for any monitored device.

To get this information from the MOS tab: select a device by Device Name, and a report for that device will be called that includes the MOS score, latency, jitter and packet Loss graphs.

During its communications with each monitored device, PathSolutions TotalView tracks the peak and average latency, as well as the jitter, packet loss and MOS score.

This creates the ability to monitor devices across a WAN or the Internet and know how stable the connection is.

This information is available below the Aggregate Peak utilization (and CPU and memory graphs if it is a Cisco device) on the device page:

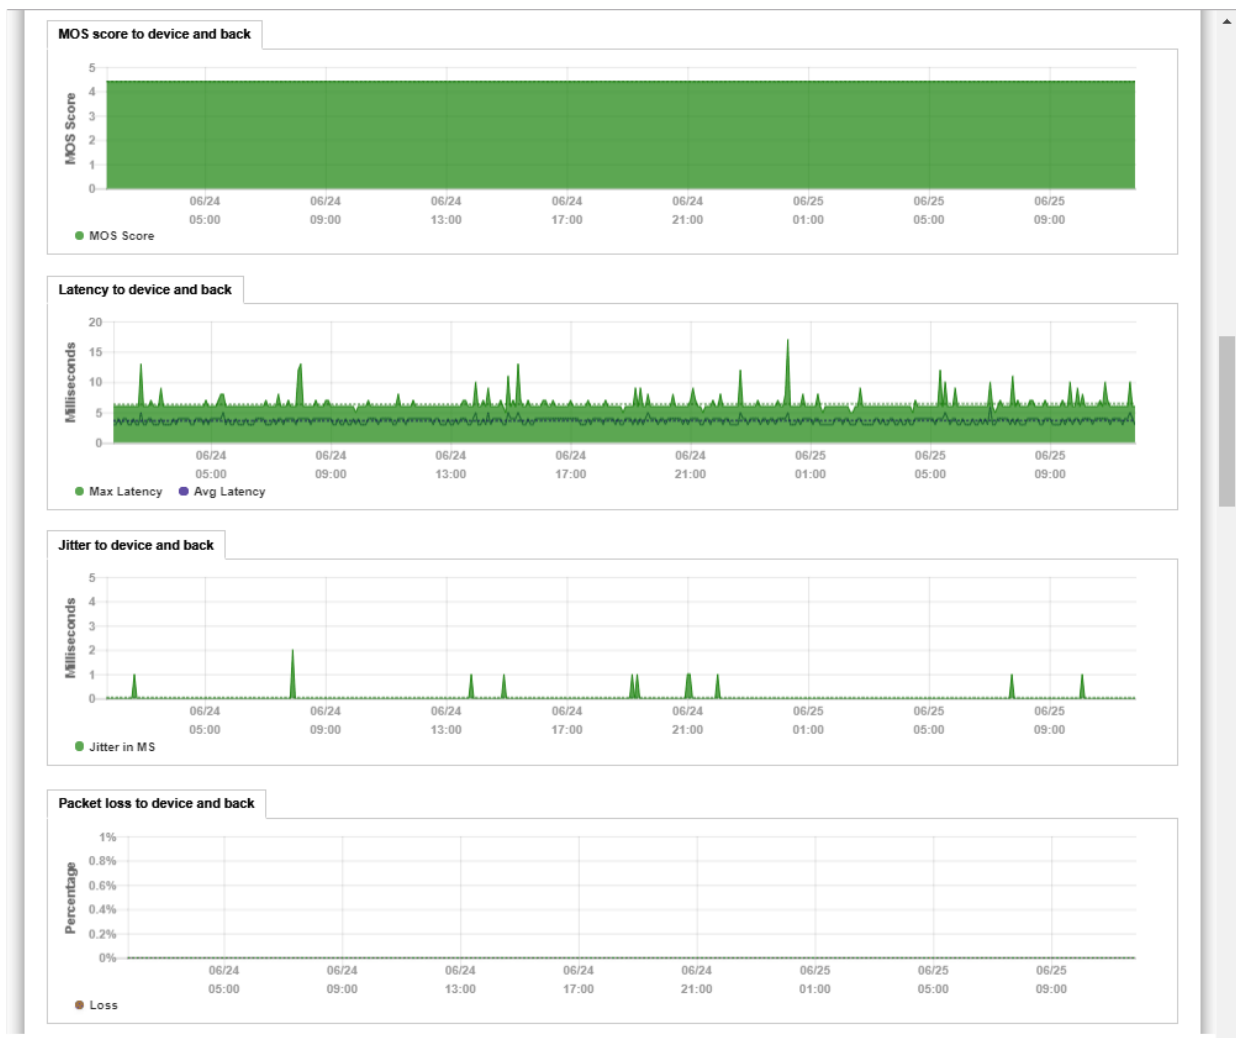


If at any point there is a spike in latency, jitter, or loss, the graph point can be clicked on to view additional information of inter-link information between all involved devices along the path.


QoS Tab: QueueVision®

The QoS tab reports on device names, descriptions, and daily utilization.

QueueVision shows the QoS queues configured on Cisco routers that have MQC (Modular QoS CLI) configured. This gives historical visibility into queue usage along a call path:

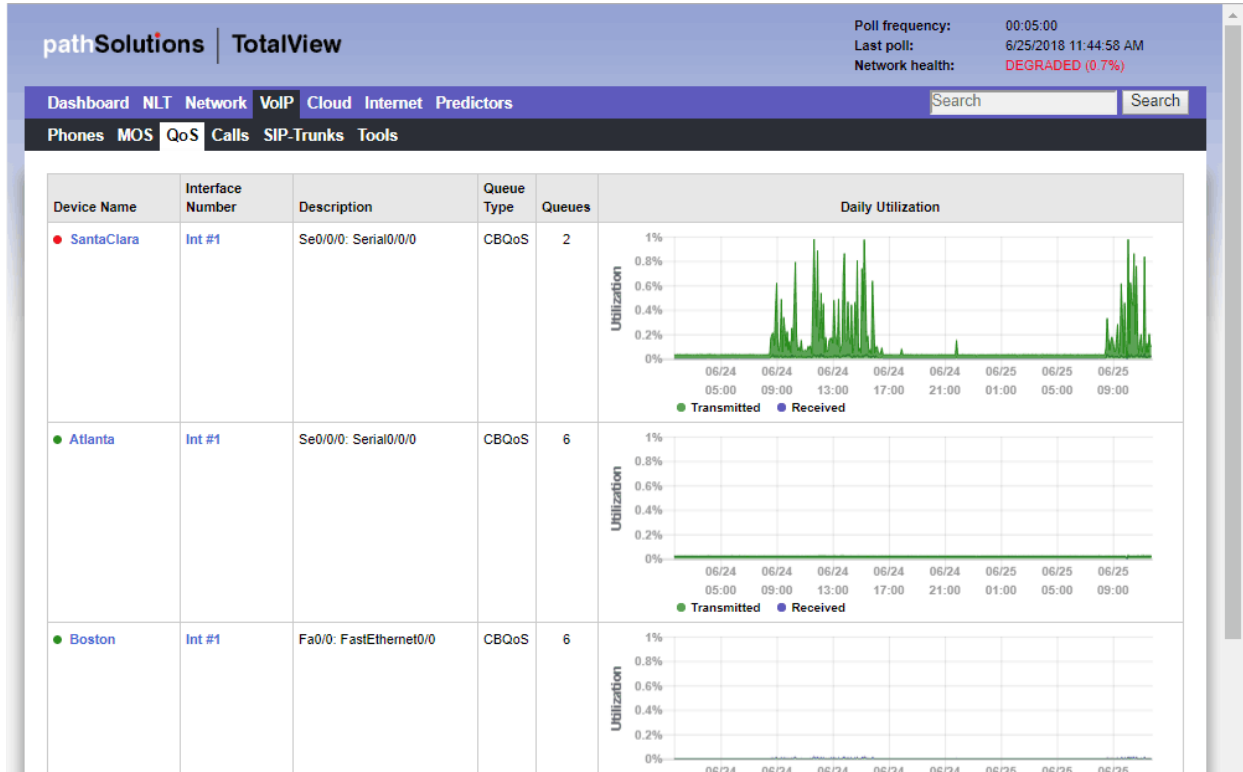

Inside a call path map, if a Cisco router configured for CBQoS is configured, it will display the queues in-line with the interface information.

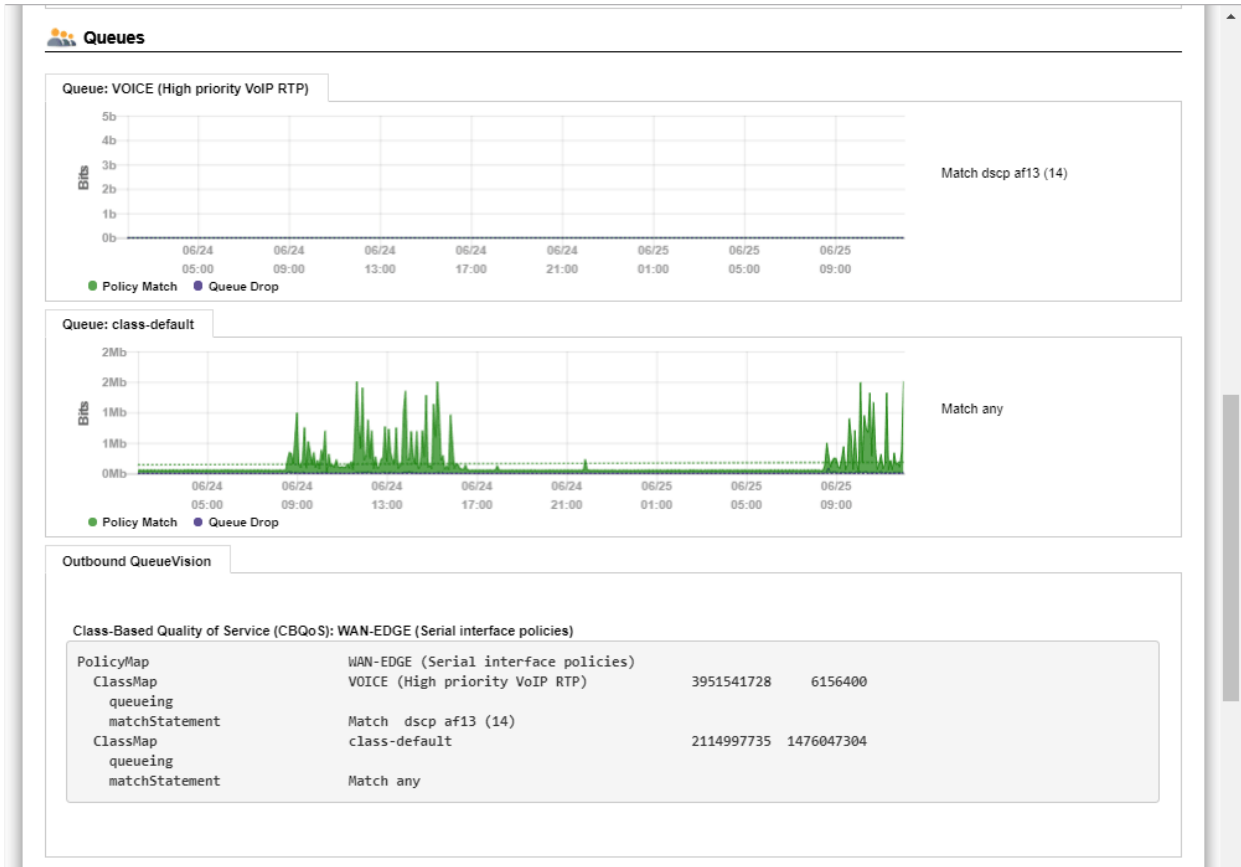

In the above example, it shows that there is a high-priority VoIP queue configured and a default queue.

Calls Tab

From the Calls sub-tab, you can generate a Call Path report between two points. Enter two IP addresses, and TotalView displays health and configuration information of every link involved in a call from a starting IP address to an ending IP address, or optionally other filters such as start and end dates, and then select search.

This provides a call path map and complete visibility into any problems that occurred on all involved links.

The screenshot shows the 'Calls' tab in the TotalView interface. At the top right, system status is displayed: Poll frequency: 00:05:00, Last poll: 5/22/2018 7:11:17 AM, and Network health: DEGRADED (0.5%). The navigation bar includes Dashboard, NLT, Network, VoIP, Cloud, Internet, and Predictors. Below this, there are sub-tabs for Phones, MOS, QoS, Calls, SIP-Trunks, and Tools. The 'Calls' sub-tab is active. The search area contains two 'Endpoint' sections. Each section has input fields for Extension, Name, IP Address, and Site (a dropdown menu currently set to 'All'). To the right of these fields are 'Start Date' and 'End Date' pickers, both set to 6-25-2018 12:00:00 am and 6-26-2018 11:05:08 am respectively. A 'Clear filter' button and a 'Search' button are located at the bottom right of the filter area.

Enter extension and date search information and click “Search”. The system will search through CDR records to find calls that match the search criteria:

The screenshot shows the same TotalView interface as above, but now displaying search results. The search criteria are: Extension: 116, Start Date: 6-25-2018 12:00:00 am, End Date: 6-26-2018 11:03:19 am. Below the search filters, a message reads 'Calls made that meet search criteria sorted by Time'. A table lists the results:

Time	Duration	Enpoint				Enpoint			
		Site	Name	Ext	IP Address	Site	Name	Ext	IP Address
5-21-2018 01:58:34 PM	00:00:15	● Headquarters	Tim Titus	116	10.30.0.51	● Headquarters	Andy Bohart	118	10.30.0.52
5-21-2018 01:58:09 PM	00:00:14	● Headquarters	Tim Titus	116	10.30.0.51	● Headquarters	Cindy Hauser	117	10.0.0.69
5-21-2018 01:57:21 PM	00:01:01	● Headquarters	Andy Bohart	118	10.30.0.52	● Headquarters	Steve Winter	115	10.0.0.67

You can then choose a matching call and it will show the legs of the call:

pathSolutions | **TotalView**

Poll frequency: 00:05:00
 Last poll: 5/22/2018 7:11:17 AM
 Network health: DEGRADED (0.5%)

Dashboard NLT Network **VoIP** Cloud Internet Predictors Search

Phones MOS QoS **Calls** SIP-Trunks Tools

Endpoint

Extension

Name

IP Address

Site All

Endpoint

Extension

Name

IP Address

Site All

Start Date 6-25-2018 12:00:00 am


End Date 6-26-2018 11:06:56 am

Hide filter

Calls made that meet search criteria sorted by Time

Time	Duration	Enpoint			Enpoint				
		Site	Name	Ext	IP Address	Site	Name	Ext	IP Address
5-21-2018 01:58:09 PM	00:00:14	● Headquarters	Tim Titus	116	10.30.0.51	● Headquarters	Cindy Hauser	117	10.0.0.69

Call Detail Information




Tim Titus
116

→

Packet Loss	Max Jitter	OverRuns	UnderRuns
● 0.00%	11 ms	0	0

→



Cindy Hauser
117

←


Packet Loss	Max Jitter	OverRuns	UnderRuns
● 0.00%	0 ms	0	0

←

If you click on “Call Path Mapping” for either leg, it will go to the Network/Path report and show the links, switches, and routers used to pass traffic between these two endpoints.

SIP-Trunks Tab

TotalView reports on the status, health, and performance of SIP Trunks on this tab:

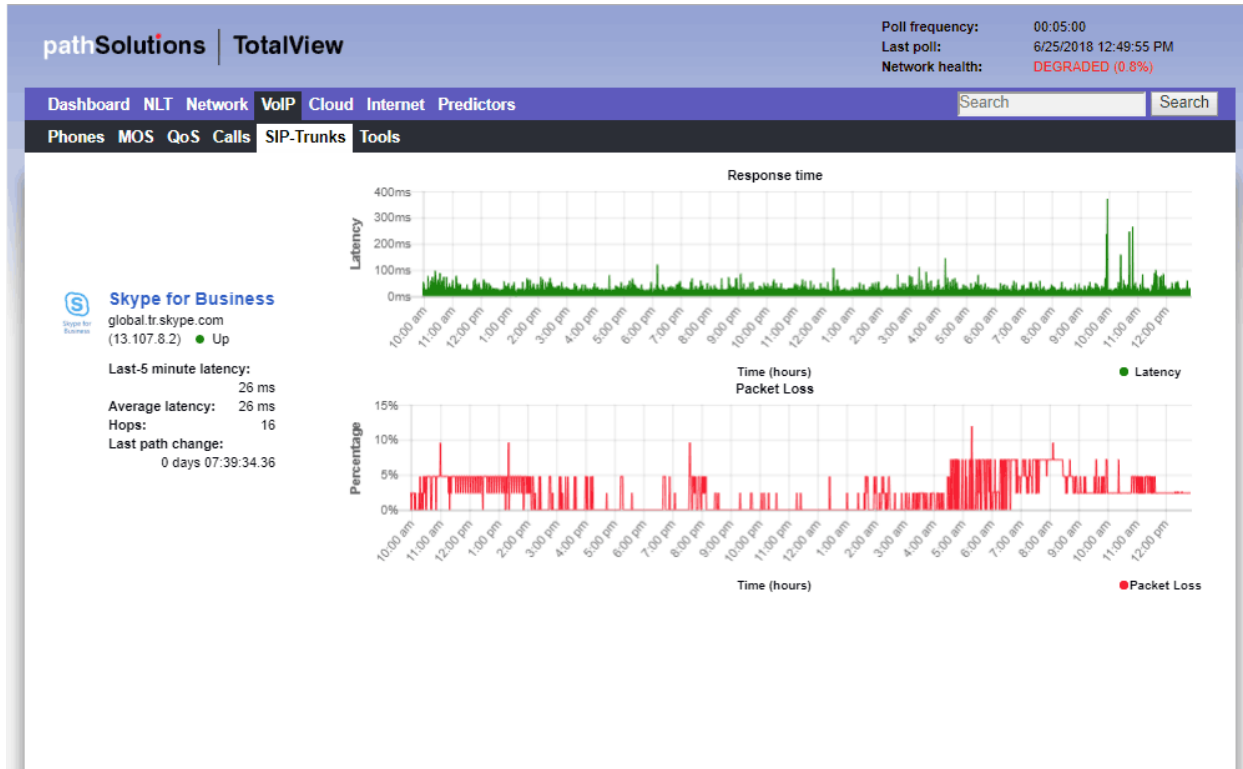

QueueVision also shows the match criteria to use each queue if you click on an interface.

The screenshot displays the PathSolutions TotalView interface for monitoring Skype for Business. At the top, the status bar shows a poll frequency of 00:05:00, a last poll time of 6/25/2018 12:49:55 PM, and a network health status of DEGRADED (0.8%). The navigation menu includes Dashboard, NLT, Network, VoIP, Cloud, Internet, and Predictors. The main content area is titled "Cloud Map to Skype for Business" and provides the following details:

- Skype for Business: global.tr.skype.com (13.107.8.2) - Up
- Last-5 minute latency: 26 ms
- Average latency: 26 ms
- Hops: 16
- Last path change: 0 days 07:39:34.36

Two performance graphs are shown:

- Response time:** A line graph showing latency in milliseconds (0ms to 400ms) over a 24-hour period. The latency is generally low, with a notable spike around 10:00 am.
- Packet Loss:** A line graph showing the percentage of packet loss (0% to 15%) over the same period. There are several peaks, with the highest reaching approximately 12% around 5:00 am.

Below the graphs is a network path diagram illustrating the route from the source to the destination. The path consists of 16 hops, with several nodes marked with question marks, indicating unknown or unmonitored components. A "Back" button is located at the bottom left of the interface.

TotalView GA 8 (9057) Copyright ©2018 PathSolutions License expires on 1/3/2019, licensed for 250000 interfaces Documentation

Tools Tab

Under the “Tools” sub-tab are tools that can be used to test and troubleshoot VoIP environments, specifically, under the Phone Locator and Phone Simulator tabs and Assessment sub-tabs.

Phone Locator

This is a tool to locate a phone on the network by entering the IP address.

The screenshot shows the 'Phone Locator' tool interface. At the top, the 'path Solutions | TotalView' logo is on the left, and system status is on the right: 'Poll frequency: 00:05:00', 'Last poll: 6/25/2018 12:59:51 PM', and 'Network health: DEGRADED (0.8%)'. Below this is a navigation bar with 'Dashboard', 'NLT', 'Network', 'VoIP', 'Cloud', 'Internet', and 'Predictors'. A search bar is on the right. Underneath, another navigation bar includes 'Phones', 'MOS', 'QoS', 'Calls', 'SIP-Trunks', and 'Tools'. The main content area has a sub-navigation bar with 'Phone Locator', 'Call Simulator', and 'Assessment'. The 'Phone Locator' tab is active. The tool's purpose is described: 'Use this tool to search all monitored ARP caches to locate the switch interface that has MAC address for a provided IP address with the fewest interfaces'. An 'IP Address' input field contains '10.0.0.7' and a 'Search' button. Below the input, it says 'Use the following format: 192.168.1.12' and provides an example: '10.0.0.7 is connected to the Syrah switch Interface #15 GigabitEthernet1/0/13.' At the top right of the main area, it says 'IP, MAC, and ARP information updated as of: 6/25/2018, 9:59:18 AM' with an 'Update' button.


Call Simulator

The Call Simulator Tool and Call Simulator Batch Tool are programs that run on a computer where you would like to test a VoIP call. See the section “VoIP Programs” (on page 105) for more details.

The screenshot shows the 'Call Simulator' tool interface. It features the same top navigation and system status as the previous screenshot. The sub-navigation bar has 'Phone Locator', 'Call Simulator', and 'Assessment', with 'Call Simulator' being the active tab. The main content area describes two tools: 'VoIP, Video, and Data test tool' and 'Batch process generator for the Call Simulator'. Each has a corresponding 'Download' button: 'Download Call Simulator' and 'Download Call Simulator Batch Tool'. Below these, there are links for 'Download Call Simulation client (email link)' and 'Download Call Simulator Batch Tool (email link)'. The top right of the main area shows the same update information: 'IP, MAC, and ARP information updated as of: 6/25/2018, 9:59:18 AM' with an 'Update' button.

Assessment

The PathSolutions TotalView assessment module also gives you the ability to acutely analyze your bandwidth constrained links and their QoS configuration from the “Assessment” sub-tab. You can download and print a Comprehensive Assessment Report by clicking on the download button.

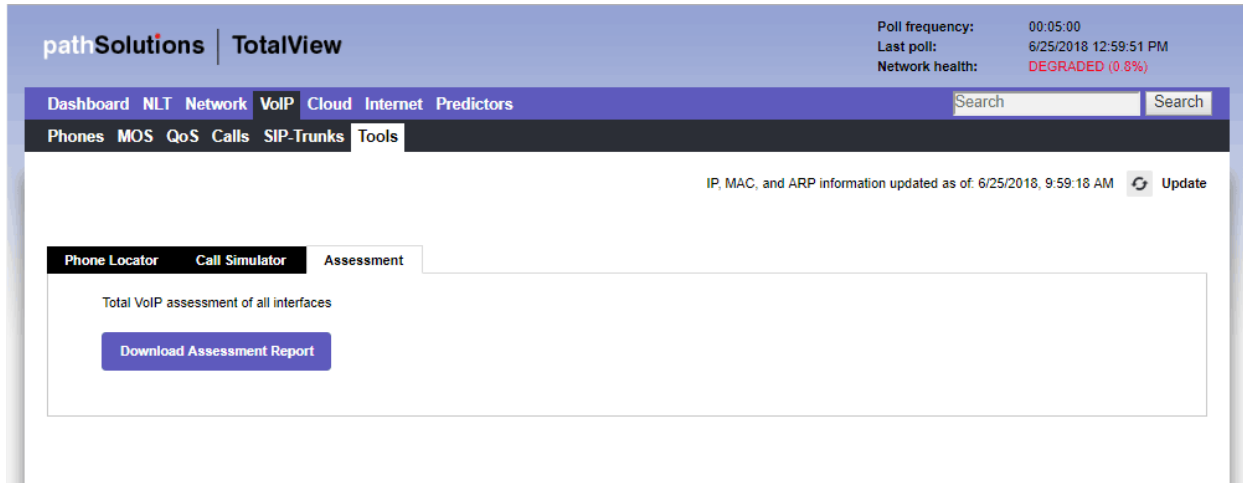


This is a single downloadable report that includes information from many different parts of the system. This can be used as a complete VoIP assessment of network conditions and errors.

Cloud Service Monitoring Tab

On the Cloud tab, a chart shows the overall performance to cloud services, as well as disclose the route tree used to reach the services. The response times and packet loss are graphed.



Select a device and you will receive that device's cloud path map, with packet loss and response time graphs:

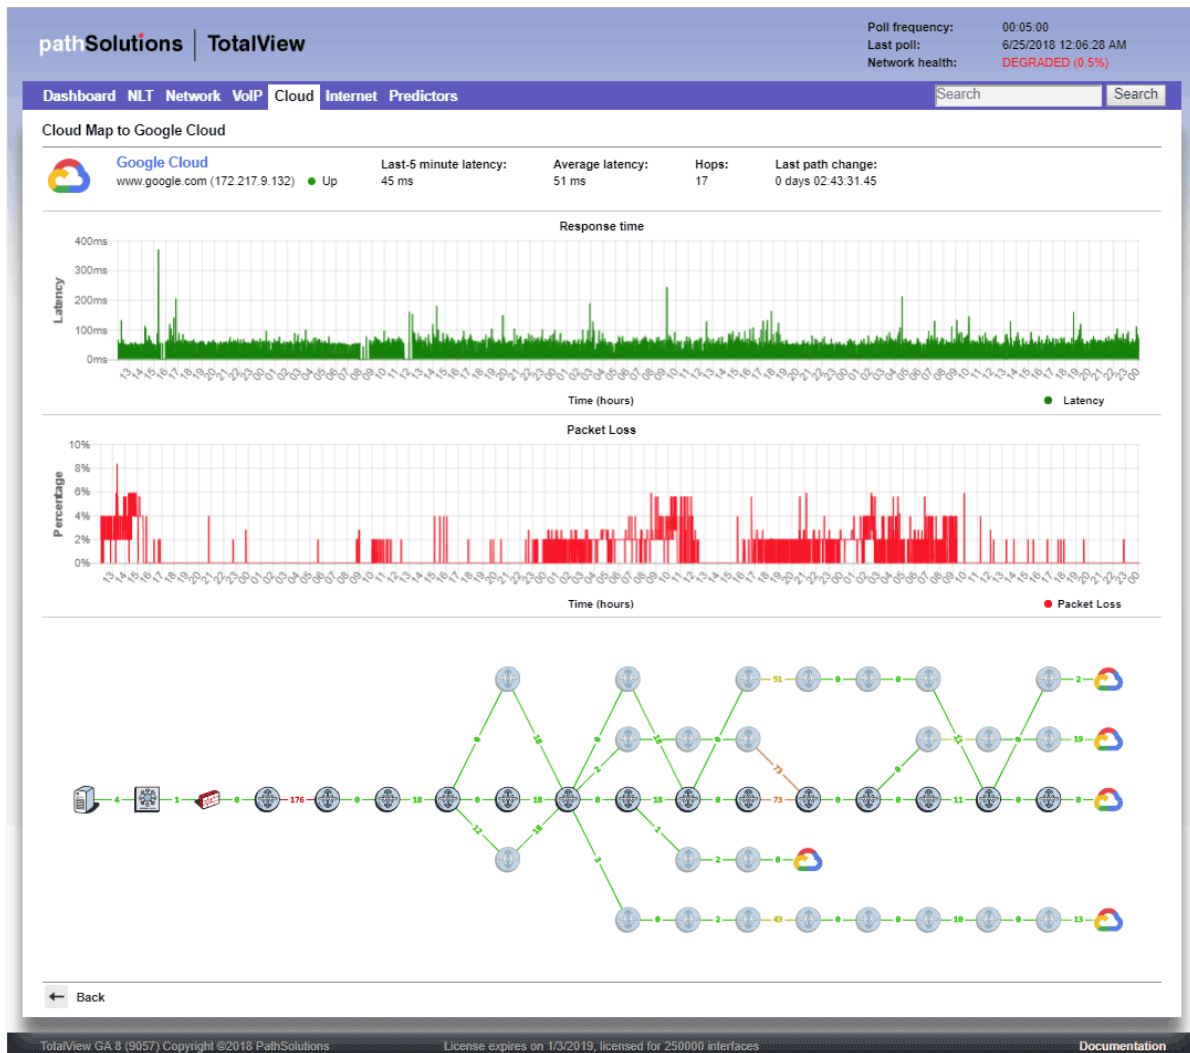

Internet Tab

On the “Internet” tab, an Internet Health report shows you the status and health of all elements required for reliable Internet connectivity. A Network Prescription™ is included beneath the Internet Health summary.

The screenshot displays the PathSolutions TotalView interface for the Internet tab. At the top right, it shows system metrics: Poll frequency: 00:05:00, Last poll: 6/25/2018 1:09:55 PM, and Network health: DEGRADED (0.8%). The navigation bar includes Dashboard, NLT, Network, VoIP, Cloud, Internet, and Predictors. The main content area is titled 'Internet Health' and lists three status items: Local DNS status: UP, Remote DNS status: UP, and Internet connectivity: UP. Below this is a network diagram showing a sequence of icons representing network components connected by green lines. The hop counts between these components are: 14 (server to DNS), 0 (DNS to gateway), 1 (gateway to edge), 6 (edge to core), 0 (core to core), 6 (core to core), 0 (core to core), 5 (core to core), 0 (core to core), 4 (core to core), 0 (core to core), and 1 (core to cloud). A 'Prescription' section below the diagram indicates 'Internet is Healthy' and provides the explanation: 'DNS is responding both locally and remotely, and connectivity is valid to the cloud.'

The Network Prescription™ Heuristics Engine gives an analysis of what the problem is (if any) connecting to the Internet in plain English.

Predictors Tab

On the new Predictors tab, TotalView provides these forward-looking prediction reports about your network:

Cabling Predictor – This report shows interfaces that have had to perform single-bit error correction on received frames. Interfaces that have symbol Errors showing on the interface are sorted by Symbol Errors.

A Symbol Error indicates that the Ethernet chipset had to do single-bit error correction to fix a physical layer problem before passing the frame to layer-2.

Having a few Symbol Errors is normal for most environments, but if you have a significant number of Symbol Errors, a physical layer problem exists that should be fixed before frames are dropped.

Device Name	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization		Symbol Errors
				Tx	Rx	
Chardonnay	Int #23	23: 23	0.000%	0.032%	0.031%	17,635
Pinot	Int #19	19: 19	0.000%	0.216%	0.059%	9
Pinot	Int #14	14: 14	0.000%	0.081%	0.073%	8
Burgundy	Int #23	23: 23	0.000%	0.006%	0.000%	7
Pinot	Int #1	1: 1	0.000%	0.010%	0.009%	3

Bandwidth Predictor – This report discloses interfaces that will hit 100% utilization based on their past performance.

Device Name	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization		Interface Speed	Daily Utilization Slope		Prediction Date
				Tx	Rx		Tx	Rx	
SantaClara	Int #1	Se0/0/0: Serial0/0/0	6.770%	98.399%	4.050%	1,536,000	0.0829	0.0027	Jul 31, 2018 22:05:19
RuckusAP	Int #20	wlan8: wlan8	0.000%	8.313%	0.248%	10,000,000	0.0247	0.0008	Nov 11, 2018 23:12:49
DallasRtR	Int #2	Se0/1/0: Serial0/1/0	0.090%	34.785%	34.792%	1,536,000	0.0197	0.0196	Dec 17, 2018 18:02:55
SanAntonioRTR	Int #1	Se0/1/0: Serial0/1/0	8.331%	34.790%	34.783%	1,536,000	0.0196	0.0197	Dec 17, 2018 18:02:55
DallasRtR	Int #1	Se0/0/0: Serial0/0/0	0.000%	34.641%	34.648%	1,536,000	0.0160	0.0167	Jan 18, 2019 23:57:14

It will do a forward prediction based on the trend slope to determine when the interface will reach 100% utilization so you have advance warning of when you will run out of bandwidth.

VoIP Assessment Features

The VoIP Assessment features are the Phones, Path, Assessment, and MOS tabs. In the Tools tab, the VoIP Tools sub-tab is also available.

Phones Tab

The PathSolutions TotalView makes it easy to discover where all of your VoIP phones are connected to the network. The Phones tab shows each phone and the health of the connection to the network.

pathSolutions | TotalView

Poll frequency: 00:05:00
 Last poll: 6/25/2018 12:06:28 AM
 Network health: DEGRADED (0.5%)

Dashboard NLT Network **VoIP** Cloud Internet Predictors

Phones **MOS** QoS Calls SIP-Trunks Tools


VoIP devices discovered on the network Information updated as of: 6/24/2018, 12:10:49 PM [Update](#)

VoIP Device					Switch and interface where VoIP device is Connected					Peak Daily Error Rate	Duplex	Peak Daily Utilizat	
IP Address	MFG	Platform	VLAN	PoE	Switch	Interface	Interface Description	MAC Addresses	Uptime			Tx	Rx
10.0.0.57	Cisco	0	default	25.50 W	Syrah	Int #12	Gi1/0/10: GigabitEthernet1/0/10	1	81 days 06:40:39.74	0.000%	Full	0.004%	0.00
10.0.0.71	ShoreTel	9c8e9990a140	default	-	Syrah	Int #6	Gi1/0/4: GigabitEthernet1/0/4	1	81 days 06:40:44.11	0.000%	Full	0.005%	0.00
10.0.0.39	Cisco	0	default	-	Syrah	Int #24	Gi1/0/22: GigabitEthernet1/0/22	1	81 days 06:40:44.90	0.000%	Full	0.018%	0.01
10.0.0.26	Cisco	cisco WS-C2924-XL	default	-	Syrah	Int #16	Gi1/0/14: GigabitEthernet1/0/14	3	0 days 05:12:09.18	0.000%	Full	0.035%	0.03
	Aastra	-	HQ-Voice	-	Syrah	Int #26	Gi1/0/24: GigabitEthernet1/0/24	1	58 days 08:30:27.99	0.000%	Full	0.000%	0.00
10.10.0.10	Dell Inc.	-	HQ-Voice	-	Syrah	Int #5	Gi1/0/3: GigabitEthernet1/0/3 (Fred Server)	1	16 days 06:05:41.21	0.000%	Full	0.023%	0.01
	Polycom		DEFAULT_VLAN	6.49 W	Burgundy	Int #15	15: 15 (to Atlanta Port fa0/0)	1	187 days 05:32:43.70	0.000%	Full	0.006%	0.00
	Polycom		DEFAULT_VLAN	6.49 W	Burgundy	Int #24	24: 24	1	58 days 08:43:53.20	0.000%	Full	0.006%	0.00
10.0.0.69	ShoreTel		DEFAULT_VLAN	6.49 W	Burgundy	Int #8	8: 8	1	187 days 05:33:43.20	0.000%	Full	0.006%	0.00
10.0.0.67	ShoreTel		DEFAULT_VLAN	6.49 W	Burgundy	Int #10	10: 10	1	187 days 05:33:46.70	0.000%	Full	0.006%	0.00

Records 1-10 of 16 displayed (10 per page)
2 pages


Path Tab

The Call Path feature displays health and configuration information of every link involved in a call from a starting IP address to an ending IP address. This provides unprecedented visibility into any problems that previously occurred on all involved links.

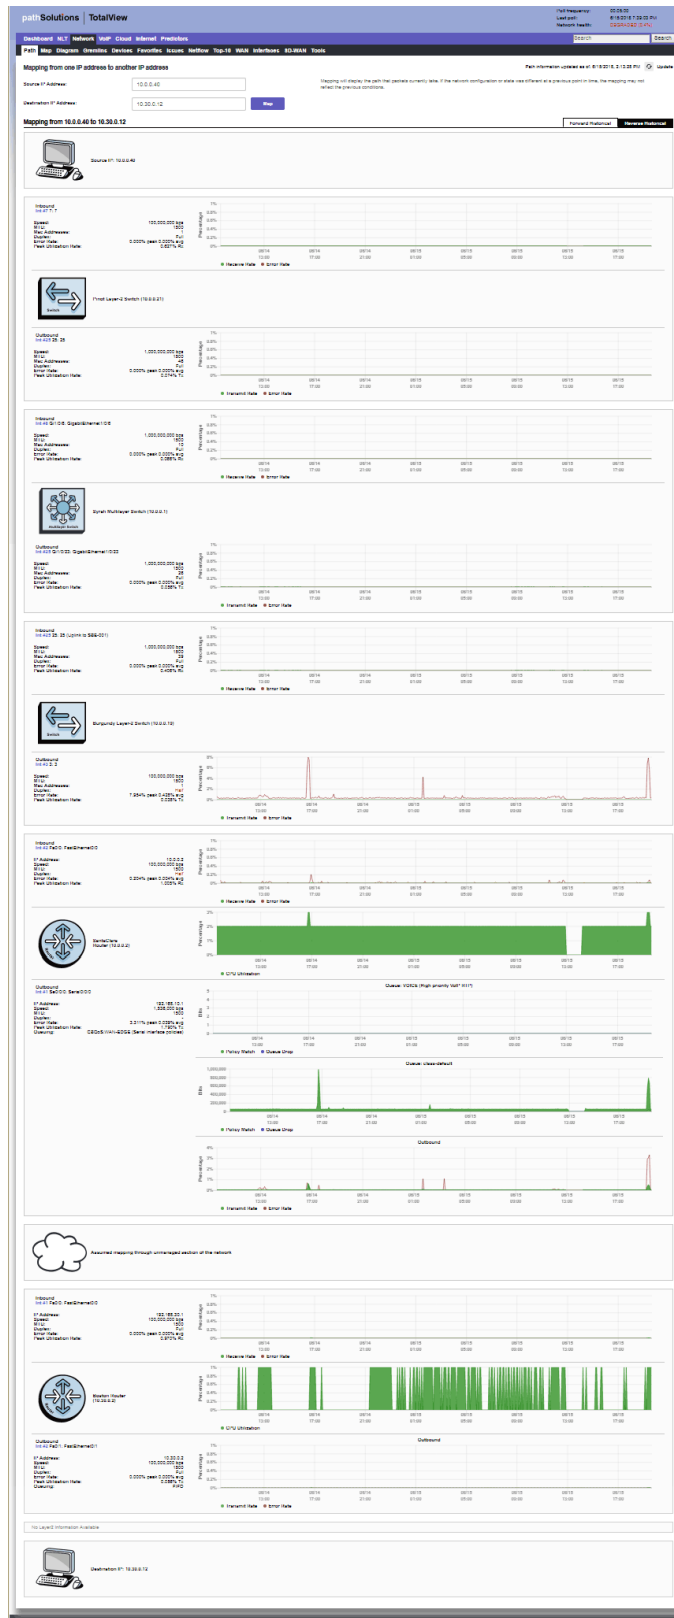


QueueVision®

QueueVision shows the QoS queues configured on Cisco routers that have Class Based QoS (CBQoS) configured. This gives historical visibility into queue usage along a call path:

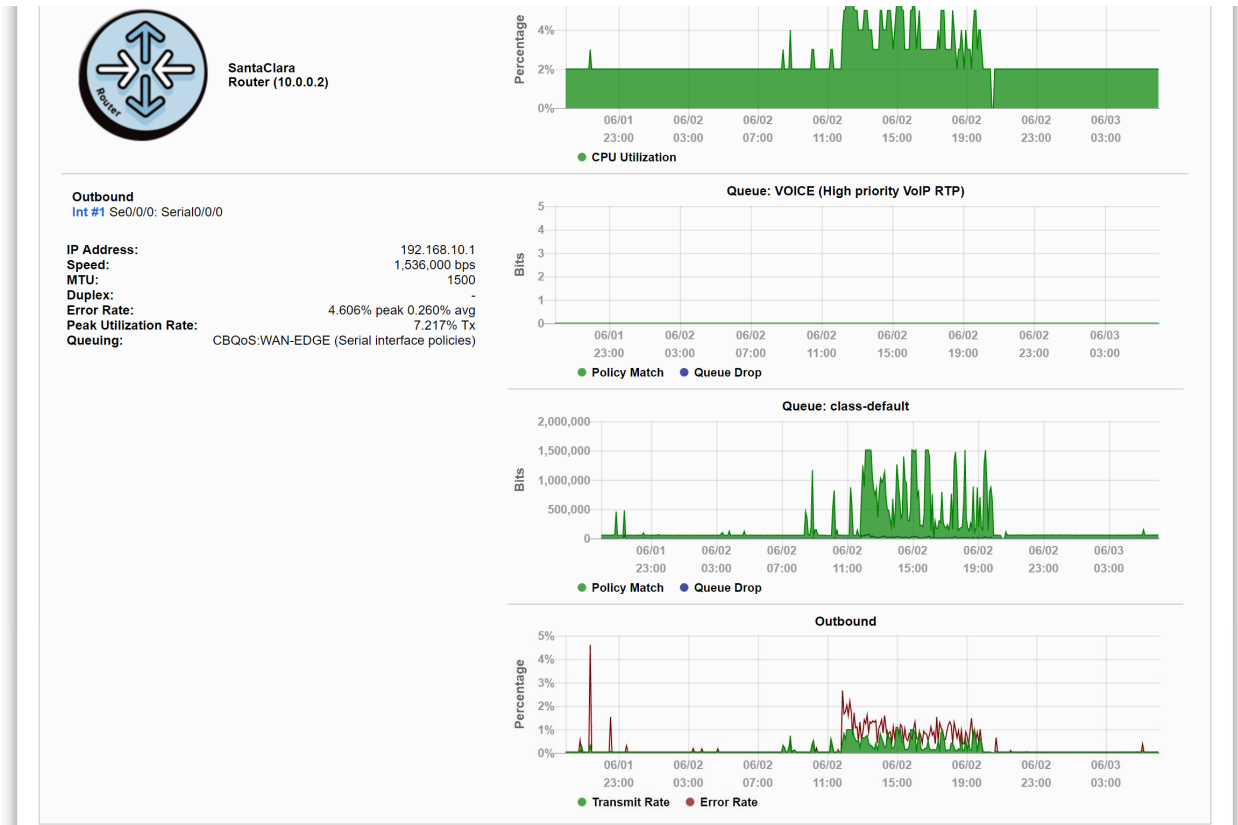


QueueVision also shows the match criteria to use each queue if you click on the interface:

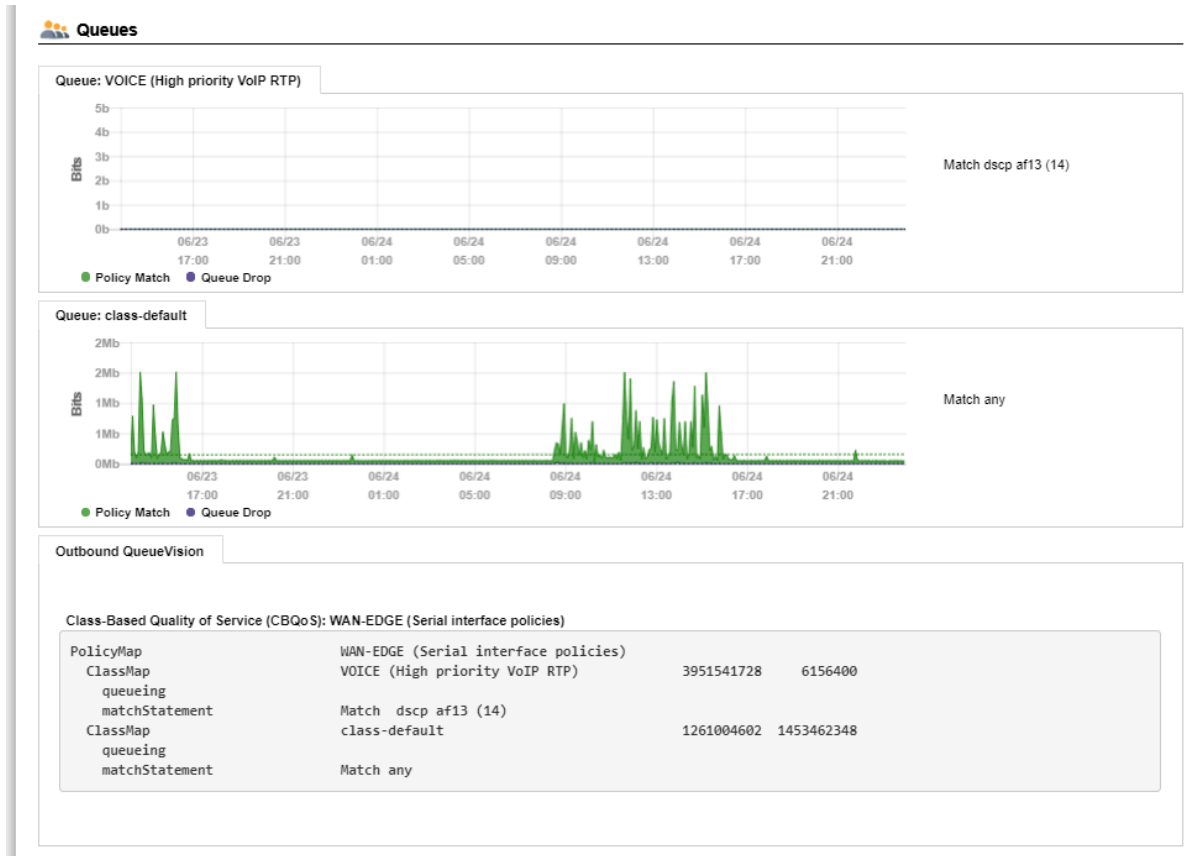

Assessment Tab

The PathSolutions TotalView assessment module also gives you the ability to acutely analyze your bandwidth constrained links and their QoS configuration from the Assessment Sub-Tab. You can print a comprehensive Assessment Report by clicking on the download button.

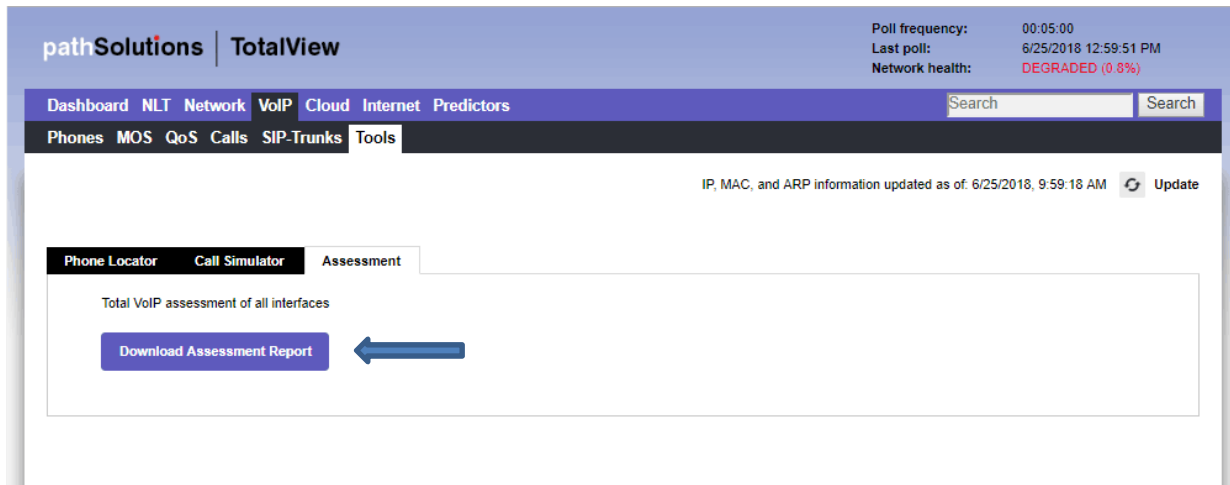

The screenshot shows the PathSolutions TotalView interface. At the top, the logo 'pathSolutions | TotalView' is on the left, and system status is on the right: 'Poll frequency: 00:05:00', 'Last poll: 6/25/2018 12:59:51 PM', and 'Network health: DEGRADED (0.8%)'. Below the logo is a navigation bar with tabs: 'Dashboard', 'NLT', 'Network', 'VoIP', 'Cloud', 'Internet', and 'Predictors'. Underneath is another set of tabs: 'Phones', 'MOS', 'QoS', 'Calls', 'SIP-Trunks', and 'Tools'. A search bar is on the right. Below the navigation is a sub-header: 'IP, MAC, and ARP information updated as of: 6/25/2018, 9:59:18 AM' with an 'Update' button. The main content area has three sub-tabs: 'Phone Locator', 'Call Simulator', and 'Assessment'. The 'Assessment' tab is active, showing 'Total VoIP assessment of all interfaces' and a blue button labeled 'Download Assessment Report'. A blue arrow points to the right of this button.

Device Latency, Jitter, Loss, and MOS Score

TotalView is able to provide visibility into the DSCP, Packet Order, Latency, Jitter, Packet Loss, and MOS score for any monitored device.

With this feature, you can monitor network devices that are in remote offices and have continuous visibility into the capabilities of the connection to that office.

Power over Ethernet Monitoring (PoE)

PoE allows you to watch the status and monitor the power usage for your PoE switches to make sure that you are not getting close to limitations of the switch. It also monitors the power draw for each port on the switch so you can determine where high-power drawing devices are connected to and quickly determine any power faults.

Note: PoE Historical Utilization can be optionally tracked over time by enabling data retention of PoE stats. This permits organizations to track their power usage and generate reports showing when and where additional power is being drawn from PoE switches. See Appendix B on how to enable reporting and how to extract data from the database.

The screenshot shows the PathSolutions TotalView interface. At the top right, it displays system information: Poll frequency: 00:05:00, Last poll: 6/25/2018 12:36:28 AM, and Network health: DEGRADED (0.5%). The navigation bar includes Dashboard, NLT, Network, VoIP, Cloud, Internet, Predictors, and a search box. Below this is a secondary navigation bar with Path, Map, Diagram, Gremlins, Devices, Favorites, Issues, Netflow, Top-10, WAN, Interfaces, SD-WAN, and Tools. A status bar shows device health: Healthy (green), Suppressed (yellow), Issue (red), and Comm fail (red with question mark), along with a Collapse All button. The main content area is titled 'Power Supply (PSU)' and contains a table with columns: Device Name, Device IP Address, Group, Status, Rating (Watts), Consumption, % Power Utilization, and Alarm Threshold. The table is divided into sections for HQ-Firewall (3 devices) and HQ (21 devices). The HQ-Firewall section lists hqpa500, hqfw1, and CiscoASA. The HQ section lists various wine-related devices like Chardonnay, Syrah, Pinot, Merlot, Muscat, Burgundy, Ribolla, Grenache, Riesling, Baileys, and BarleyWine, with their respective IP addresses, status, power ratings, and consumption levels.


Device Name	Device IP Address	Group	Status	Rating (Watts)	Consumption	% Power Utilization	Alarm Threshold
HQ-Firewall (3 devices)							
hqpa500	10.0.0.7	-	-	-	-	-	-
hqfw1	10.86.0.2	-	-	-	-	-	-
CiscoASA	10.0.0.8	-	-	-	-	-	-
HQ (21 devices)							
Chardonnay	10.0.0.20	-	-	-	-	-	-
Syrah	10.0.0.1	1	On	780 W	8 W	1%	-n/a-
Pinot	10.0.0.21	-	-	-	-	-	-
Merlot	10.0.0.22	-	-	-	-	-	-
Muscat	10.0.0.23	-	-	-	-	-	-
Burgundy	10.0.0.19	1	On	406 W	29 W	7%	80%
Ribolla	10.0.0.26	1	On	370 W	0 W	0%	-n/a-
Grenache	10.0.0.27	-	-	-	-	-	-
Riesling	10.0.0.29	-	-	-	-	-	-
Baileys	10.0.0.32	1	On	370 W	0 W	0%	-n/a-
BarleyWine	10.0.0.33	-	-	-	-	-	-

VoIP Programs

These are tools that can be used to test and troubleshoot VoIP environments.

VoIP Call Simulator Tool

This is a stand-alone program and available to download from the TotalView VoIP Tab, Tools section, under "Call Simulator". Download the program, then click on the downloaded program to start it:

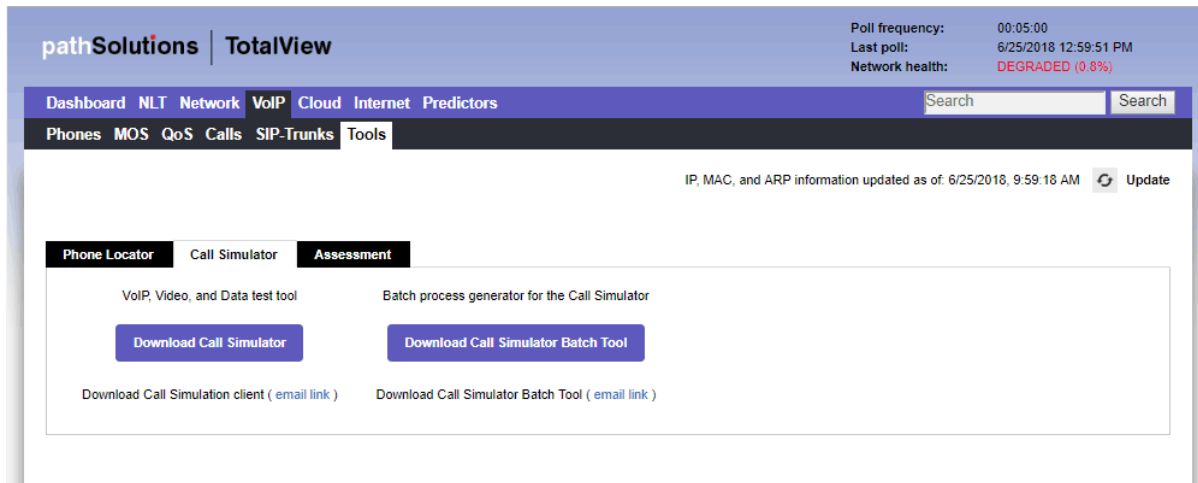

A VoIP Call Simulation Client is provided to help assess the capability of your network. Various numbers of calls can be simulated and the performance of the network can be evaluated during the simulation.

The Call Simulator Tool will send VoIP formatted ICMP ping packets to any IP address endpoint. This permits you to simulate a VoIP phone call to any LAN or remote IP address without having to set up software on the remote IP endpoint.

When the Call Simulator is initially run on a computer it will ask for the IP address and port number for the PathSolutions TotalView server. This is done for licensing as well as to seed the program with the server and port for performing call path mappings:

The dialog box is titled "Enter the IP and port for VoIP Monitor". It contains two input fields: "Server address" with the value "10.100.36.156" and "Server port" with the value "8084". At the bottom, there are two buttons: "OK" and "Cancel".

Once the validation check is complete, you should see the program ready to start.


End-to-End Testing

You should be able to enter the IP address of the remote device or location that you desire to test to and choose the codec to simulate. Click “Start” to start the simulation. This will perform an end-to-end test to the remote location.

Note: If you choose an IP phone as the destination, you should simulate only one call at a time to that location. IP phones tend to have very small CPUs and cannot handle more than 2 calls worth of traffic before they start to discard packets.

Any remote location that responds to a PING (ICMP ECHO) can be used as a destination for testing.

You can choose to optionally tag the packets with a DSCP setting.

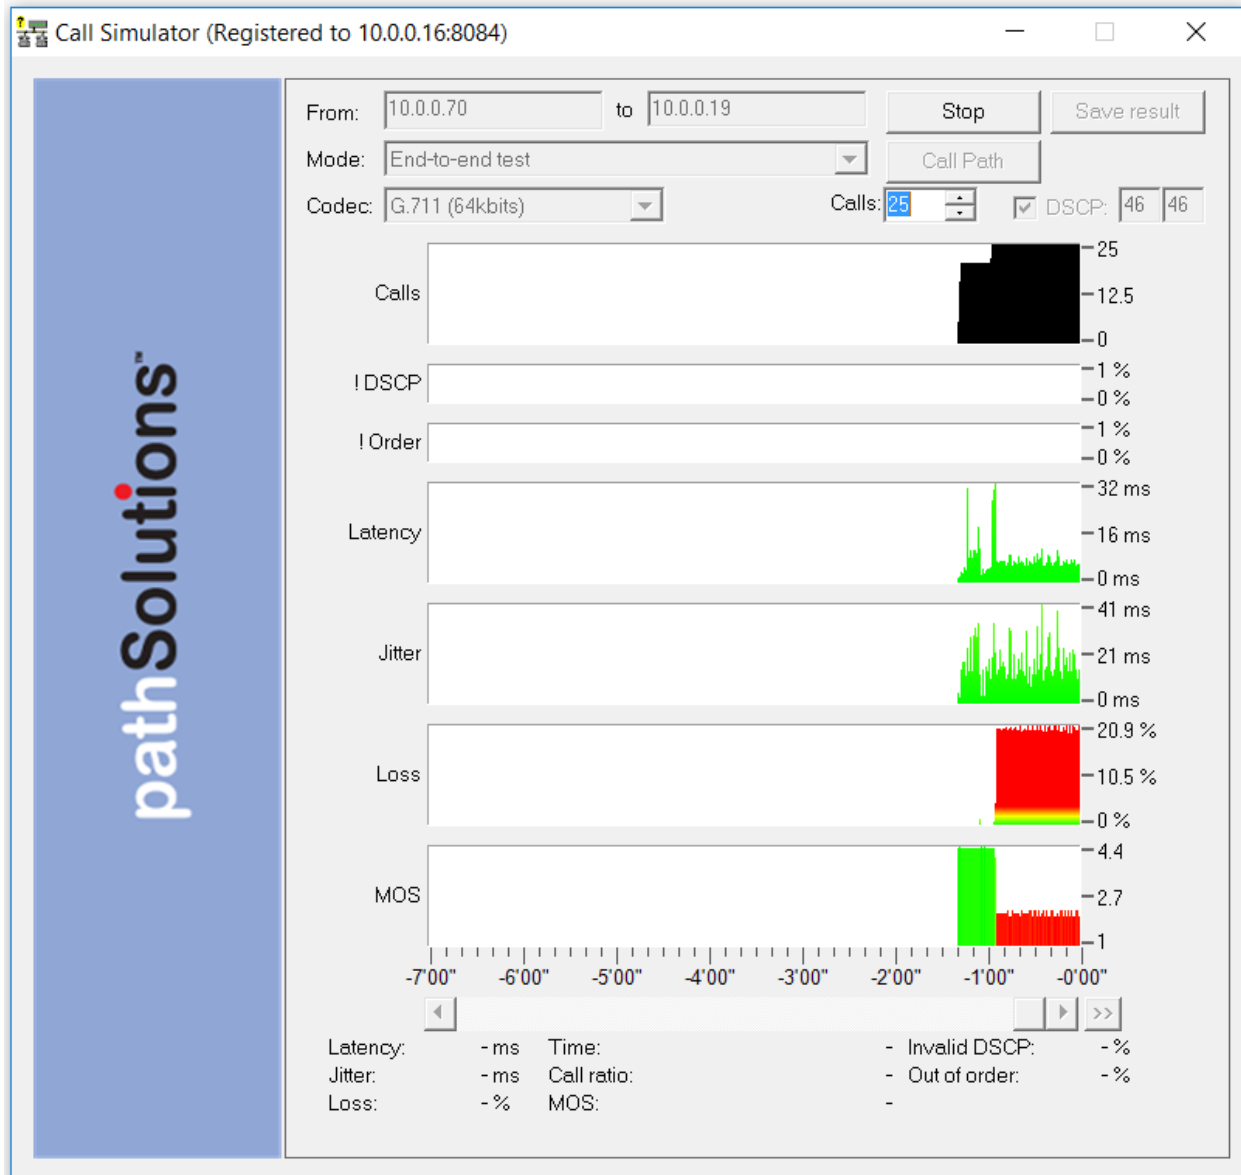


Note: Your network configuration may strip this DSCP tagging and apply a different tag to the packets. You may choose to deploy a packet analyzer to validate that the network configuration is not stripping the DSCP tagging.

Note: If you intend to load a network to saturation to test for WAN stability, it is advised to use the IP address of a router, switch, or server as the destination. Those devices tend to have enough spare CPU cycles to handle processing large loads of traffic.

Note: Some devices will strip the DSCP tagging on their responses. Cisco routers have been validated to preserve the DSCP tagging on their responses. Other devices may have to be checked to see if they preserve or strip the tagging to insure that the DSCP is preserved bi-directionally.

During a call test, the number of calls can be ramped up to load the network and determine how many calls can reliably be handled to a destination.

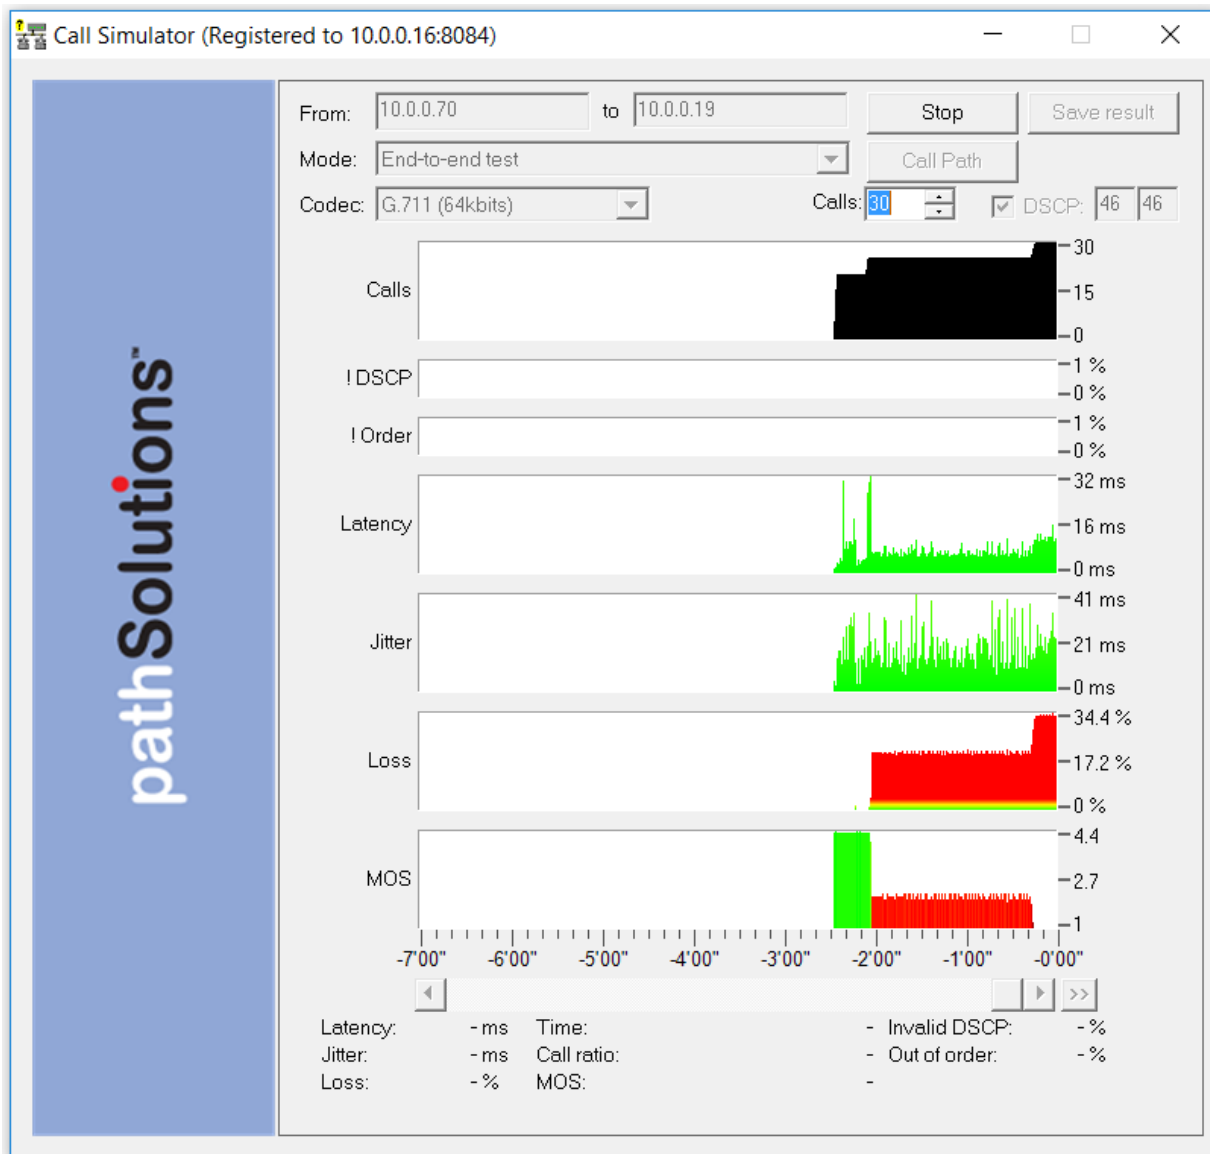


Additional details about any point in time can be seen by hovering over the graph element with the mouse.

- **DSCP loss historical tracking:** If DSCP is lost during a test, TotalView displays when it was lost so it can be correlated with network events to determine the cause.
- **Out of order reception historical tracking:** If packets arrive out of order, TotalView tracks when it occurred.


Link Troubleshooting

The Link Troubleshooting mode can be used to test packet stability over a number of router hops and is typically used to test stability outside of a VPN tunnel to determine where packets are being lost or delayed.

Enter the IP address of the destination to test and click "Start". The program will trace the route to the destination and then start testing:

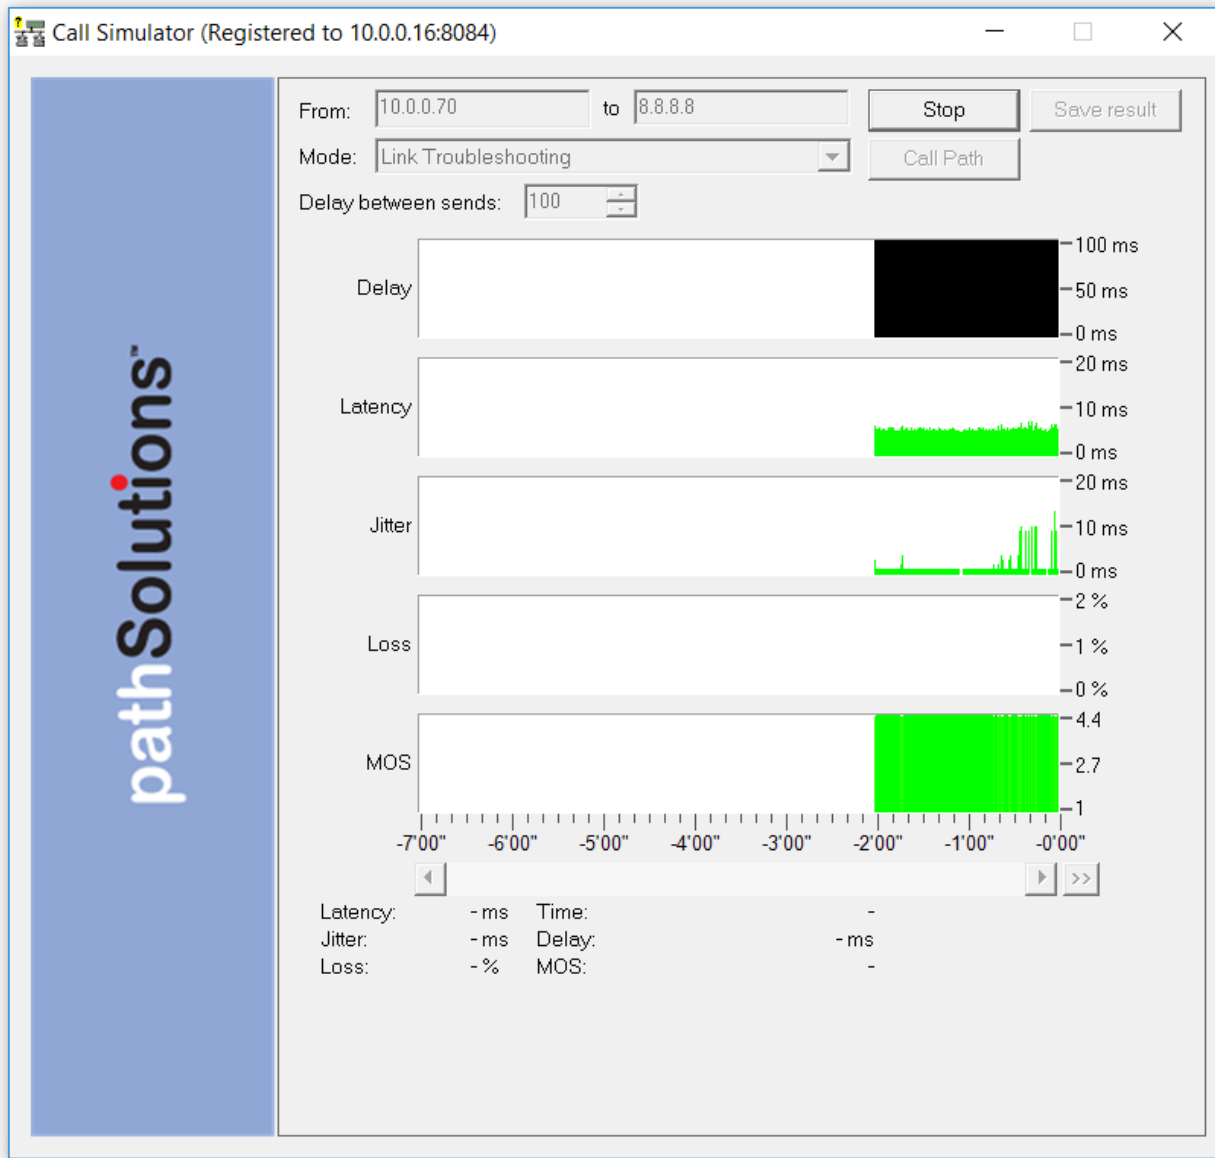

As shown below, you can determine who owns or manages routers along the Internet.

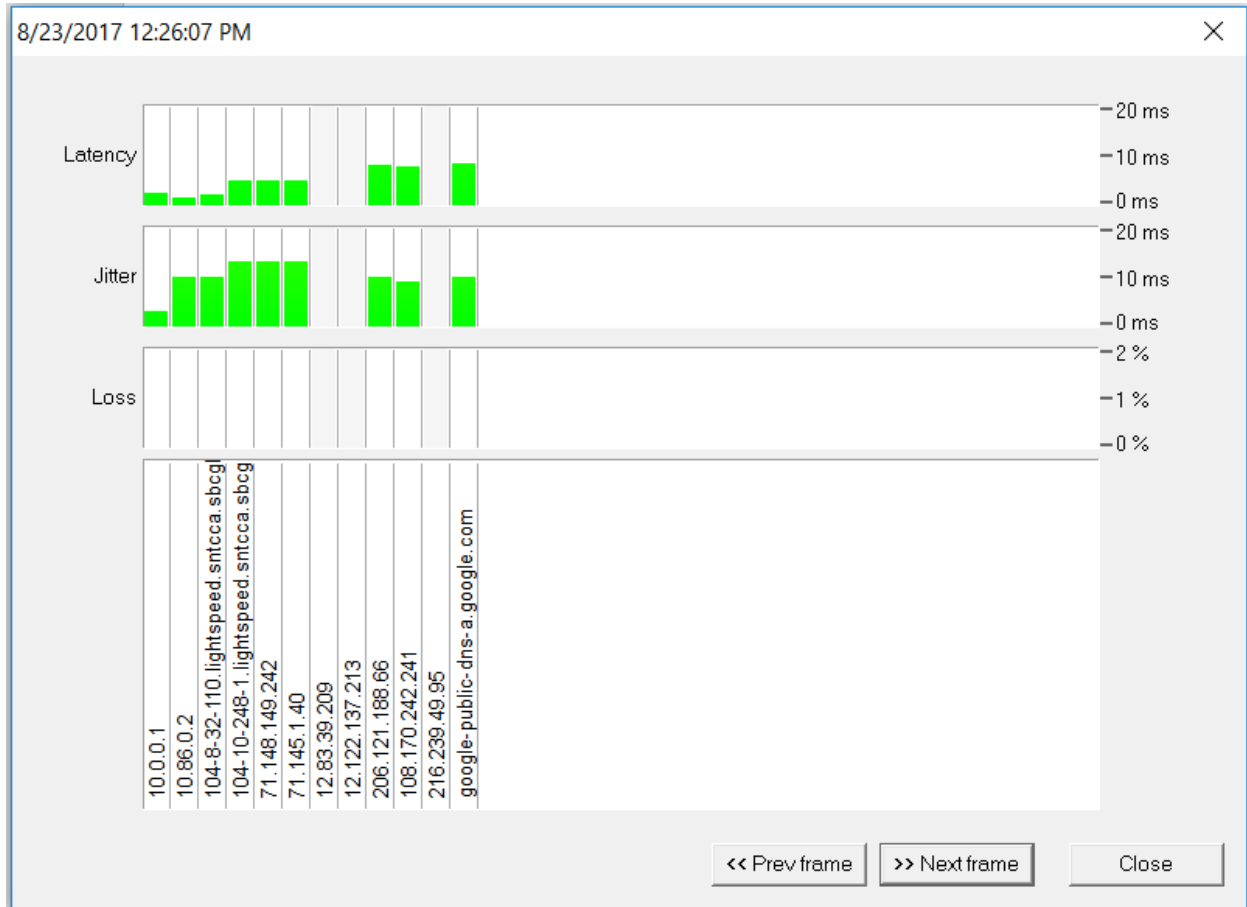

Latency, Jitter, and Loss are displayed to each hop along the way. As a result, it can be easily determined which device is adding Latency, Jitter, or Loss along the way.


Note: If the hops do not show up you will need to check your Firewall. You may need to turn off your Firewall for Link Troubleshooting, or allow inbound ICMP TTL Expired messages.

RTP Receiver/Transmitter


The RTP Receiver/Transmitter mode uses UDP packets and is useful when remote devices block PING (ICMP ECHO) packets.

To use the RTP Receiver/Transmitter Mode, email the link to the remote user and have the remote user also run a copy of the Call Simulator on the network.

Enter a "name" in the Remote Name field such as "Chicago". Then set your Call Simulator as RTP Receiver in the Mode field and click on Start.

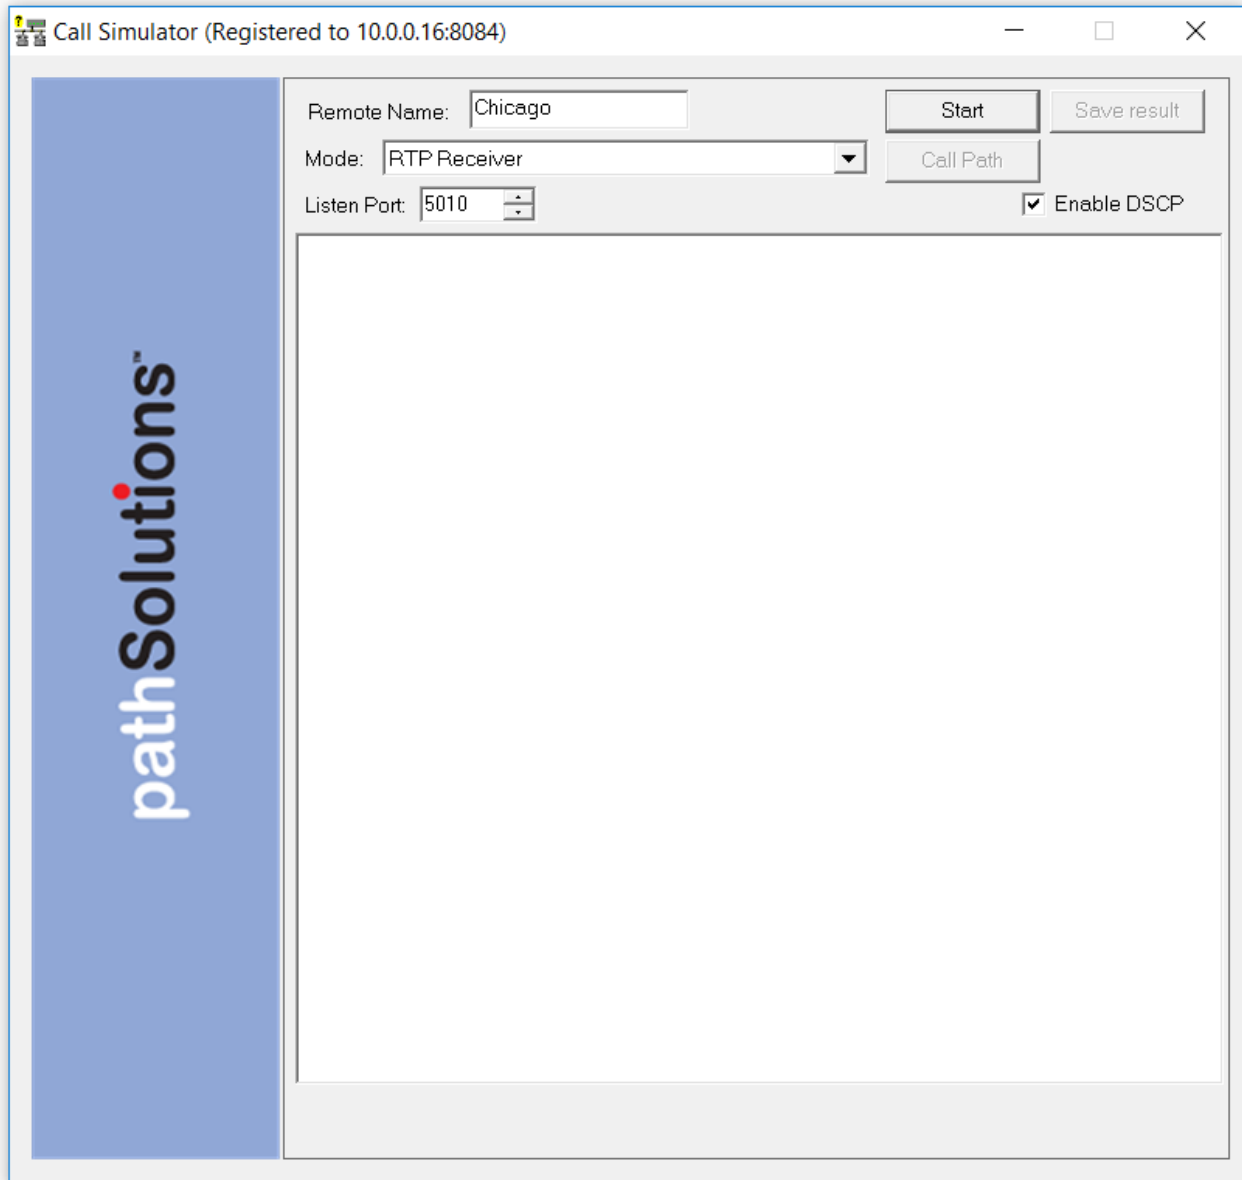

On the remote Call Simulator, select the RTP Transmitter mode in the Mode drop-down box. You will then see a drop-down box in the "To" field where you can select the "Name" of your machine. Select the name of the machine to test.

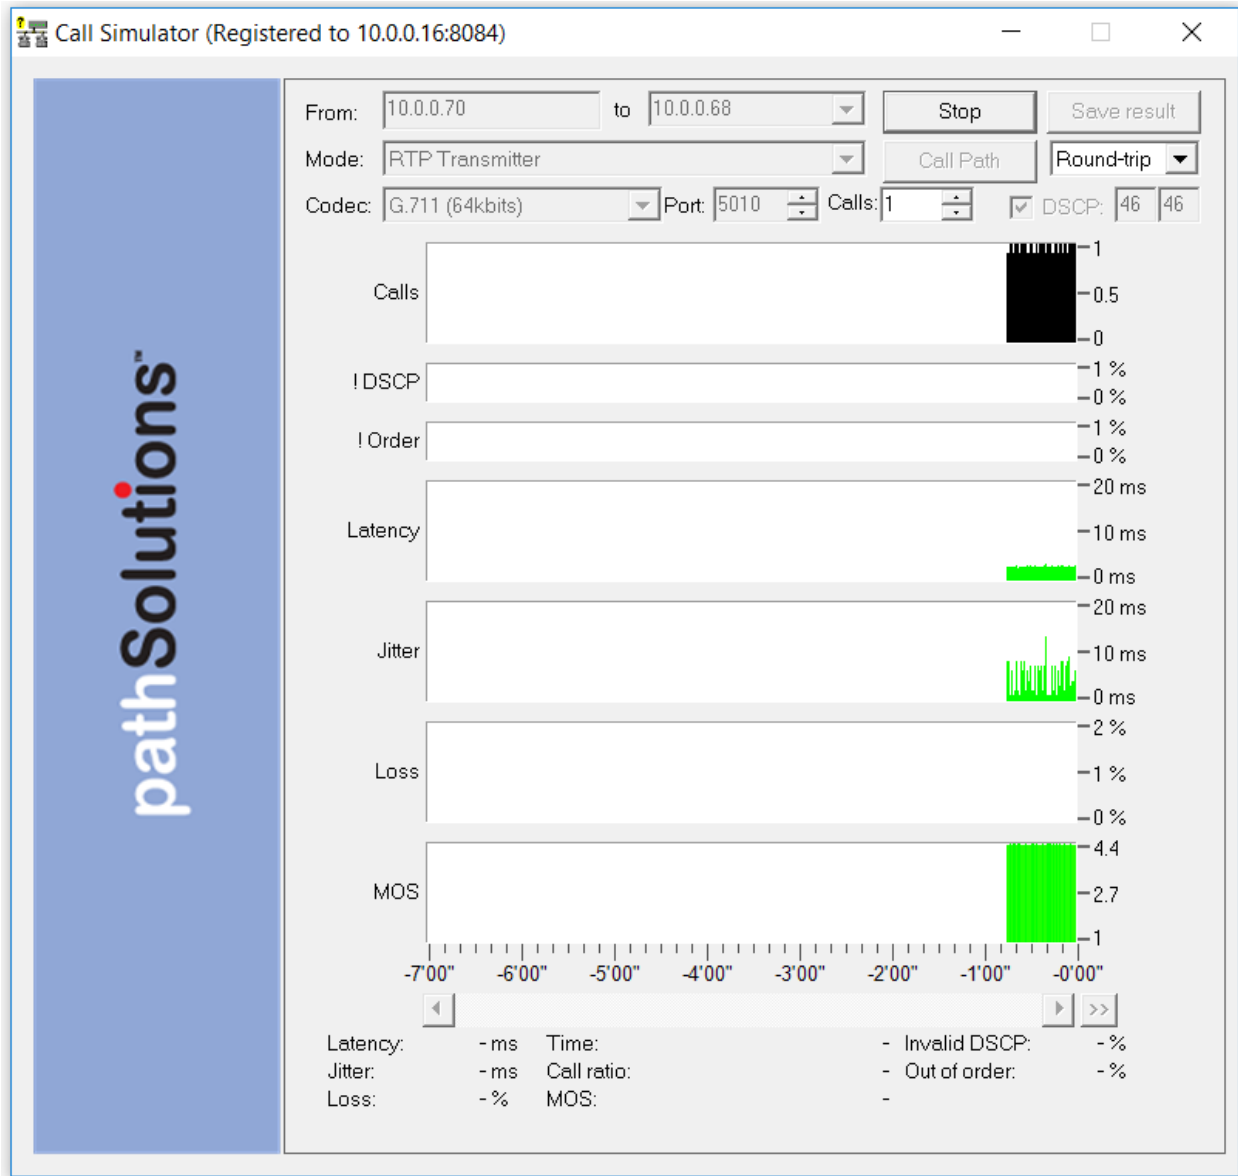

You can then click on the Start button to start the simulation.

The !DSCP Graph will show when packets lose DSCP marking during a test.


The !Order Graph will show when packets arrive out of order

TCP Receiver

Using the TCP Transmitter/Receiver mode will validate how much bandwidth is available between two computers.


For example, if you have a 10meg WAN circuit between your remote offices but you think it is always slow, you can confirm that the current utilization is zero percent, but you may want to test it.

Set up a computer in the remote office with TCP Receiver and provide a Remote Name.

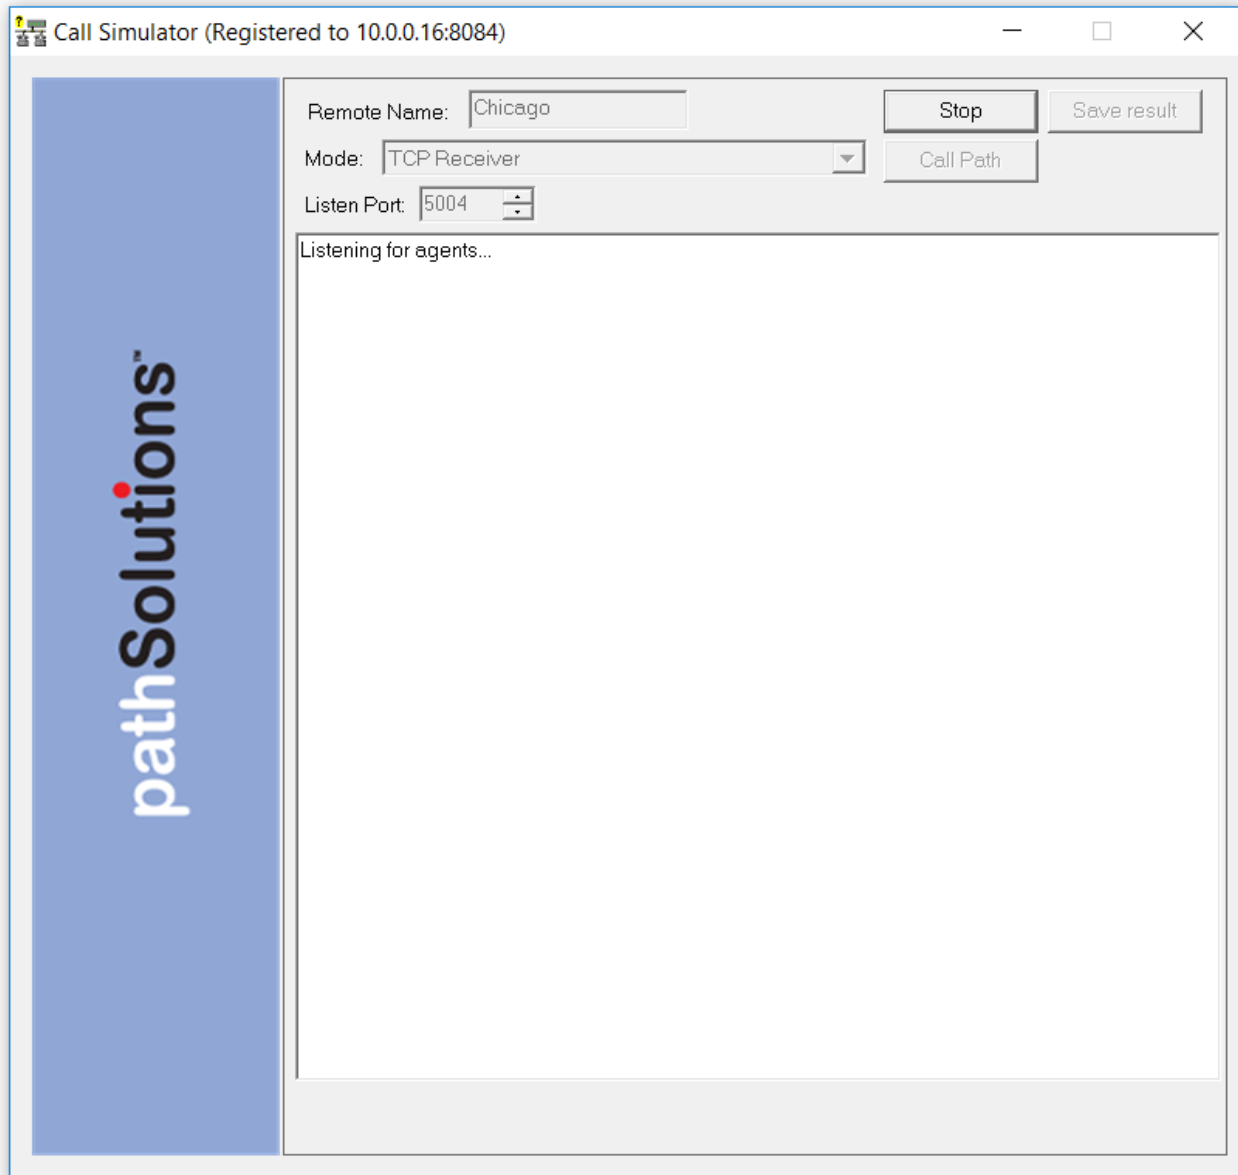

On the local machine, run the TCP Transmitter and enter the remote computer's name from the drop-down box.


Simulated traffic will then run between the two systems.

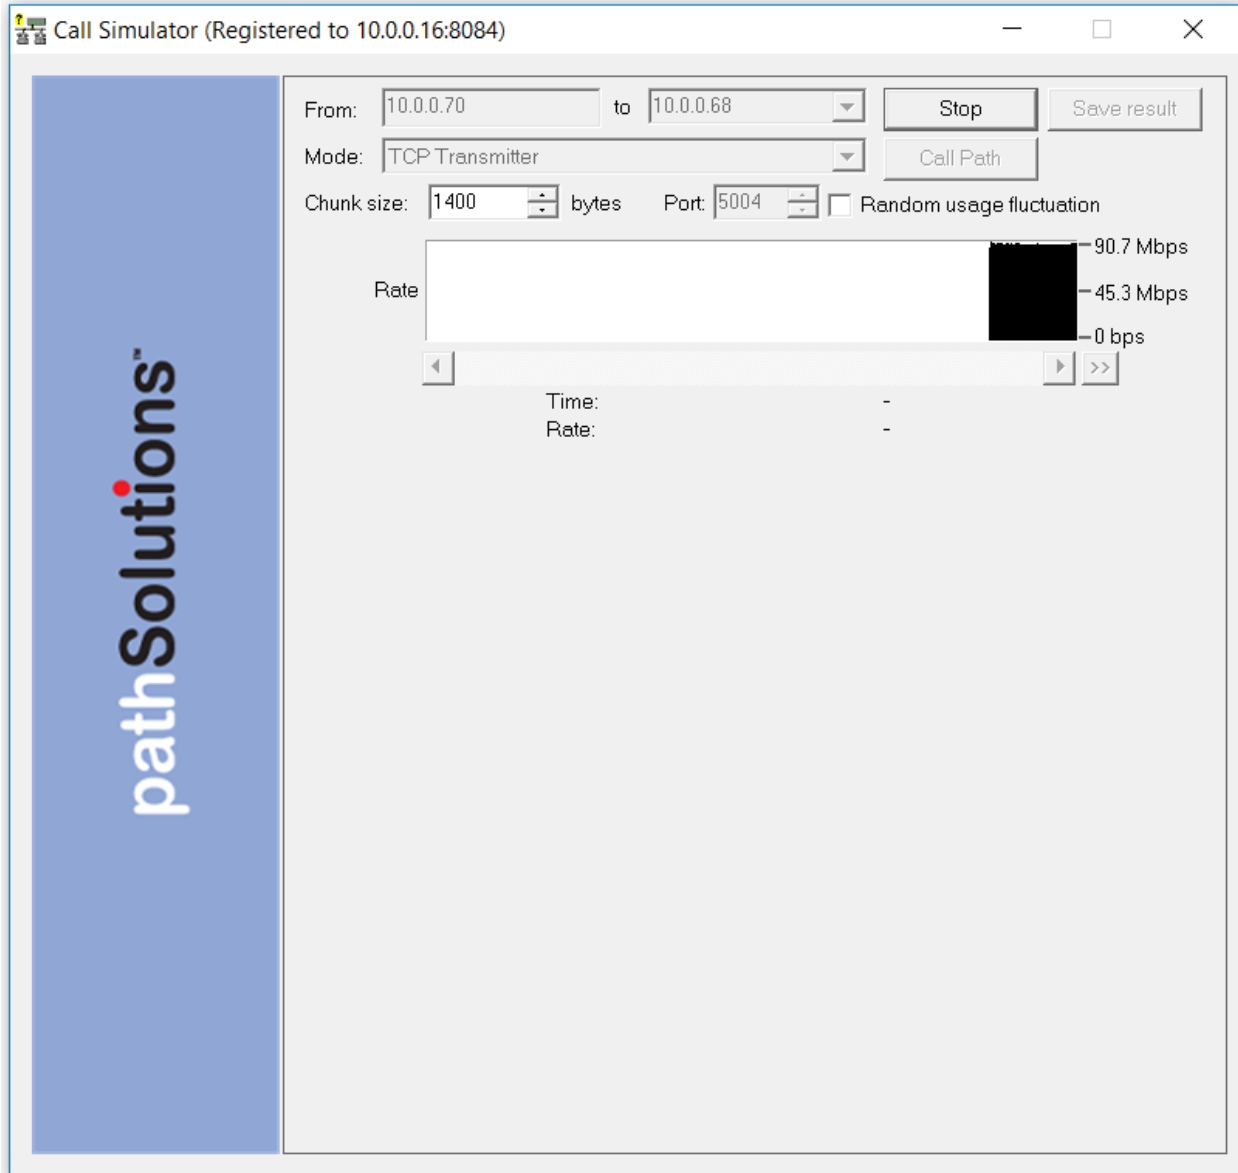

Traffic between the two computers will start loading up and show how much bandwidth is being utilized. If it shows that you are only getting 5mbps of throughput, you should call your WAN provider to discuss and investigate.

UDP Firewall Test

To test if the port can fully reach the destination you can use the UDP Firewall Test. Choose the “UDP Firewall Test” option from the Mode drop-down box.

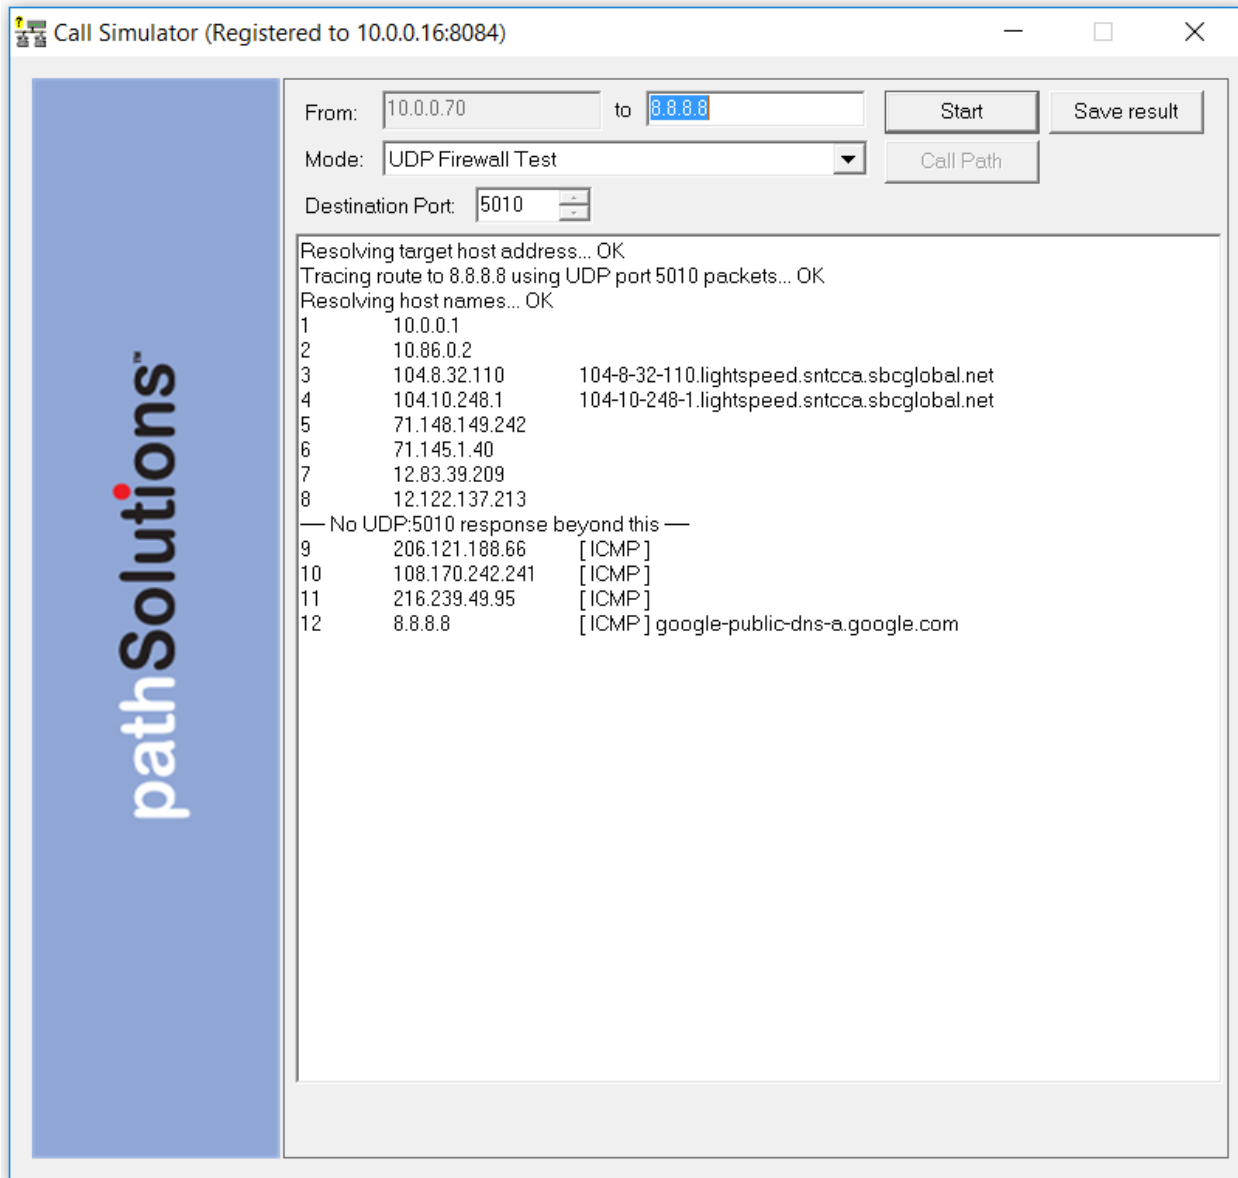

DSCP Loss Test

The call simulator can test to see how far DSCP tags make it through the network. Run the call simulator from a PC next to or behind the VoIP phone. Choose “DSCP Loss Test” and enter the DSCP value that you would like to test. Then enter the IP address of the remote endpoint where you would like to test DSCP and click “Start”. The system will do a traceroute to determine the hops to the endpoint, and then send out DSCP tagged packets to learn how far they make it through the network:

The screenshot shows the Call Simulator interface with the following configuration and results:

From: 10.0.0.70 to 9.222.0.2
 Mode: DSCP Loss Test
 DSCP: 46

Start Save result
 Call Path

Resolving target host address... OK
 Tracing route to 9.222.0.2... OK
 Testing using ICMP packets with DSCP 46... OK
 Resolving host names... OK

Hop	Tag	DSCP	IP	Name
1	+	46	10.0.0.1	
2	+	46	10.86.0.2	
3	+	46	104.8.32.110	104-8-32-110.lightspeed.sntcca.sbcglobal.net
--- No DSCP tag beyond this ---				
4		0	104.10.248.1	104-10-248-1.lightspeed.sntcca.sbcglobal.net
5		0	71.148.149.242	

Look for the “--- No DSCP tag beyond this ---” notice. This means that the previous device was stripping the tag on its outbound interface, or the subsequent device was stripping the tag on its inbound interface.


NOTE: You may save any of these results as a .txt, .docx, .csv or html files depending on which test you are running; you can see this when the test is done and you click on Save Result.

VoIP Call Simulator Batch Tool


This is a stand-alone program and available to download from the TotalView VoIP Tab, Tools section, under the “Call Simulator” sub-tab.

The Call Simulator Batch Tool is used to create a script that will run multiple call simulations in sequence.

Download the batch tool program, then click on the downloaded program to start it:

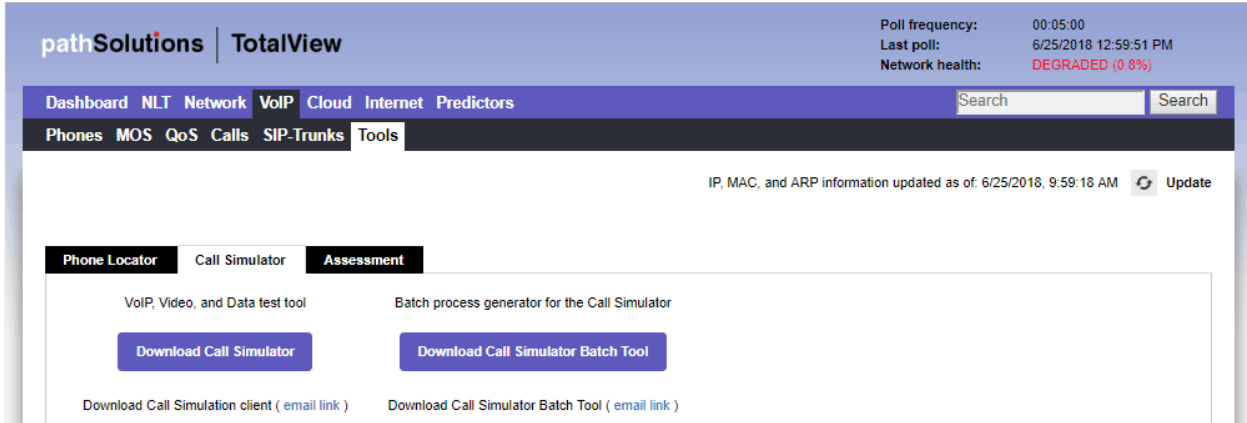


When the program runs, you will see the following screen:

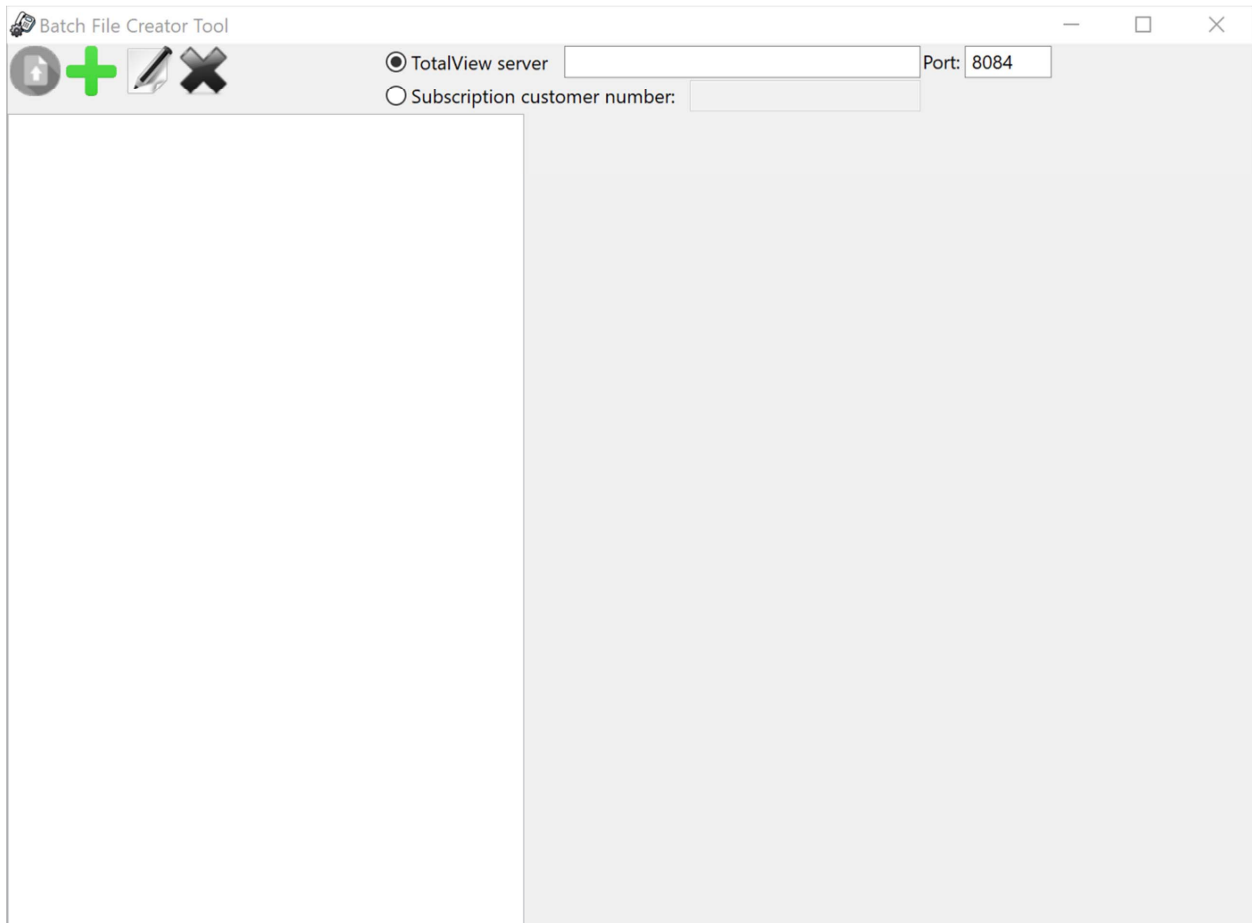

Enter the IP address or DNS name of the TotalView server in the TotalView server field.

Click on the green “+” plus sign to add a test to the sequence. The right dialog will show the test mode chooser:

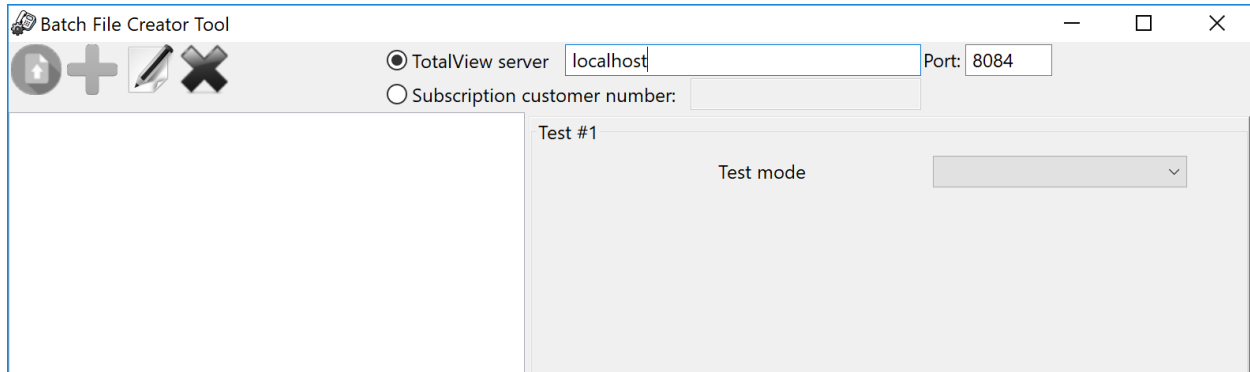


Use the drop-down to choose the type of test you want to run:

- End-to-End Test
- Link Troubleshooting Test
- RTP Receiver
- RTP Transmitter
- TCP Receiver
- TCP Transmitter
- UDP Firewall Test
- DSCP Loss Test

Depending on the type of test chosen, it will show different options based on the type of test:

Refer to the Call Simulation section for a description of the different test types and inputs.

Click “Add test” to add the test to the list of tests to perform.

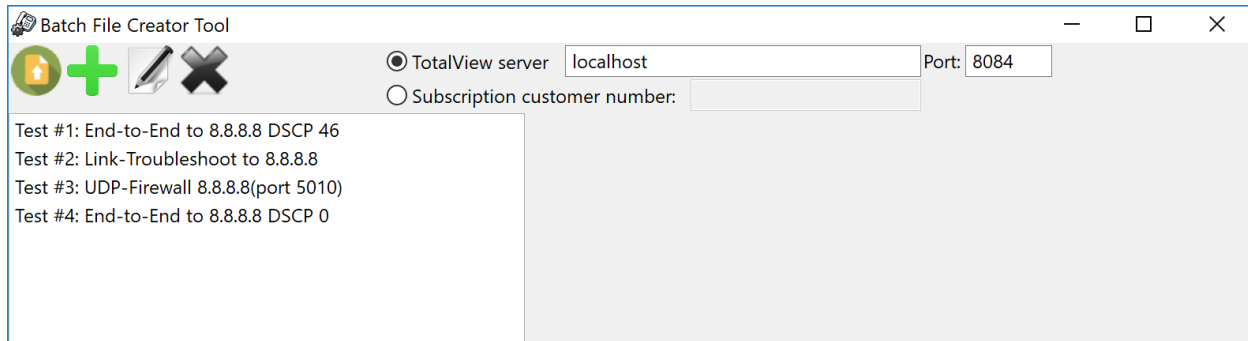

Click on the “Publish” button in the upper left corner and it will ask you to choose a directory where the script and call simulator should be copied.

There are two files that will be copied to the directory:

CallSimBatch.cmd

CallSimulator.exe

Both can be zipped and sent to a user or computer where they can be run.

The CallSimBatch.cmd should be run with local Administrator privileges to properly run. Right-click on the CallSimBatch.cmd and choose “Run as Administrator”.


Upon completion, the resulting test files will all be saved to the directory where the script was run.

Network Programs

These are adjunct tools that can be used to maintain the TotalView deployment.

Config Editor

This is a new tool used to free-form update configuration files. It can be launched by clicking Start/Programs/PathSolutions/TotalView and choosing Config Editor. It will show the default screen:

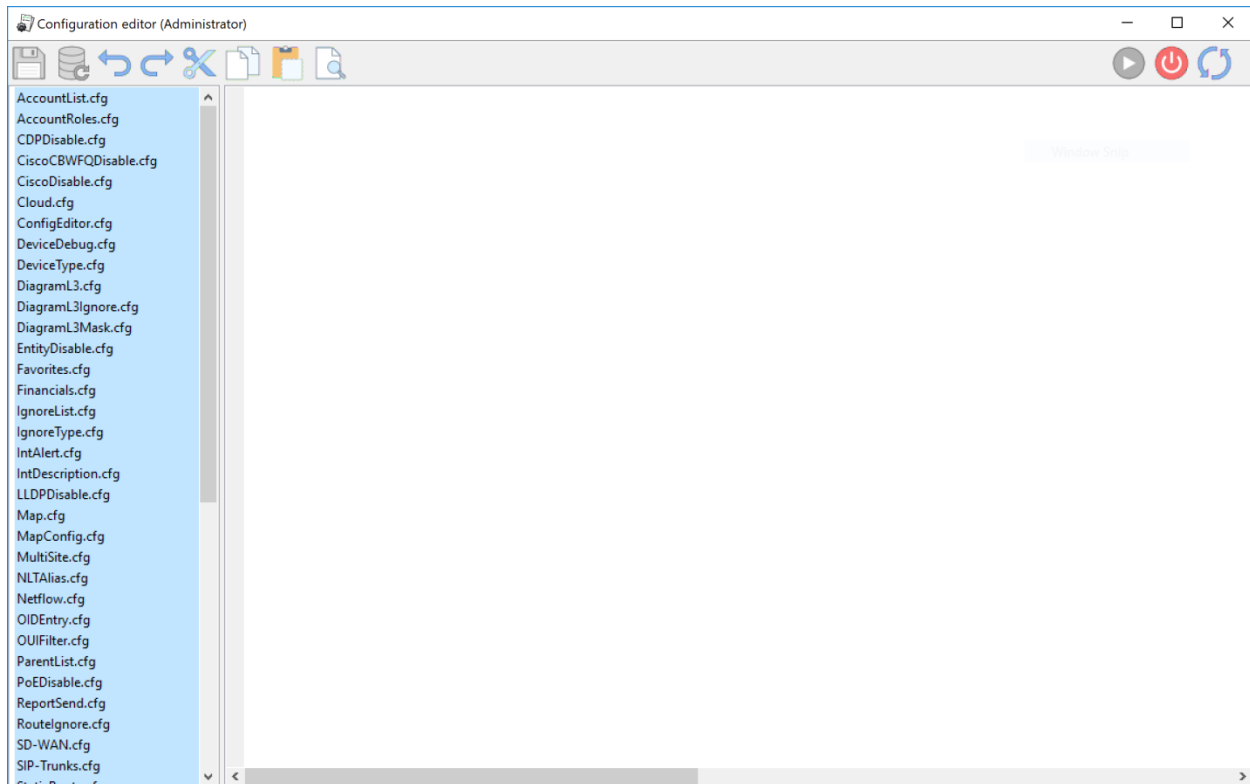

Choose a config file in the left column and it will show the contents of the file in the main window.

The file can be edited and saved by clicking on the disk icon in the toolbar.


The service can be restarted by clicking on the far right toolbar icon.

Note: Some configuration files will take immediate effect and do not require a service restart.


Map Config Tool

This is a new tool used to create/update the “Map” tab on the web user interface. It is a stand-alone program, run from the console where TotalView is installed. Click Start/Programs/PathSolutions/TotalView and choose Map Config Tool.

When it first runs, it will ask you which map you want to edit/change:

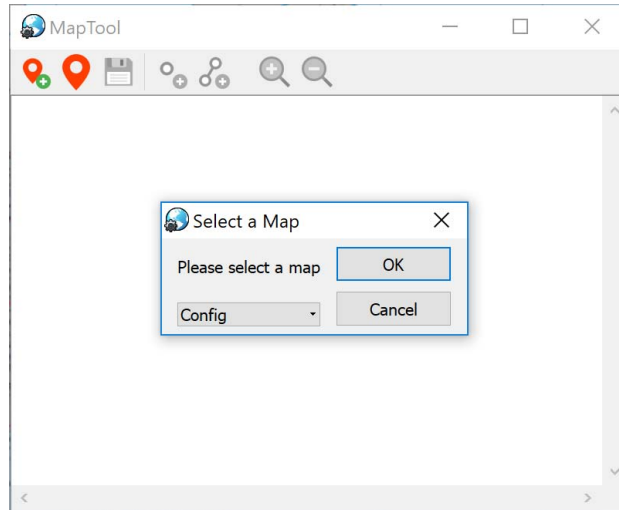

Once the map is chosen, it will load the map and show any previously configured ping points and links:

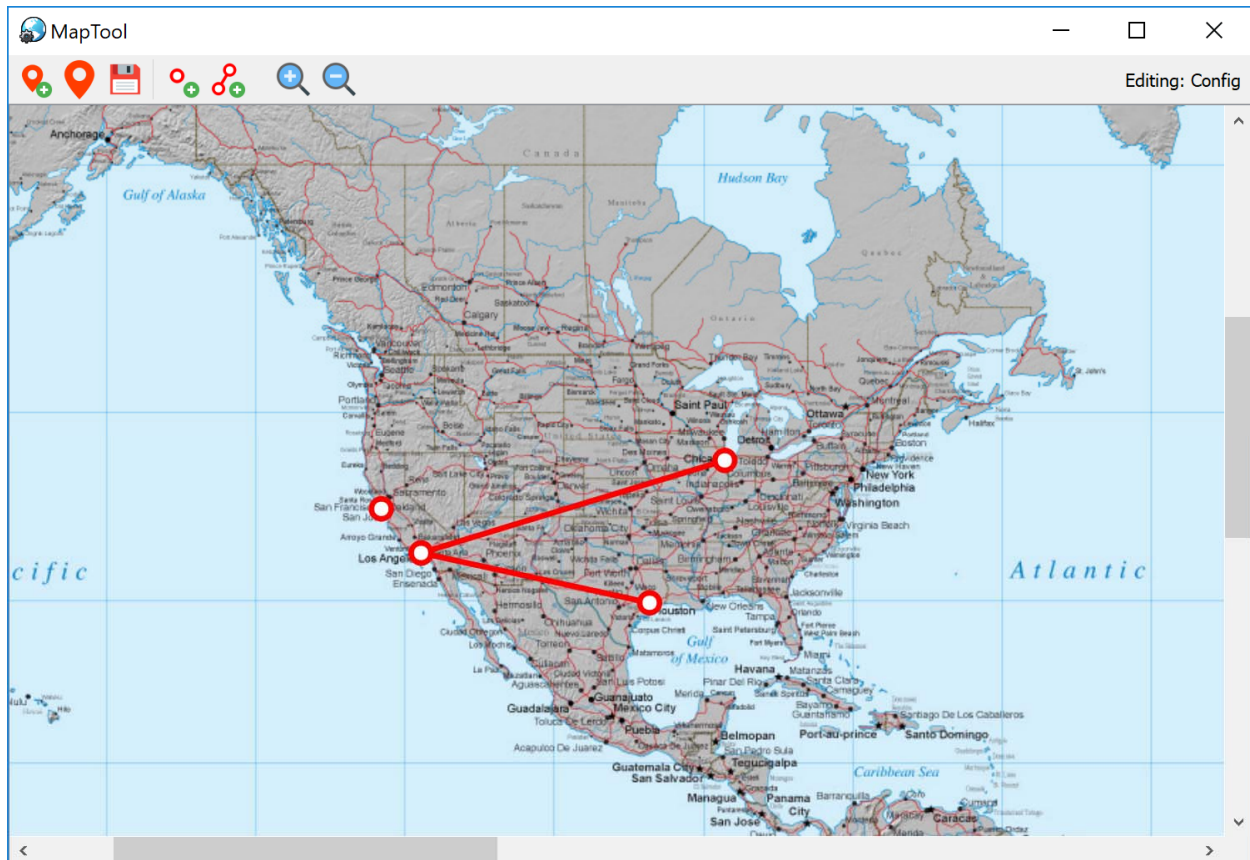

A ping point or link can be added by right-clicking anywhere on the map and choosing the element type you want to add.

If you add a link, it will ask you to select the device IP address and interface that should be associated with the link:

After selecting the device and interface, it will start a line draw that will allow you to position the remote endpoint of the link.

If you add a ping point, it will ask you to select the device IP address that should be pinged:

Elements can be moved around by clicking and dragging the endpoint dot.

If you save the map, you can immediately check the web page's map to see the change automatically update (no need to restart the service or refresh the browser window).


Poll Device

This is a simple test tool to verify that SNMP is communicating correctly. It is a stand-alone program and is run from the Start/Programs/PathSolutions/TotalView/Poll Device menu.

Enter a device IP address and SNMP credentials and click “Submit” to test communications. The tool will attempt to ping the remote device to see if it responds to a ping before doing the SNMP query.

Syslog Viewer

This is a file viewer for syslog files that includes filtering and search capabilities. It is a stand-alone program and available to run from the Start/Programs/PathSolutions/TotalView/Syslog Viewer menu.

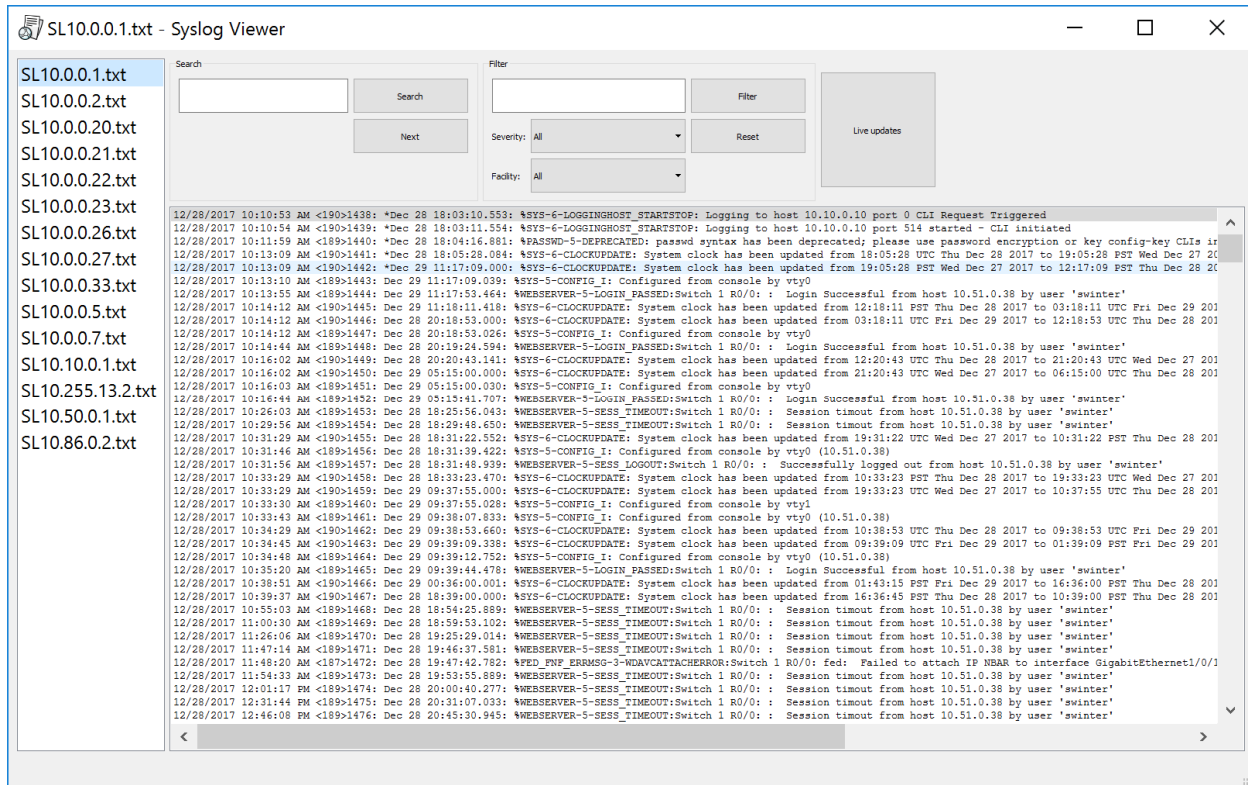

The viewer allows you to select a logfile from the left column and review the received syslog messages contained.

Filtering can be performed by entering the information into the filter and choosing “Filter”.

Searching for text can be performed by entering text in the search field and clicking “Search” or “Next”.

If you want to view newly received syslog messages from a device, click the “Live update” button to turn this feature on or off.

Ignoring Interfaces

There are three different ways of ignoring interfaces.

- 1) The IgnoreList.cfg allows you to ignore ranges of interfaces on devices.
- 2) The IgnoreType.cfg allows you to ignore interfaces via descriptions system-wide – like if you wanted to always ignore any interface with the description of “Loopback”.

The above files should be opened up in Notepad for editing. After you save the file, stop and restart the service to have this change take effect.

These files are located in one of the following directories:

For 64 bit – C:/Program Files (x86)/PathSolutions/TotalView/IgnoreList.cfg
 For 32 bit – C:/Program Files/PathSolutions/TotalView/IgnoreList.cfg

- 3) If you only have a couple of ports you would like to ignore you can go to the “Device List” tab and click on a device and then click on the “ignore” link towards the right hand side of the table for each interface number you would like to ignore.

The screenshot shows the PathSolutions TotalView interface. At the top, there are navigation tabs: Dashboard, NLT, Network, VoIP, Cloud, Internet, Predictors. Below that are more tabs: Path, Map, Diagram, Gremlins, Devices, Favorites, Issues, Netflow, Top-10, WAN, Interfaces, SD-WAN, Tools. The 'Devices' tab is active, showing a table with columns: Device Name, Device IP Address, SNMP Version, Manage, Oper Int, Admin Down, Location, Contact, and Uptime. Below the 'Devices' table is the 'Interfaces' section, which has a sub-table with columns: Interface, Favorite, IP Address, Description, Ignore Int, Peak Daily Error Rate, Peak Daily Utilization (Tx, Rx), Interface Speed, Duplex, Admin, Oper, and Status. A red arrow points to the 'Ignore Int' link in the row for INT#3.


Device Name	Device IP Address	SNMP Version	Manage	Oper Int	Admin Down	Location	Contact	Uptime
Syrah	10.0.0.1	v2c	Telnet SSH Web HTTPS Syslog	37	9	"Santa Clara"	noc@pathsolutions.com	80d 14h 54m

Interface	Favorite	IP Address	Description	Ignore Int	Peak Daily Error Rate	Peak Daily Utilization (Tx, Rx)	Interface Speed	Duplex	Admin	Oper	Status
INT#1	Favorite		Gi0/0: GigabitEthernet0/0	Ignore	0.000%	0.000%	-	-	down	down	
INT#3	Favorite		Gi1/0/1: GigabitEthernet1/0/1 (PA and Ubiquiti Firewall Uplink)	Ignore	0.000%	0.000%	1,000,000,000	Full	up	up	
INT#4	Favorite		Gi1/0/2: GigabitEthernet1/0/2	Ignore	0.000%	0.000%	-	-	up	down	
INT#5	Favorite		Gi1/0/3: GigabitEthernet1/0/3 (Fred Server)	Ignore	0.000%	0.000%	1,000,000,000	Full	up	up	
INT#6	Favorite		Gi1/0/4: GigabitEthernet1/0/4	Ignore	0.000%	0.000%	100,000,000	Full	up	up	
INT#7	Favorite		Gi1/0/5: GigabitEthernet1/0/5	Ignore	0.000%	0.000%	1,000,000,000	Full	up	up	
INT#8	Favorite		Gi1/0/6: GigabitEthernet1/0/6	Ignore	0.000%	0.000%	1,000,000,000	Full	up	up	
INT#9	Favorite		Gi1/0/7: GigabitEthernet1/0/7	Ignore	0.000%	0.000%	1,000,000,000	Full	up	up	

If your Web Config has been locked and you do not see then “ignore” link in the Device List tab, follow the instructions below to Unlock the Web Config. Alternatively, if you want to Lock the Web Configuration to remove the “favorite” and “ignore” feature, click on the “Lock Config” link shown above.


Unlock the Web Configuration

If the web configuration is locked, and you want to unlock it, Use the Config Tool > Output tab and then check the box “Unlock Web Configuration”:

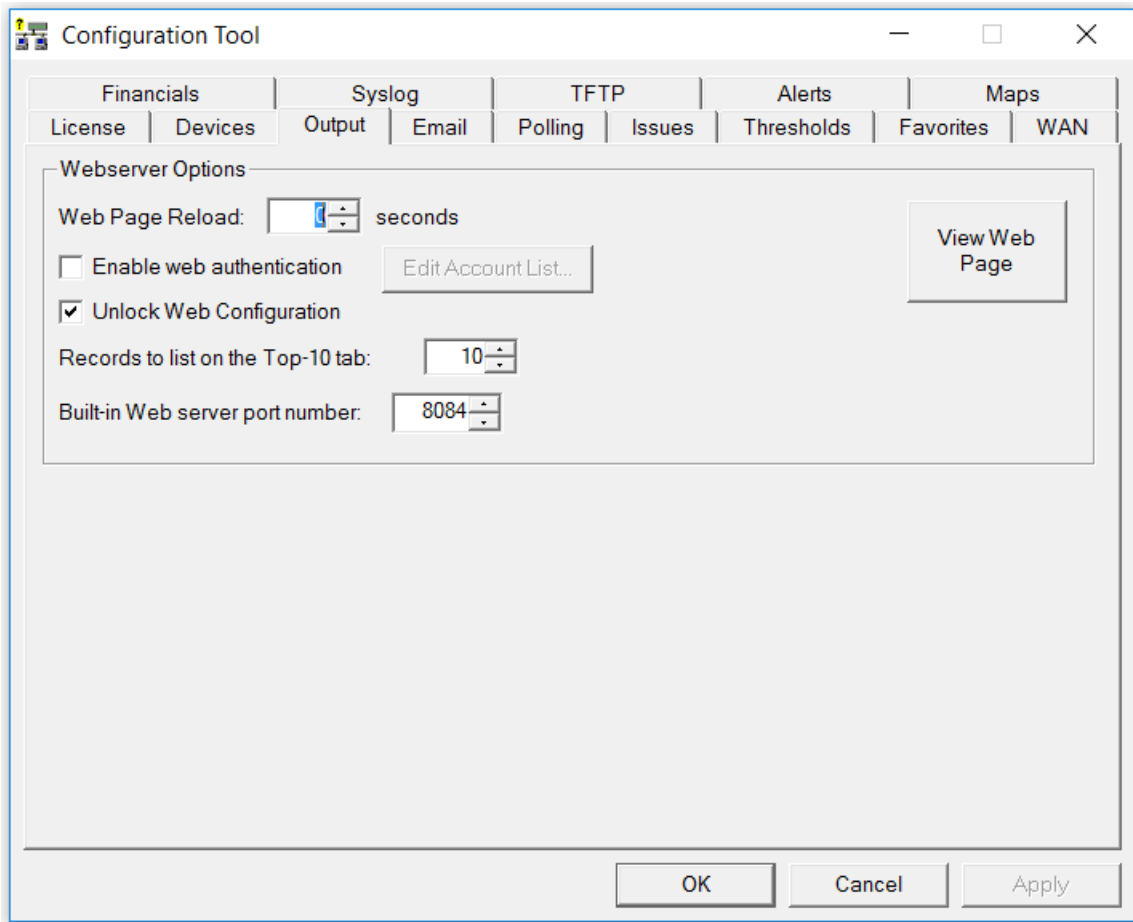

Adding an Interface to the Favorites List

To add an interface to the favorites list, just click “Favorite” in the General sub-tab under the Device List tab.

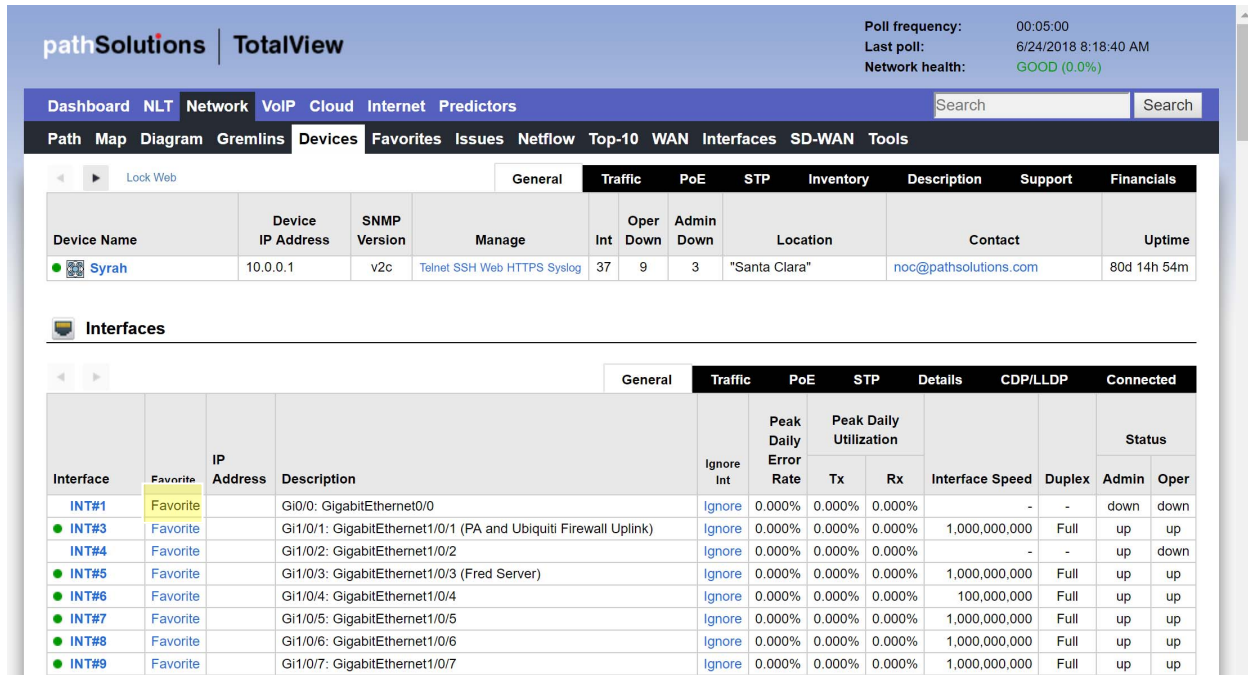


The screenshot shows the PathSolutions TotalView interface. At the top, there's a navigation bar with tabs like Dashboard, NLT, Network, VoIP, Cloud, Internet, and Predictors. Below that, there's a sub-tab for 'Devices' with a 'Favorites' sub-tab selected. The main content area shows a table of device details for 'Syrah' (IP: 10.0.0.1) and a section for 'Interfaces'. In the 'Interfaces' section, the 'General' sub-tab is active, and the 'Favorite' button for the 'INT#1' interface is highlighted in yellow.

Device Name	Device IP Address	SNMP Version	Manage	Int	Oper Down	Admin Down	Location	Contact	Uptime
Syrah	10.0.0.1	v2c	Telnet SSH Web HTTPS Syslog	37	9	3	"Santa Clara"	noc@pathsolutions.com	80d 14h 54m

Interface	Favorite	IP Address	Description	Ignore Int	Peak Daily Error Rate	Peak Daily Utilization	Interface Speed	Duplex	Admin	Oper
INT#1	Favorite		Gi0/0: GigabitEthernet0/0	Ignore	0.000%	0.000%	-	-	down	down
INT#3	Favorite		Gi1/0/1: GigabitEthernet1/0/1 (PA and Ubiquiti Firewall Uplink)	Ignore	0.000%	0.000%	1,000,000,000	Full	up	up
INT#4	Favorite		Gi1/0/2: GigabitEthernet1/0/2	Ignore	0.000%	0.000%	-	-	up	down
INT#5	Favorite		Gi1/0/3: GigabitEthernet1/0/3 (Fred Server)	Ignore	0.000%	0.000%	1,000,000,000	Full	up	up
INT#6	Favorite		Gi1/0/4: GigabitEthernet1/0/4	Ignore	0.000%	0.000%	100,000,000	Full	up	up
INT#7	Favorite		Gi1/0/5: GigabitEthernet1/0/5	Ignore	0.000%	0.000%	1,000,000,000	Full	up	up
INT#8	Favorite		Gi1/0/6: GigabitEthernet1/0/6	Ignore	0.000%	0.000%	1,000,000,000	Full	up	up
INT#9	Favorite		Gi1/0/7: GigabitEthernet1/0/7	Ignore	0.000%	0.000%	1,000,000,000	Full	up	up

You will be presented with a dialog confirming your selection:

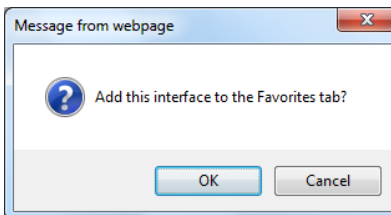

Click “OK” to add the interface to the favorites tab, or Cancel if you do not want to do so.

Note: The web interface must be in Configuration Mode to be able to add an interface to the Favorites List. To access the web configuration tool, use the Config Tool and choose the “Output Tab”. If the web configuration is locked, and you want to unlock it, check the box “Unlock Web Configuration”. See page 132 to see more about the Configuration Mode.

Removing an Interface from the Favorites List

To remove an interface from the Favorites List use the “Config Tool” and click on the Favorites Tab where you can delete an interface from the Favorites List. See Page 137 for details.

You can also edit the following file with a text editor and remove Favorite Interfaces:

```
C:\Program Files (x86)\PathSolutions\TotalView\Favorites.cfg
```

Locate the IP address and interface number in the file and then delete it and Save the file. The PathSolutions TotalView service must be stopped and re-started to have these changes take effect.

Fixing Problems on Your Network

Improving Network Health

Network health can be improved by working on the issues listed in the “Issues” list:

Device Name	Device IP Address	Interface Number	Description	Interface Speed	MAC Addresses	Peak Daily Error Rate	Average Daily Error Rate	Peak Daily Utilization	
								Tx	Rx
? (none)	10.50.0.49	-na-	Communications failure with device. Is device offline?	-	-	-	-	-	-
? (none)	172.17.1.254	-na-	Communications failure with device. Is device offline?	-	-	-	-	-	-
? (none)	172.17.2.1	-na-	Communications failure with device. Is device offline?	-	-	-	-	-	-
? (none)	172.17.2.5	-na-	Communications failure with device. Is device offline?	-	-	-	-	-	-
? (none)	10.51.0.40	-na-	Communications failure with device. Is device offline?	-	-	-	-	-	-
? (none)	10.51.0.112	-na-	Communications failure with device. Is device offline?	-	-	-	-	-	-
? (none)	10.51.0.254	-na-	Communications failure with device. Is device offline?	-	-	-	-	-	-
● Bardolino	10.0.0.47	Int #1	port 1: Gigabit Copper: port 1: Gigabit Copper	100,000,000	0	36.097%	0.188%	0.042%	1.147%

Click on the interface number to get details on the source of the problem.

If you have a bandwidth problem, you may want to upgrade the interface to a faster speed (upgrade 10mbps to 100mbps, or 100mbps to gigabit), and/or configure the link for full duplex. You may have errors associated with a bandwidth problem (like collisions), so it is recommended to solve bandwidth problems first.

After resolving bandwidth problems, you will want to focus on reducing the error rate on the interface (if this is a problem). Use the error analysis section for suggestions of a course of action. It may recommend replacing cables or network cards, depending on the types of errors that occur.

Additional troubleshooting information exists for each specific error. You can receive the online help by clicking on the specific error name.

Once you have implemented a fix, you should have a gradual reduction of the error rate on this interface. You may choose to immediately reset the counters on the interface so the program will start calculating error rates with a clean slate. Refer to your switch's documentation for information on how to clear interface statistics.

Note: Some switch manufacturers only allow clearing statistics for the entire switch, not a specific interface.

Note: If a switch manufacturer does not offer a method of clearing statistics, you will have to reboot the switch (or perhaps just the management module) to clear out old statistics. The telnet link can be used to quickly connect to the switch and check duplex and switch configuration.

Running a Collision-Free Network

Click on the “Interfaces” tab and review the interfaces that are configured for half-duplex:

The screenshot shows the TotalView interface with the 'Interfaces' tab selected. The sub-tab 'Half Duplex' is active, displaying a table of interfaces sorted by Peak Daily Error Rate. The table includes columns for Device Name, Device IP Address, Interface Number, Description, Peak Daily Error Rate, Peak Daily Utilization (Tx and Rx), Interface Speed, and Duplex mode.

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization		Interface Speed	Duplex
					Tx	Rx		
Burgundy	10.0.0.19	Int #3	3: 3	8.011%	1.546%	0.078%	100,000,000	Half
Chardonnay	10.50.4.2	Int #19	19: 19	1.149%	0.002%	0.002%	10,000,000	Half
SantaClara	10.0.0.2	Int #2	Fa0/0: FastEthernet0/0	0.328%	0.072%	1.538%	100,000,000	Half
Grenache	10.0.0.27	Int #14	Fa0/13: FastEthernet0/13 (Microscope, Inc.)	0.137%	0.023%	0.024%	100,000,000	Half*
Ribolla	10.0.0.26	Int #10006	Fa0/6: FastEthernet0/6 ((()))	0.023%	0.024%	0.023%	100,000,000	Half
Pacifica	10.50.1.2	Int #3	Fa0/1: FastEthernet0/1	0.000%	0.002%	0.001%	10,000,000	Half

6 total half-duplex interfaces displayed Top of page

These interfaces should be converted to run in full-duplex mode to eliminate packet loss due to collisions.

Eliminating Bottlenecks

Click on the “100meg”, “100meg”, and 1gig sub-tabs to investigate interfaces that should be upgraded to a faster speed:

The screenshot shows the TotalView interface with the 'Interfaces' tab selected. The sub-tab '100 Meg' is active, displaying a table of interfaces sorted by Peak Daily Utilization Rate. The table includes columns for Device Name, Device IP Address, Interface Number, Description, Peak Daily Error Rate, Peak Daily Utilization (Tx and Rx), and Interface Speed.

Device Name	Device IP Address	Interface Number	Description	Peak Daily Error Rate	Peak Daily Utilization		Interface Speed
					Tx	Rx	
Cabernet	10.0.0.36	Int #1	e1: Ethernet Interface	0.000%	0.408%	2.280%	100,000,000
Burgundy	10.0.0.19	Int #20	20: 20	0.693%	2.269%	0.409%	100,000,000
Cabernet	10.0.0.36	Int #10	e10: Ethernet Interface	0.000%	2.059%	0.111%	100,000,000
Corvina	10.0.0.49	Int #4227633	GigabitEthernet1/0/2: GigabitEthernet1/0/2	0.548%	0.112%	2.055%	100,000,000
Burgundy	10.0.0.19	Int #3	3: 3	8.011%	1.546%	0.078%	100,000,000
SantaClara	10.0.0.2	Int #2	Fa0/0: FastEthernet0/0	0.328%	0.072%	1.538%	100,000,000
stout	10.30.0.1	Int #1001	1:1: X440-8p Port 1	0.000%	0.101%	1.500%	100,000,000

Click on the interface number to get details on the interface’s utilization.


Determining What's Connected to an Interface

Go to the Network, Devices tab, and click on the Device Name of the interface that you want to know about. An Interface Section will appear for that device, Click on the "Connected" tab, and it will show you what devices are connected to the interface, along with the VLAN, MAC address, and IP address (if available in other device's ARP caches). If you hover over the MAC address it will show you the Manufacturer of that device. Reverse-DNS lookups for switch ports can also be identified by clicking on the IP address.

The screenshot shows the TotalView interface for a device named 'Syrah'. The top navigation bar includes 'Dashboard', 'NLT', 'Network', 'VoIP', 'Cloud', 'Internet', and 'Predictors'. Below this is a search bar and a secondary navigation bar with 'Path', 'Map', 'Diagram', 'Gremlins', 'Devices', 'Favorites', 'Issues', 'Netflow', 'Top-10', 'WAN', 'Interfaces', 'SD-WAN', and 'Tools'. The main content area is divided into several tabs: 'General', 'Traffic', 'PoE', 'STP', 'Inventory', 'Description', 'Support', and 'Financials'. The 'General' tab is active, showing a table with columns for 'Device Name', 'Device IP Address', 'SNMP Version', 'Manage', 'Int', 'Oper Down', 'Admin Down', 'Location', 'Contact', and 'Uptime'. The 'Syrah' device is listed with IP 10.0.0.1, SNMP v2c, and uptime of 81d 07h 42m. Below this, the 'Interfaces' section is visible, with a sub-tab 'Connected' selected. This sub-tab shows a table of interfaces (INT#1 through INT#7) with their IP addresses and descriptions. A 'Devices connected to this switch port' section is also present, listing connected devices with their IP addresses and MAC addresses.

Finding Anomalous Traffic

If you notice strange traffic on one interface, you can use TotalView to locate the source of the traffic. Consider the following graph of Interface Performance:

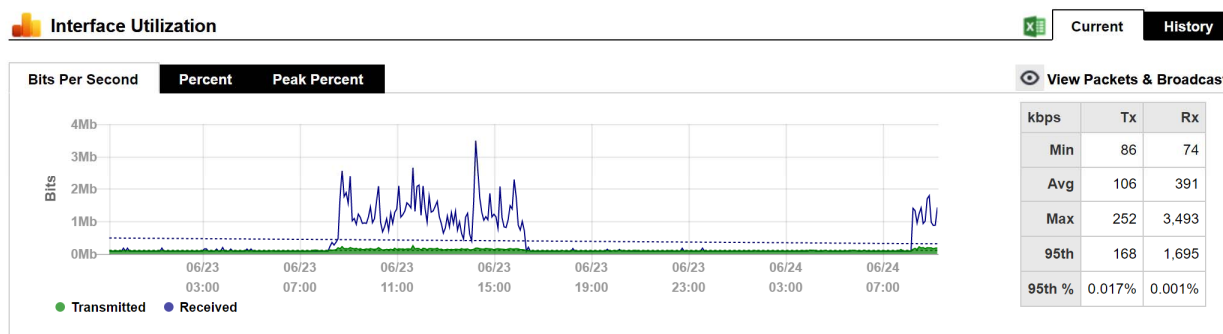

At approximately 2:14pm yesterday, roughly 3.5meb of data was received. With this traffic pattern in mind, we can quickly click on the interface arrows to find the interface that transmitted that quantity of traffic during those times.

Once you have found the interface, you can determine what is connected to the interface and look into the purpose of the traffic.

The benefit of this feature is that you do not have to be in front of a packet analyzer at the time the traffic is transmitted to determine the source of the traffic.


To see this graph, go to the Network section, Devices tab, and click on the Device Name of the interface that you want to know about. An Interface Section will appear for that device,

Right under the "Interfaces" subtitle, click on the left and right arrows to view the other interfaces on the switch. Look for a similar traffic pattern at the same timeframe.


If determining the source and destination of the traffic is not enough to narrow down the cause, the next step would be to use NetFlow monitoring to see the traffic flows through the device.

Determining Laptop Usage

Laptops add and drop from the network on a regular basis. To track their usage patterns, select the Dashboard tab. Then select “Add Widget” on the right-hand side.

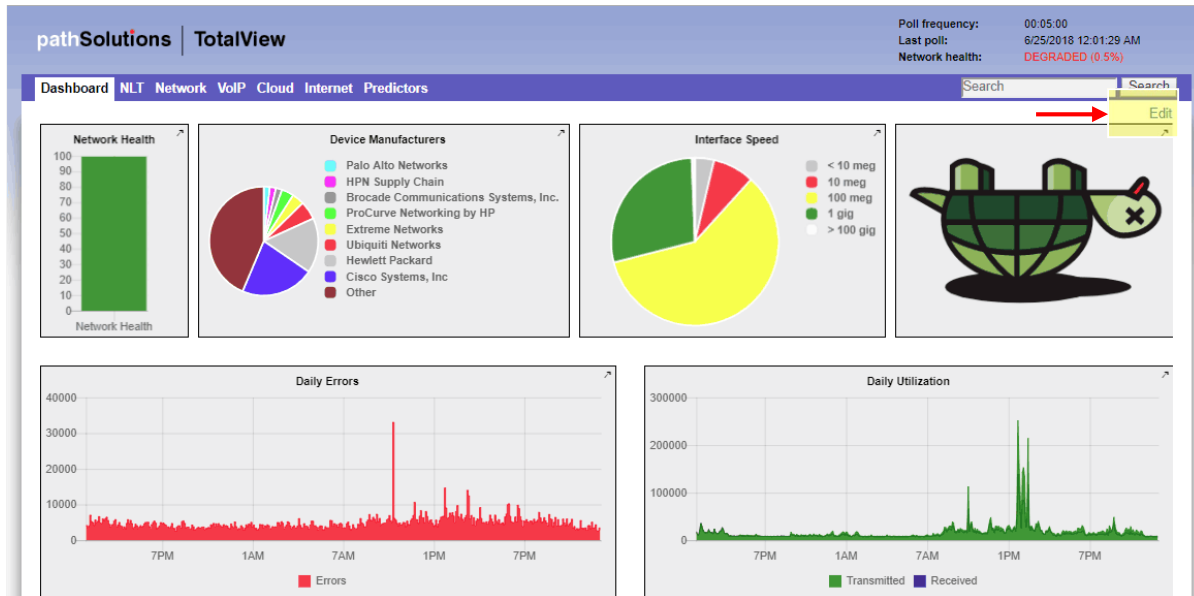

Select the “Daily Ports” – to see the Down Interfaces:

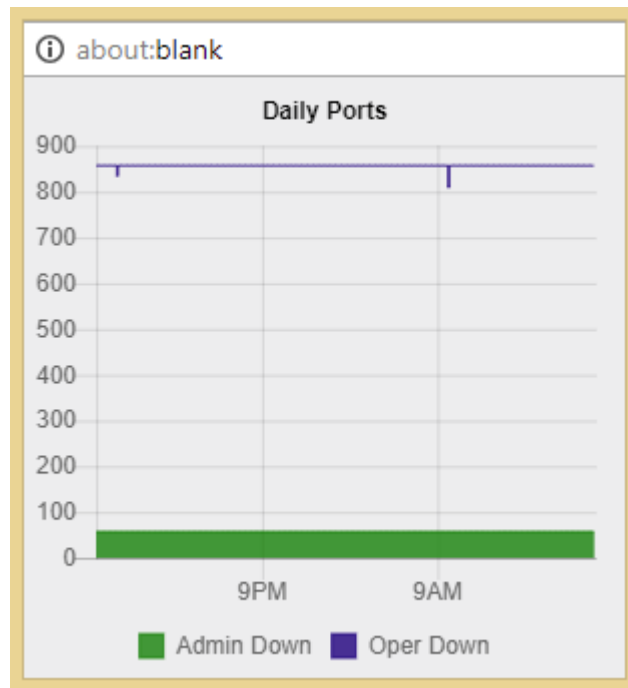

Note: In this case there is no change over time. In other cases, you may see the number of "Operationally Down" interfaces decreases as users connect to the network and increases as users disconnect.

Planning for Network Growth

Making sure that you always have free network ports available for growth is important. Use the Dashboard tab, select Add Widget, and add the “Daily Ports” to view the Down Interfaces and to determine overall port availability.

When the number of operationally shut down ports gets too low, additional switch ports should be acquired.

Scheduling Server Outages

Determining the timeframe to schedule server outages can be tricky without TotalView. Choose the interface that connects to the server and view the daily, weekly, and monthly graphs to determine when network utilization for this server is lowest. The user community should be comfortable with the decision, as there is no documented usage during that period.


Scheduling Switch & Router Outages

Scheduling switch outages are easy as well. Choose the switch details and view the daily, weekly, and monthly graphs to determine when overall switch utilization is lowest.

Daily Utilization Tracking

View the daily utilization using a Widget in the Dashboard tab to determine if the utilization meets with your expectation of usage.

Consider the following “Daily Utilization” graph:

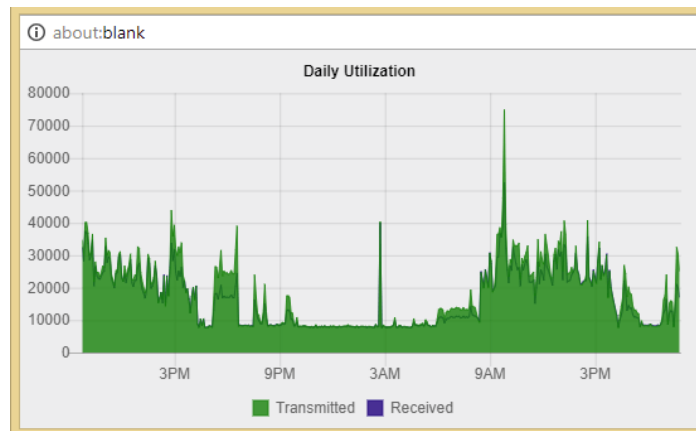


This graph shows a lot of data being transmitted after (9:00 am). This timeframe may correspond with jobs that are set to execute during that timeframe.

The graph also shows other spikes between 9:00 am and 4:00 pm. This may also correspond with scheduled activities on the network.

Daily Errors Tracking

View the daily overall errors to determine if the level of errors meets with your expectation of error distribution.

Consider the following "Daily Errors" graph:

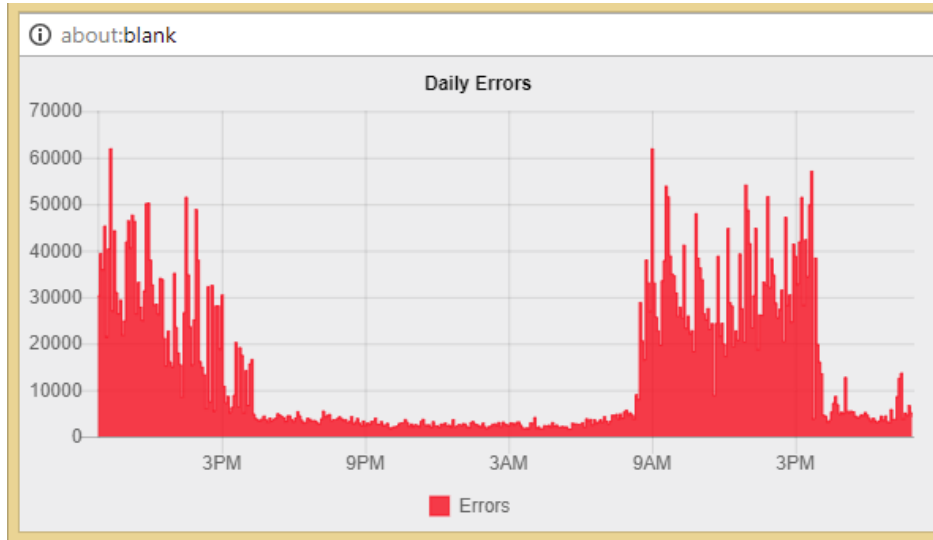

This graph shows that the most errors happen at 9:00 am. If you are aware of a process that runs at that time, you may choose to investigate the interface of the machines that executes the process.


Performing Proactive Analysis

You can be proactive by using the "Top-10" (errors) tab to locate interfaces that have error rates that are increasing. Reducing these error rates will help prevent them from becoming issues.

The "Top Transmitters" and "Top Receivers" tabs can be used to watch which interfaces may become bandwidth bottlenecks.

Error Resolution

When a problem is resolved, you will want to clear the error condition so it is removed as a red dot on the interface, and have it removed from the Issues list.

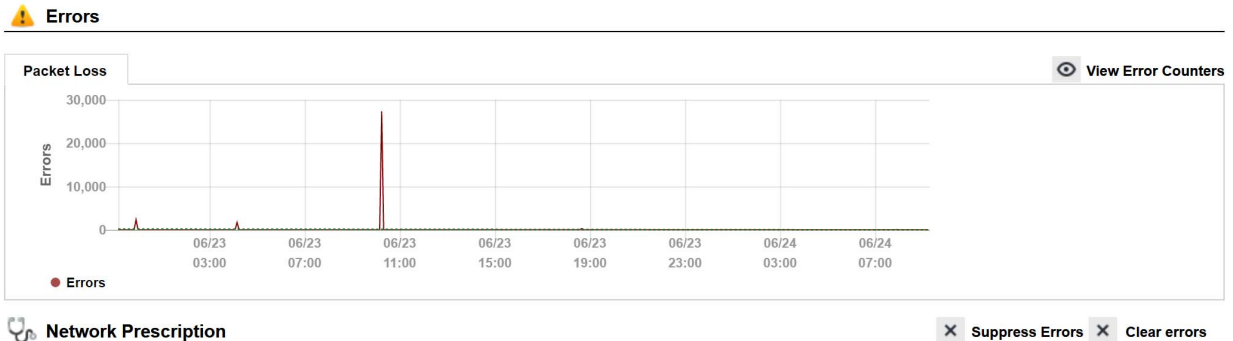

Frame Too Long errors exist on this interface

This interface has received frames that are too large for it to receive. Another interface on this segment may be configured to perform VLAN tagging, and this interface is not configured to respect VLAN tags. If the other interface transmits a 1500 byte long frame, the VLAN tag added to the frame making it 1518 bytes long. This interface may discard these frames and also not interpret the VLAN tag properly as a result. To fix this problem, either enable VLAN tagging on this interface, or disable VLAN tagging on all other interfaces on this segment.

You can click on the “Clear errors” to the far right side of the Network Prescription section and it will remove the red dot on the interface.

If errors start to re-occur on the interface, it may immediately turn back to red.

Alternately, you can add a note to the interface and check the box “Clear errors” and it will also clear the condition.

If errors continue to occur on the interface, and the problem is related to the device not reporting errors correctly on the interface, errors can be suppressed for this interface. Click on the “Suppress Errors” to the right of the Network Prescription section and it will change this interface to a yellow dot if it has suppressed errors, or green if suppressed but there are no errors.

Using the Network Weather Report

The network Weather Report is emailed by the service every night at midnight. An example of a weather report with interfaces that are degraded is as follows:

The default report includes information regarding the health of the network, a section on issues and errors, a section on performance, a section on the top 10 interfaces with the highest daily receive percentage and administrative information.


All links on the report will link to the product website so you can rapidly check information and work on resolving problems on a daily basis.

It is recommended that you archive these reports in an email folder for future reference.

The network's overall status is displayed in color (red for "Degraded", green for "Good") at the top of the report.

If the overall network status is degraded, then a table listing the interfaces with "Issues" will be displayed.

The "Errors" section will list the top 10 interfaces with the most errors.

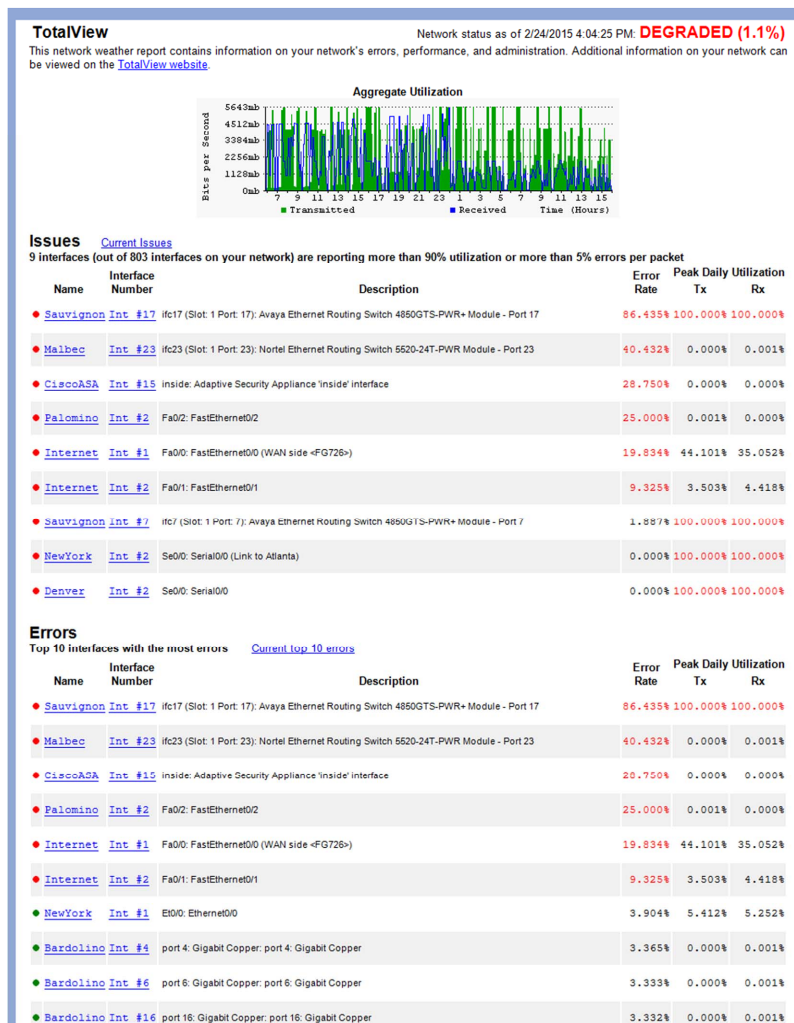

The "Performance" section will list the top 10 talkers and top 10 listeners.

The "Administration" section will include the number of interfaces that are operationally shut down and administratively shut down.

Network Weather Reports can be customized to include your company logo, or other text. Refer to page 125 (Configuring Email) for information on configuring the report.

Note: The Network Weather Report has an attached text file that can be used to display the same data, except without HTML formatting.

Performance

Top 10 interfaces with the highest daily transmission percentage [Current top 10 talkers](#)

Name	Interface Number	Description	Error Rate	Peak Daily Utilization	
				Tx	Rx
Sauvignon	Int #7	ifc7 (Slot: 1 Port: 7): Avaya Ethernet Routing Switch 4850GTS-PWR+ Module - Port 7	1.887%	100.000%	100.000%
Sauvignon	Int #17	ifc17 (Slot: 1 Port: 17): Avaya Ethernet Routing Switch 4850GTS-PWR+ Module - Port 17	86.435%	100.000%	100.000%
NewYork	Int #2	Se0/0: Serial0/0 (Link to Atlanta)	0.000%	100.000%	100.000%
Denver	Int #2	Se0/0: Serial0/0	0.000%	100.000%	100.000%
Internet	Int #1	Fa0/0: FastEthernet0/0 (WAN side <FG726>)	19.834%	44.101%	35.052%
Sauvignon	Int #1	ifc1 (Slot: 1 Port: 1): Avaya Ethernet Routing Switch 4850GTS-PWR+ Module - Port 1	1.887%	11.284%	11.112%
Sauvignon	Int #3	ifc3 (Slot: 1 Port: 3): Avaya Ethernet Routing Switch 4850GTS-PWR+ Module - Port 3	1.887%	11.284%	11.112%
Sauvignon	Int #49	ifc49 (Slot: 1 Port: 49): Avaya Ethernet Routing Switch 4850GTS-PWR+ Module - Port 49	1.863%	11.284%	11.112%
Bordeaux	Int #46	46: Ethernet Interface	2.537%	6.203%	6.521%
Pinot	Int #10007	Fa0/7: FastEthernet0/7 (Connection to Denver)	0.000%	5.629%	5.438%

Top 10 interfaces with the highest daily receive percentage [Current top 10 listeners](#)

Name	Interface Number	Description	Error Rate	Peak Daily Utilization	
				Tx	Rx
Denver	Int #2	Se0/0: Serial0/0	0.000%	100.000%	100.000%
Sauvignon	Int #7	ifc7 (Slot: 1 Port: 7): Avaya Ethernet Routing Switch 4850GTS-PWR+ Module - Port 7	1.887%	100.000%	100.000%
NewYork	Int #2	Se0/0: Serial0/0 (Link to Atlanta)	0.000%	100.000%	100.000%
Sauvignon	Int #17	ifc17 (Slot: 1 Port: 17): Avaya Ethernet Routing Switch 4850GTS-PWR+ Module - Port 17	86.435%	100.000%	100.000%
Internet	Int #1	Fa0/0: FastEthernet0/0 (WAN side <FG726>)	19.834%	44.101%	35.052%
Sauvignon	Int #3	ifc3 (Slot: 1 Port: 3): Avaya Ethernet Routing Switch 4850GTS-PWR+ Module - Port 3	1.887%	11.284%	11.112%
Sauvignon	Int #1	ifc1 (Slot: 1 Port: 1): Avaya Ethernet Routing Switch 4850GTS-PWR+ Module - Port 1	1.887%	11.284%	11.112%
Sauvignon	Int #49	ifc49 (Slot: 1 Port: 49): Avaya Ethernet Routing Switch 4850GTS-PWR+ Module - Port 49	1.863%	11.284%	11.112%
Bordeaux	Int #46	46: Ethernet Interface	2.537%	6.203%	6.521%
Denver	Int #1	E10/0: Ethernet0/0	0.226%	5.320%	5.492%

Administration

Your network has 637 interfaces that are operationally shut down. These interfaces are available for additional nodes. When this number drops too low, you should consider purchasing additional switch interfaces to make sure you can continue to add to your network. View current [Operationally down interfaces](#).

Your network has 9 interfaces that are administratively shut down. These interfaces have been disabled by the network administrator, and will not function if a node is connected. View current [Administratively shut down interfaces](#).

If you have questions related to PathSolutions's sales, please contact Sales@PathSolutions.com.
 If you have technical support issues relating to any of PathSolutions's products, please contact Support@PathSolutions.com.

TotalView 6.0 (6436) Copyright ©2009 PathSolutions, Inc.


Using the Configuration Tool

The Configuration Tool is used to change the general configuration options of the product as well as add or remove devices from monitoring.

Running the Configuration Tool

To run the PathSolutions TotalView Configuration Tool, select "Start", choose "Programs", point to "PathSolutions", then choose "TotalView", and then select "Config Tool".

If you have not yet entered your subscription information, you may be presented with the following dialog upon starting the program:

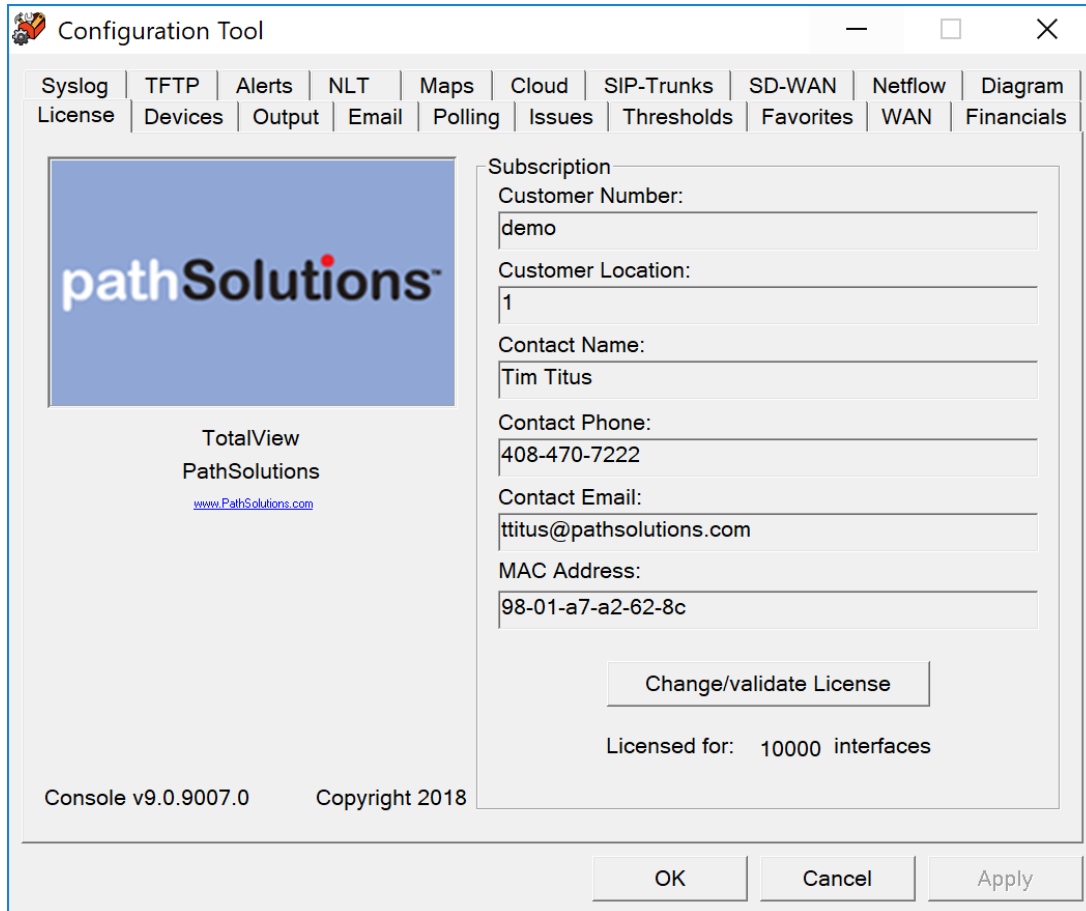


The screenshot shows a window titled "Configuration Tool" with a menu bar containing: Syslog, TFTP, Alerts, NLT, Maps, Cloud, SIP-Trunks, SD-WAN, Netflow, Diagram, License, Devices, Output, Email, Polling, Issues, Thresholds, Favorites, WAN, Financials. The main area is split into two panes. The left pane displays the PathSolutions logo and the text "TotalView PathSolutions" with the URL www.PathSolutions.com. The right pane is titled "Subscription" and contains the following fields:

Customer Number:	demo
Customer Location:	1
Contact Name:	Tim Titus
Contact Phone:	408-470-7222
Contact Email:	ttitus@pathsolutions.com
MAC Address:	98-01-a7-a2-62-8c

Below the fields is a button labeled "Change/validate License". At the bottom of the right pane, it says "Licensed for: 10000 interfaces". The bottom of the window has three buttons: "OK", "Cancel", and "Apply". In the bottom left corner, it says "Console v9.0.9007.0" and "Copyright 2018".

Enter your subscription information and then click “Change/Validate License” to validate the license and continue.


You should see the PathSolutions TotalView Configuration Tool license window:

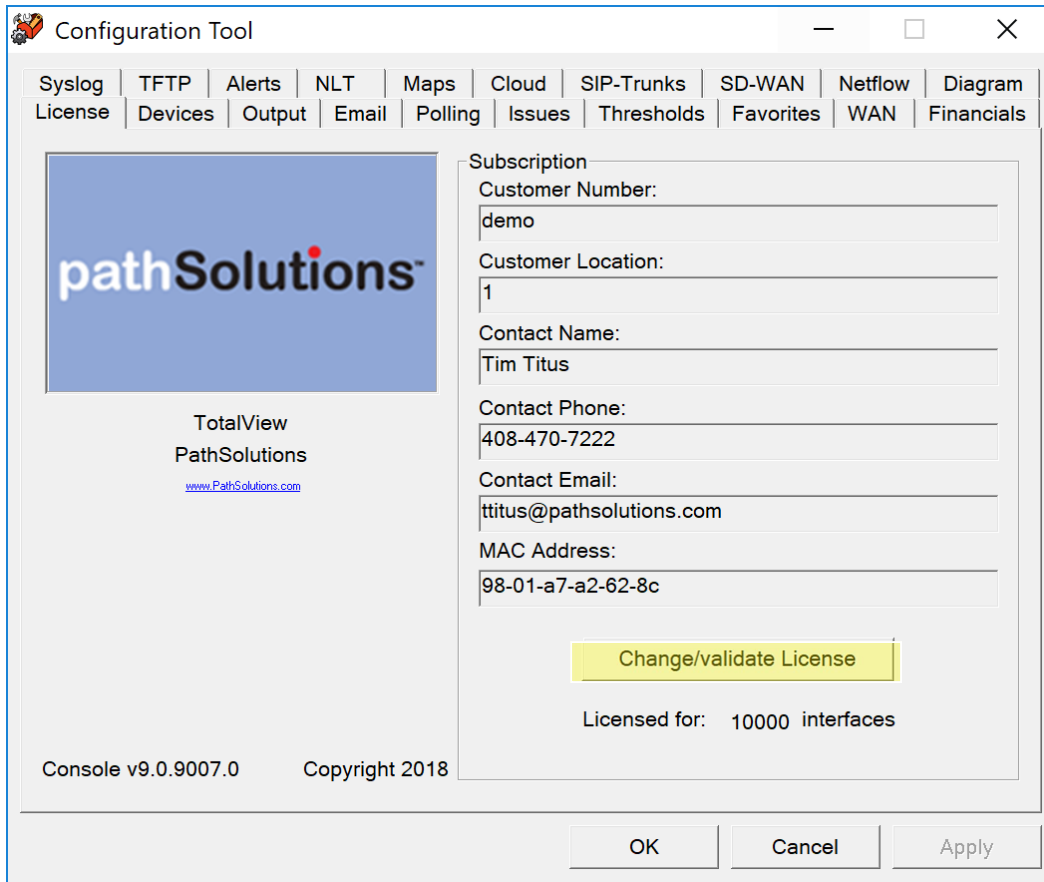

Use this page to validate and/or change your subscription information on your License. If you purchase additional interfaces for your growing network, just give us a call or email and you come back here to Check/Validate license and it will show your new license count!

Adding or Removing Devices

When you select the "Devices" tab, you will see the list of currently monitored devices:

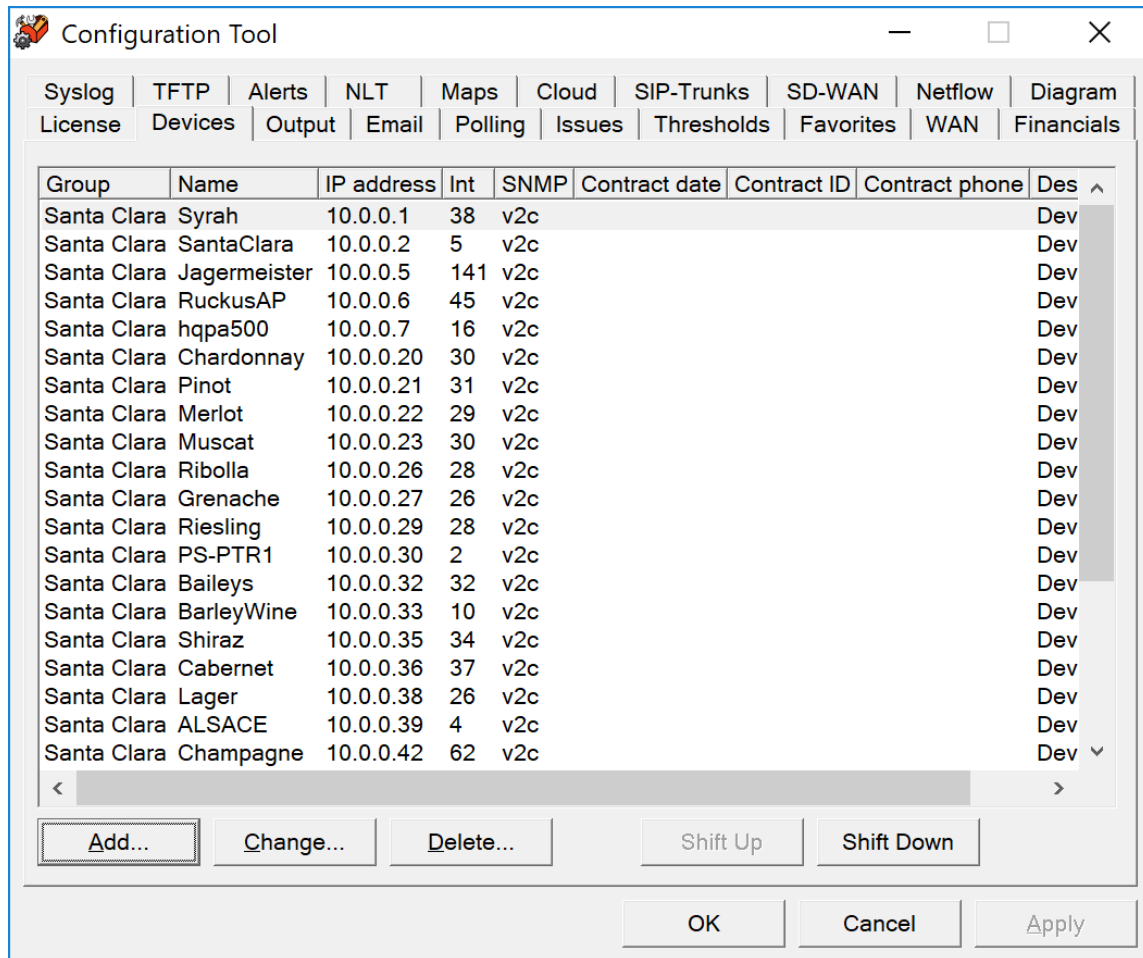

You can sort the list (and thus sort the order that the devices are displayed on the web pages) by clicking on a column header.

To move switches up or down in the listing click on the switch and then click " Shift Up" or " Shift Down".

Adding Devices

To add a device, click "Add". You will see the "Add device" dialog:

The screenshot shows the 'Add device' dialog box in the Configuration Tool. The dialog is titled 'Add device' and has a close button (X) in the top right corner. It contains the following fields and options:

- Group: Napa
- IP address: 10 . 80 . 0 . 1
- SNMP version: SNMPv1 SNMPv2c SNMPv3
- Community string: public
- AuthProt: MD5 (dropdown menu)
- AuthPass: (empty text field)
- PrivProt: DES (dropdown menu)
- PrivPass: (empty text field)
- Contract date: Wednesday, December 31, 1969 (calendar icon and dropdown menu)
- Contract ID: (empty text field)
- Contract phone: (empty text field)
- Description (optional): (empty text field)

At the bottom of the dialog are 'OK' and 'Cancel' buttons. The background window shows a list of devices with columns for Group, Name, and Description, and an 'Add...' button at the bottom left.

Enter the IP address and SNMP read-only community string for the device. If desired, you can also add a description and support contract information for the device.

Click "OK" to add the device, and the system will present you with a blank dialog box so you can enter another device.

Click "Cancel" on a blank dialog box to close the dialog and stop adding devices.

Note: All interfaces for each switch are monitored by default. You can ignore individual interfaces from being monitored on the web interface.

Note: If SNMPv3 is not enabled and is desired, contact support@pathsolutions.com.

Changing Device Information

To modify a device, double-click on an existing device IP address, or select the device's IP address and then click on "Change".

You will be presented with the "Change device" dialog:

Change device

Group: Santa Clara

IP address: 10 . 0 . 0 . 22

SNMP version: SNMPv1 SNMPv2c SNMPv3

Community string: public

AuthProt: NoAuth AuthPass:

PrivProt: NoPriv PrivPass:

Contract date: Wednesday, December 31, 1969

Contract ID:

Contract phone:


Description (optional): Device

OK Cancel

The only required fields for a device are the Group, IP address, and SNMP community string fields. All other fields are optional.

Deleting Devices

To delete a device, click on the device and then click "Delete". You will see the "Delete Device" dialog:

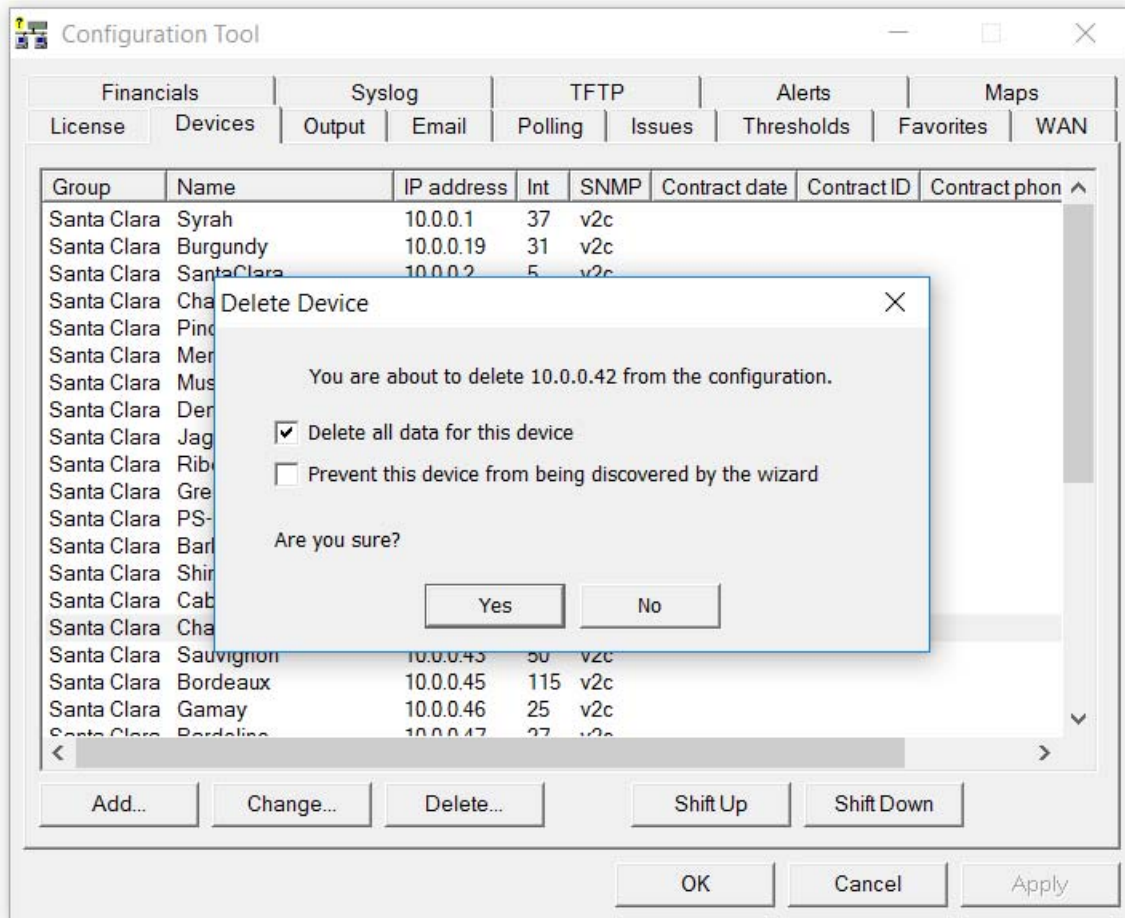


If you click on the second checkbox the device will no longer be discovered when running the wizard.

Note: Deleting a device from monitoring will not delete the previously collected graph data. You can add the device back to monitoring and it will continue to use the same data file for graph data storage.

Note: Any device prevented from being re-discovered when the QuickConfig Wizard runs can be added back again by removing the device from being ignored in the SwMonIgnore.cfg file or by adding the device to be monitored again in the SwitchMonitor.cfg file. These files can be found in C:\Program Files (x86)\PathSolutions\TotalView. Save the file after any modification.

Configuring Web Output

Select the "Output" tab. You will see the dialog box for configuring web page output and record display options:

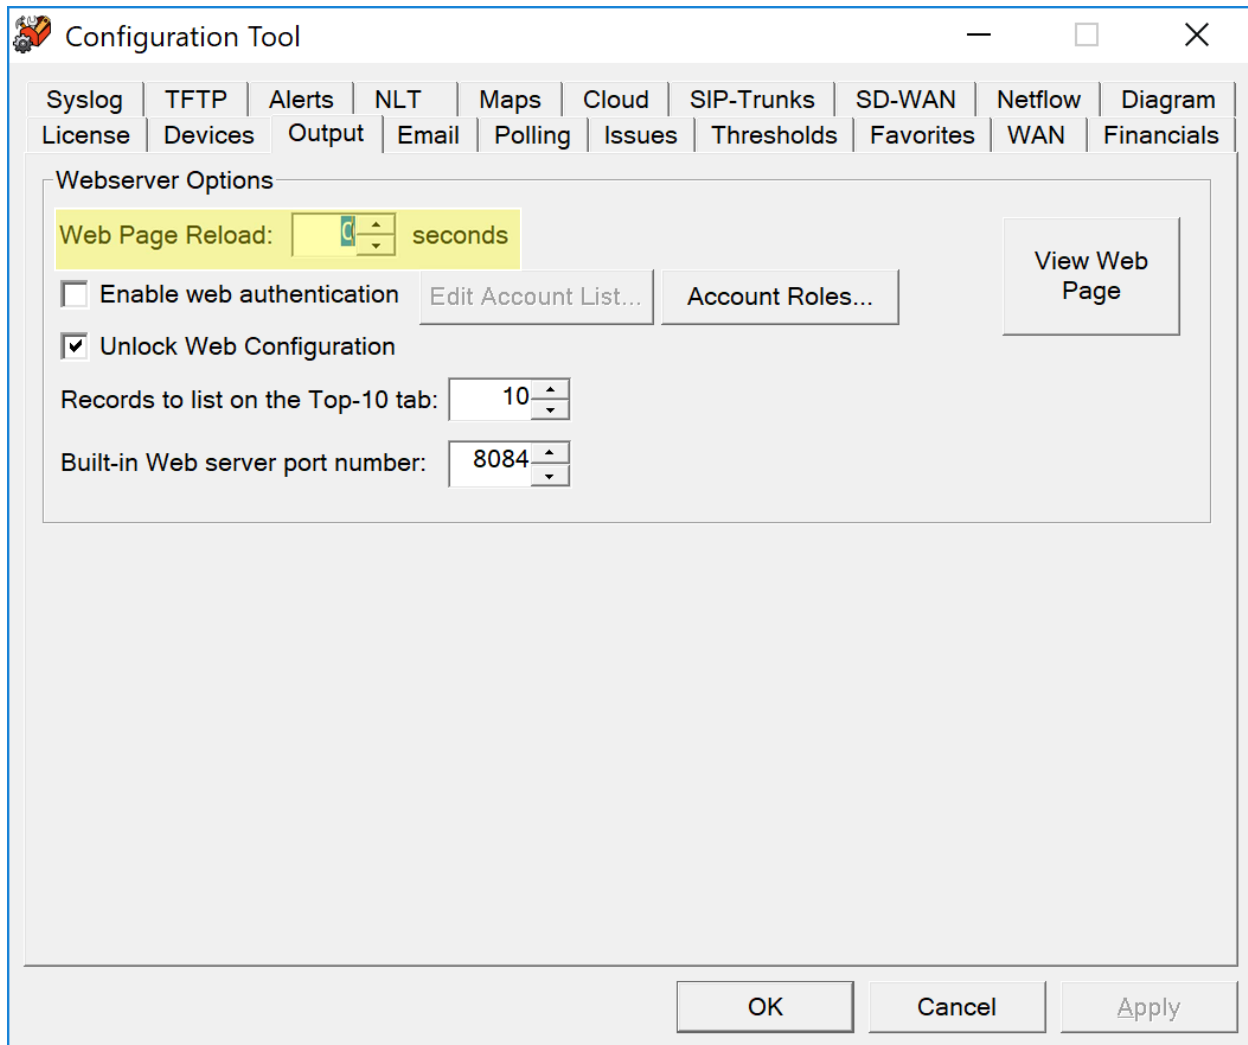


Webserver Options

The web browser should automatically refresh the web page and reload. It is advised to use the default of 0 (zero) in the Web Page Reload field. If you do not want the web pages to reload automatically, use a number like 300 seconds (5 minutes) or adjust as needed.


You can quickly view the web page by clicking on "View Web Page".

Creating Accounts with Password Security

If you want to employ account security so passwords are required to view the web pages, check the box "Enable web authentication" and click on the button "Edit Account List" to create accounts. You should see the "Account List" dialog:

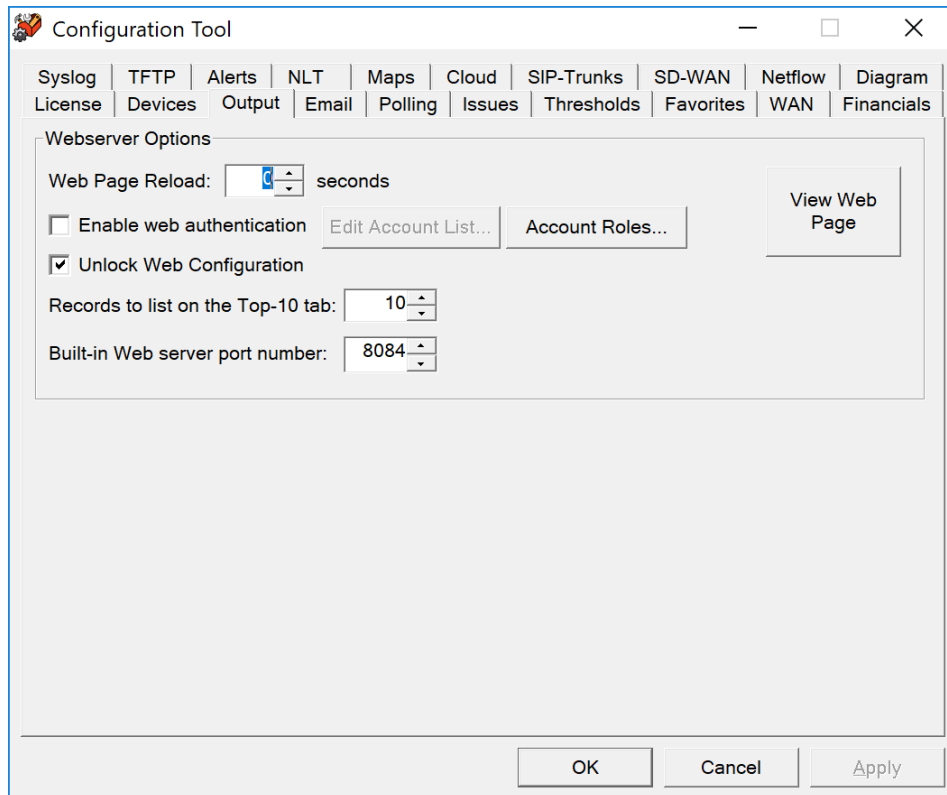


From this dialog, you can add accounts by clicking on the "Add Accounts" button, change account names and passwords, or delete accounts.

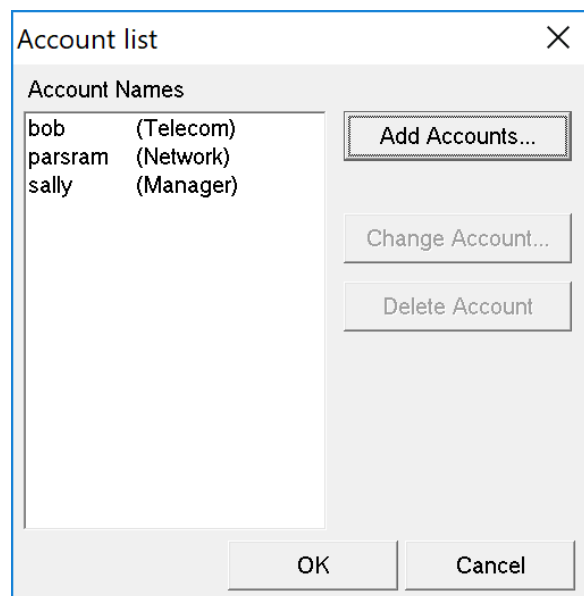

Web Configuration

If the web configuration is locked, and you want to unlock it, check the box “Unlock Web Configuration”.

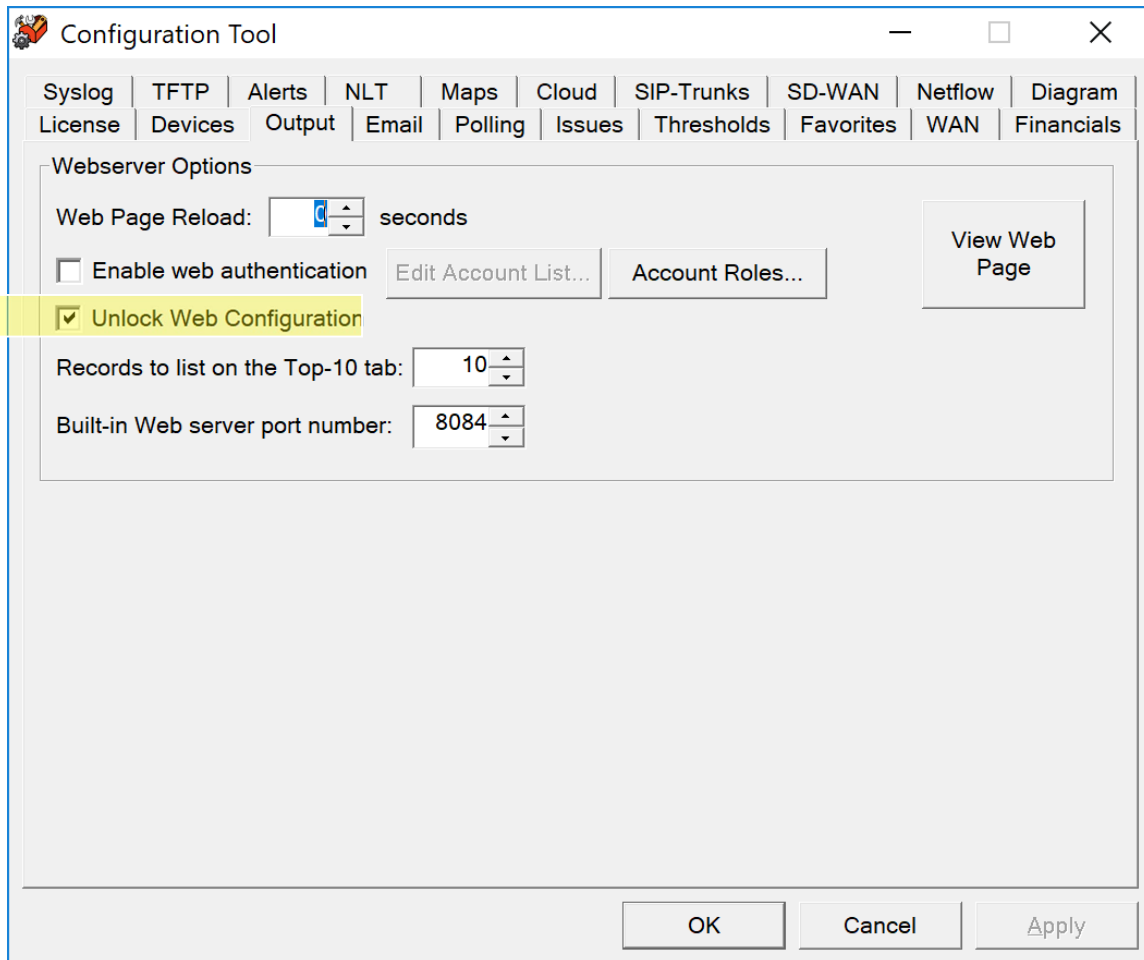


Listing Records on the Top-10 tab

The number of interfaces displayed on the Top-10 tab can be adjusted by increasing or decreasing the Top-10 Value.

Built-in Web Server Port Number

If you are using the integrated Web server to serve pages, you can specify the port that the program should use. You should choose a port that is unused on your system or the service may not be able to use that port.

If you select a port and then apply the changes by clicking on "Apply" or "OK", and the server does not respond on that port, check the application event log to determine if there may be a port conflict.

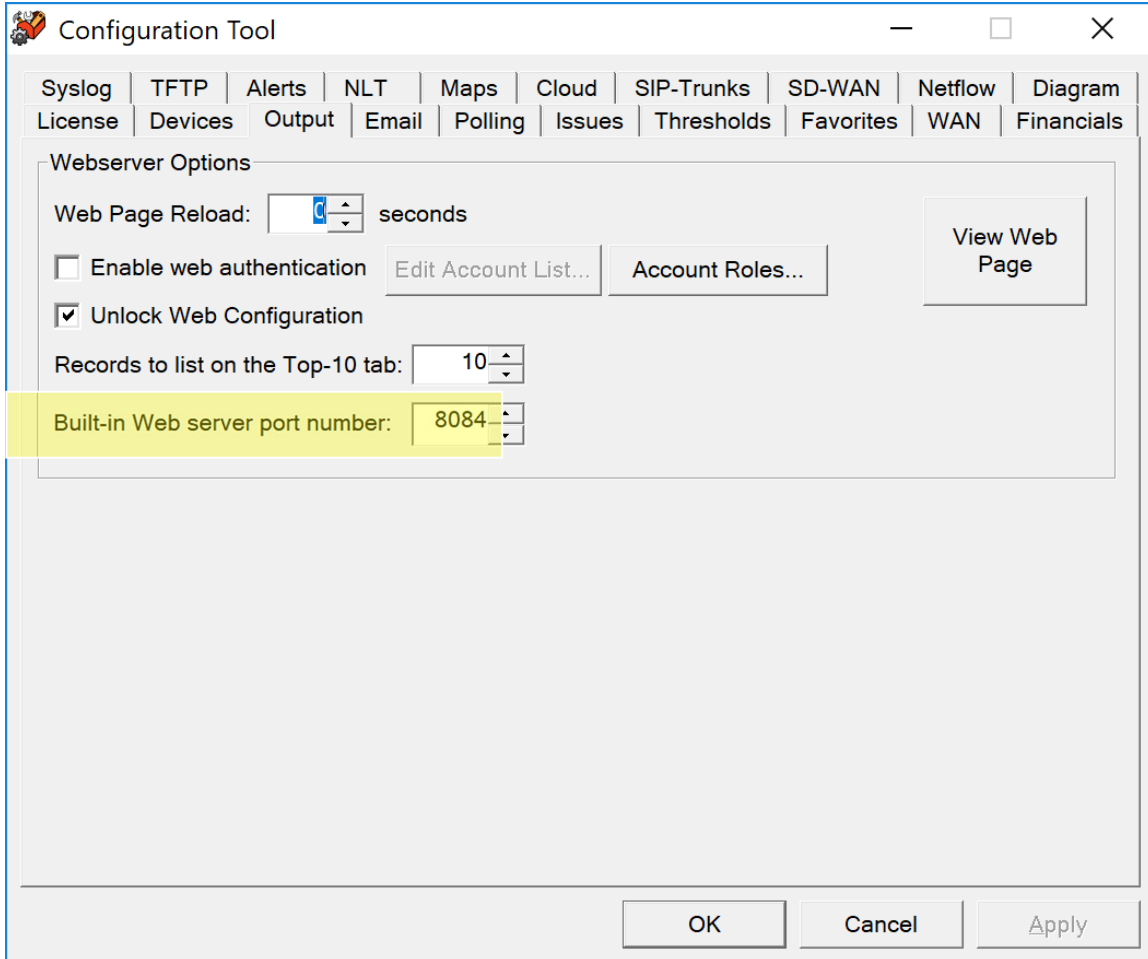

Configuring Email

Select the "Email" tab. You should see the Configuration Tool email configuration window:

This dialog allows you to change information relating to the network "Weather Report".

If you want to receive a daily network Weather Report, check the Send Daily Network Weather Report box.

You must enter an Internet SMTP email address that the report should be sent from and an Internet SMTP email address that the report should be sent to. If you want reports to be sent to multiple users on the network, enter the user names here separated by a semicolon, comma, or space.

You must also enter your SMTP relay server IP address. This address can be your SMTP mail Internet gateway server's IP address (depending on your mail server configuration). If you are uncertain, check with your email server administrator. Appendix C contains additional information on SMTP relay server configuration.

Click "Test" to send a test email to all users listed.

If you want to modify the network Weather Report, click "Edit Report". You will be able to modify the default report to include your company logo, custom information, or shrink the email to display only the information you are interested in.

Note: The report uses MIME encoding to allow email readers to respect the content as HTML formatted content. If you need assistance with modifying this report, and do not understand MIME encoding, refer to the IETF's RFC1521 (www.ietf.org) or contact PathSolutions technical support for assistance.

The following objects can be included in the report:


%%	This will output a single "%" sign
%DATE%	Current date
%TIME%	Current time
%URL-HOME%	URL to the System Monitor home page
%URL-GRAPHICS%	URL pointer to the graphics directory (this can be re-directed to an Internet location)
%ISSUES%	Text table showing the interfaces that are currently over the utilization rate or over the error rate
%ISSUES*%	HTML table showing the interfaces that are currently over the utilization rate or over the error rate
%STATUS-ERR%	Error rate threshold
%STATUS-UTIL%	Utilization rate threshold
%STATUS-RESULT%	Current status: Good or Degraded
%STATUS-COLOR%	HTML color green if the status is Good, or the HTML color red if the status is degraded
%IFSTATUS-GOOD%	If the current status is 'Good', then the text following will be parsed and displayed up until %ENDIF%
%IFSTATUS-DEGRADED%	If the current status is 'Degraded', then the text following will be parsed and displayed up until %ENDIF%
%TOPCOUNT%	Number of interfaces that are configured to be displayed in the 'Top X' lists (Top 10 Errors, etc.)
%TOPERRORS%	Text table showing the interfaces that have the highest error rates
%TOPERRORS*%	HTML table showing the interfaces that have the highest error rates
%URL-TOPERRORS%	URL pointer to the current top errors web page
%TOPTRANSMITTERS%	Text table showing the top 10 interfaces with the most data transmitted by utilization percentage
%TOPTRANSMITTERS*%	HTML TABLE showing the top 10 interfaces with the most data transmitted by utilization percentage
%URL-TOPTRANSMITTERS%	URL pointer to the current top transmitters web page
%TOPRECEIVERS%	Top 10 Interfaces with Highest Daily Received Rates Sorted by Utilization
%TOPRECEIVERS*%	HTML table showing Top 10 Interfaces with Highest Daily Received Rates Sorted by Utilization
%URL-TOPRECEIVERS%	URL pointer to the current top receivers web page
%TOPLATENCY%	Top 10 Devices with the Highest Daily Latency Sorted by Latency
%TOPLATENCY*%	HTML table showing Top 10 Devices with the Highest Daily Latency Sorted by Latency
%URL-TOPLATENCY%	URL pointer to the current top 10 Devices with the Highest Daily Latency
%TOPJITTER%	Top 10 Devices with the Highest Daily Jitter Sorted by Jitter
%TOPJITTER*%	HTML table showing Top 10 Devices with the Highest Daily Jitter Sorted by Jitter
%URL-TOPJITTER%	URL pointer to the current top 10 Devices with the Highest Daily Jitter
%TOPLOSS%	Top 10 Devices with the Highest Daily Loss Sorted by Loss
%TOPLOSS*%	HTML table showing Top 10 Devices with the Highest Daily Loss Sorted by Loss
%URL-TOPLOSS%	URL pointer to the current top 10 Devices with the Highest Daily Loss
%TOPTALKERS%	Text table showing the interfaces that have the highest transmission rates by kilobit
%TOPTALKERS*%	HTML table showing the interfaces that have the highest transmission rates by kilobits

%URL-TOPTALKERS%	URL pointer to the current top talkers web page
%TOPLISTENERS%	Text table showing the interfaces that have the highest reception rates
%TOPLISTENERS*%	HTML table showing the interfaces that have the highest reception rates
%URL-TOPLISTENERS%	URL pointer to the current top listeners web page
%ADMINDOWN%	Text table showing the interfaces that are currently administratively shut down
%ADMINDOWN*%	HTML table showing the interfaces that are currently administratively shut down
%ADMINDOWN#%	Total number of administratively shut down interfaces
%URL-ADMINDOWN%	URL pointer to the current admin down web page
%OPERDOWN%	Text table showing the interfaces that are currently operationally shut down
%OPERDOWN*%	HTML table showing the interfaces that are currently operationally shut down
%OPERDOWN#%	Total number of operationally shut down interfaces
%URL-OPERDOWN%	URL pointer to the current oper down web page


Note: Do NOT put a period "." on its own line anywhere in this file.

Configuring the Cloud Tab

The interfaces displayed on the Cloud tab can be adjusted with the Configuration Tool:

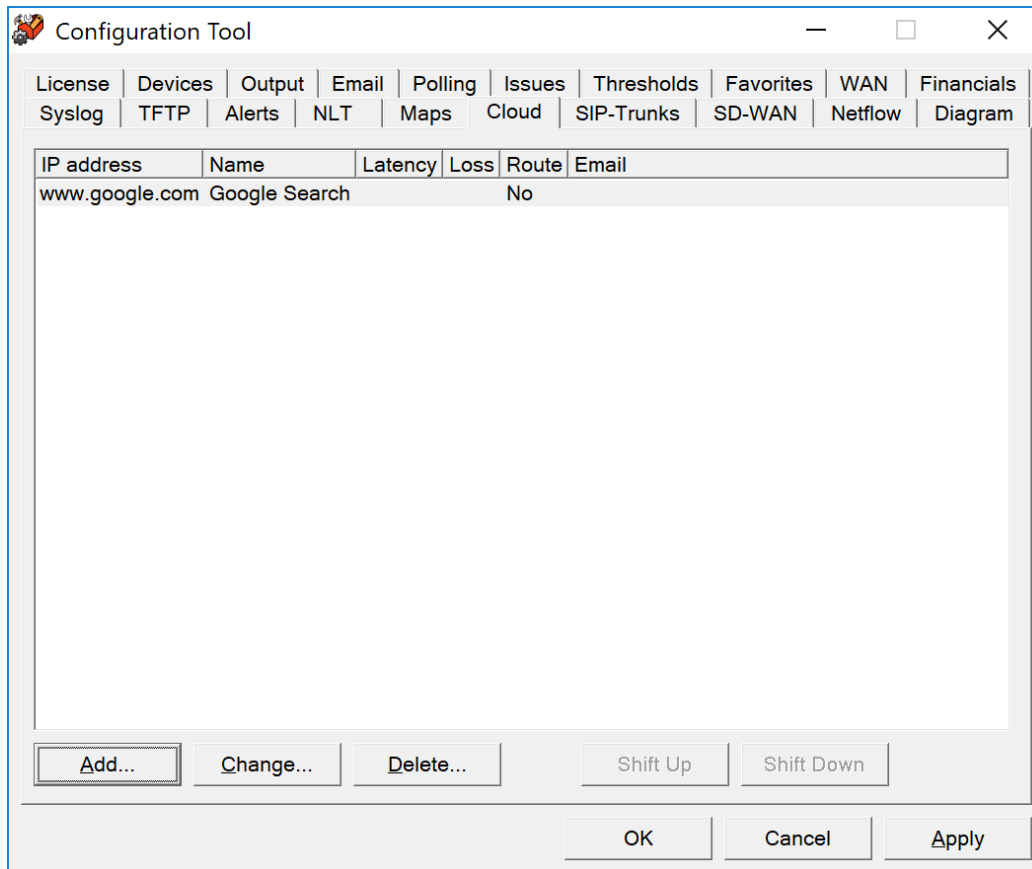


To configure Cloud interfaces, select the Cloud tab. Here, you can add, change, or delete any websites by using the Add, Change and Delete buttons, and entering an IP address. You can also setup email alerts for latency and loss thresholds. You can also assign a sort order, by using the Shift Up or Shift Down keys.

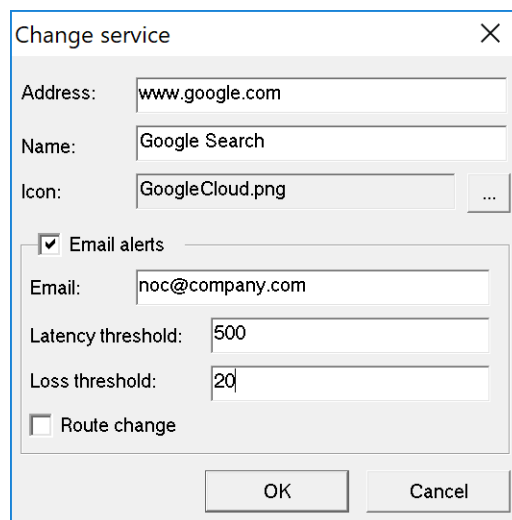

Configuring the SIP-Trunks Tab

The interfaces displayed on the SIP-Trunks tab can be adjusted with the Configuration Tool:

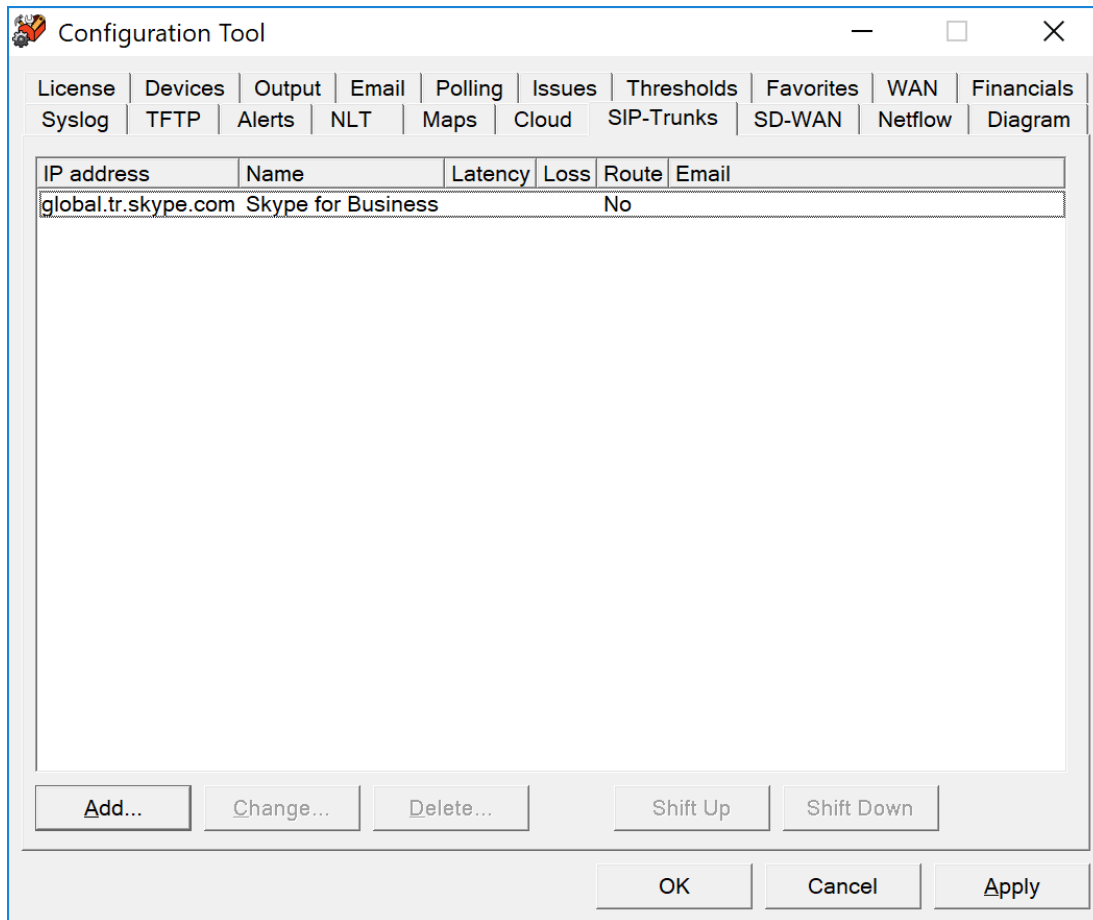

To configure SIP-Trunk interfaces, select the SIP-Trunks Tab. Here, you can add, change, or delete any interfaces by using the Add, Change and Delete buttons, and entering an IP address. Adding a Service Icon picture is optional. You can also setup email alerts for latency and loss thresholds. You can also assign a sort order, by using the Shift Up or Shift Down keys.

Change service

Address:

Name:

Icon: ...

Email alerts

Email:

Latency threshold:


Loss threshold:

Route change

OK Cancel

Configuring the SD-WAN Tab

The interfaces displayed on the SD-WAN tab can be adjusted in the Configuration Tool:

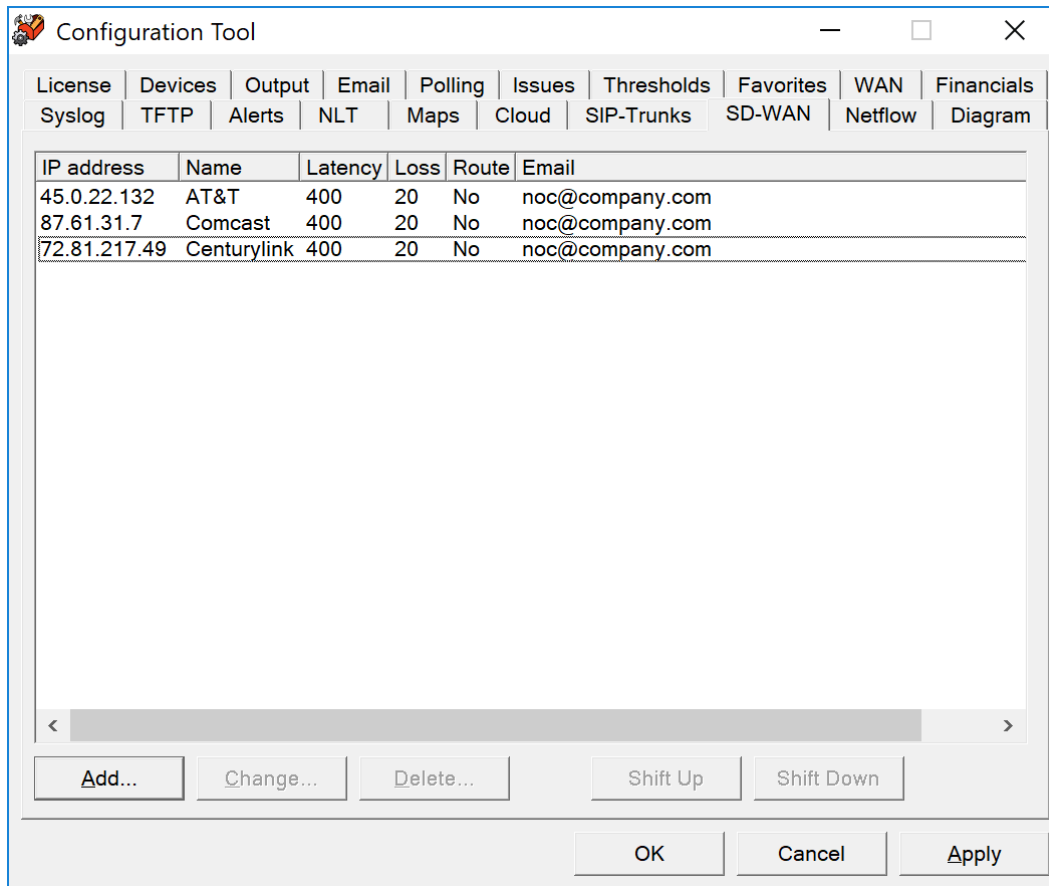

To configure SD-WAN, select the SD-WAN tab. Here, you can add, change, or delete services by using the Add, Change and Delete buttons, and entering an IP address and name. Adding a Service Icon picture is optional. You can also setup email alerts for latency and loss thresholds. You can also assign a sort order, by using the Shift Up or Shift Down keys.

Address: 45.0.22.132

Name: AT&T

Icon: ...

Email alerts

Email: noc@company.com

Latency threshold: 400


Loss threshold: 20

Route change


OK Cancel

Configuring the NetFlow Tab

The interfaces displayed on the NetFlow tab can be adjusted in the Configuration tool:

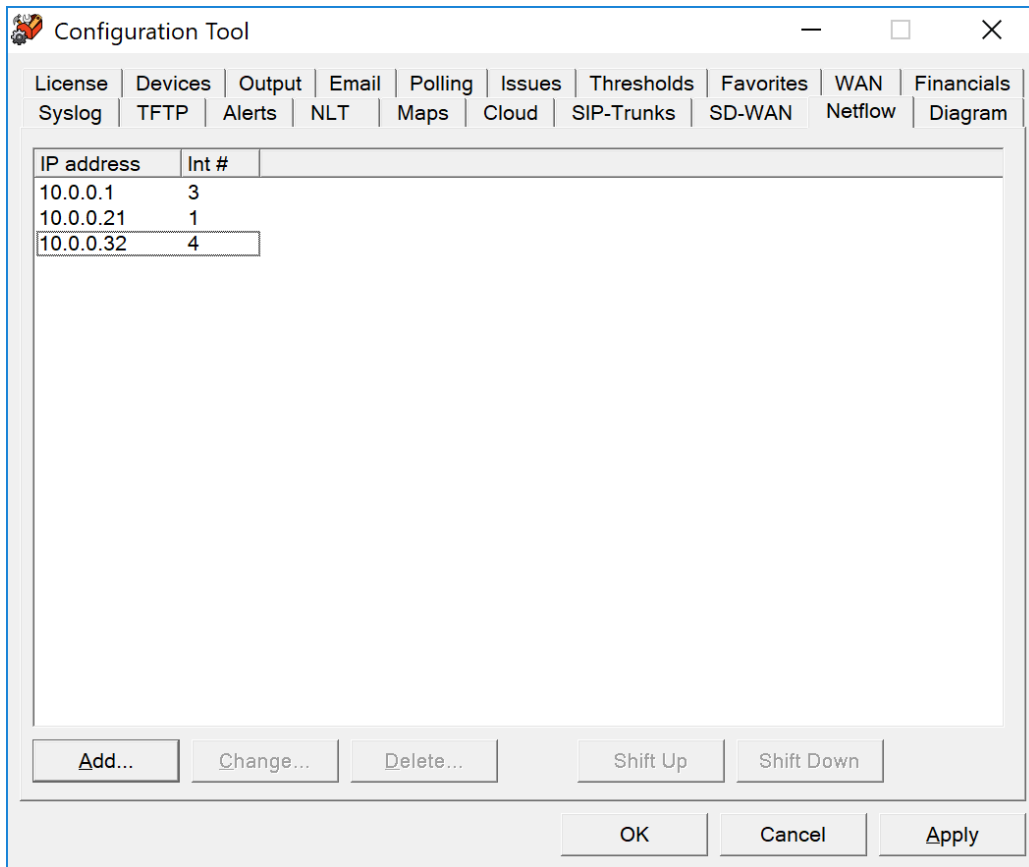


To configure NetFlow, select the NetFlow tab. Here, you can add, change, or delete any interfaces by using the Add, Change and Delete buttons, and entering an IP address. You can also assign a sort order, either by entering an Interface number or by using the Shift Up or Shift Down keys.

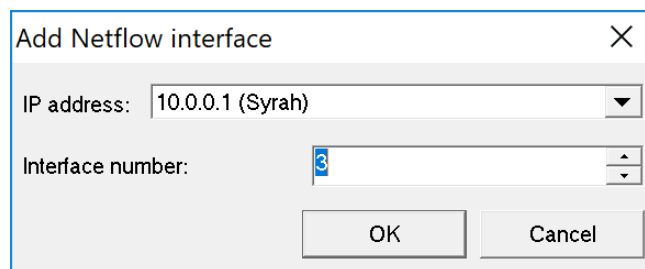

Configuring the Diagram Tab

The interfaces displayed on the Automatic Interactive Network Diagram tab can be adjusted in the Configuration Tool:

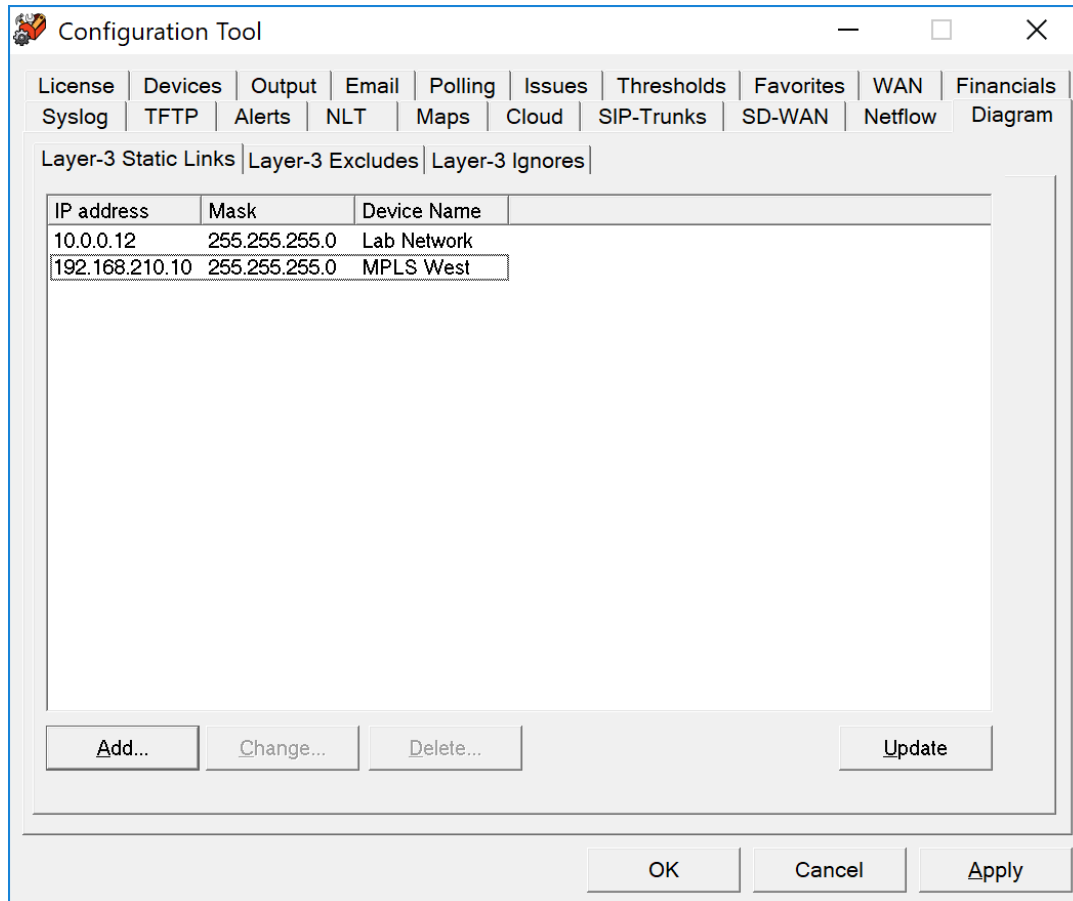

To configure the Automatic Interactive Network Diagram, select the Diagram tab. Here, you can add, change, or delete interfaces and devices that are displayed on the diagram.

Layer-3 Static Links

The Layer-3 Static Links sub-tab is used to tie separate networks together when they have no direct connection like when an MPLS or VPN cloud is between subnets.

Enter the IP address and mask of an existing subnet and the Name of the cloud that you want to connect.

Add static link

IP address: 10 . 0 . 0 . 12


Mask: 255 . 255 . 255 . 0

Name: Lab Network

OK Cancel

In general, you will want multiple subnets to connect to the same Cloud Name. The Cloud Name field must be identical to have them connect to each other.

Here is an example of a WAN cloud that connects three subnets together:

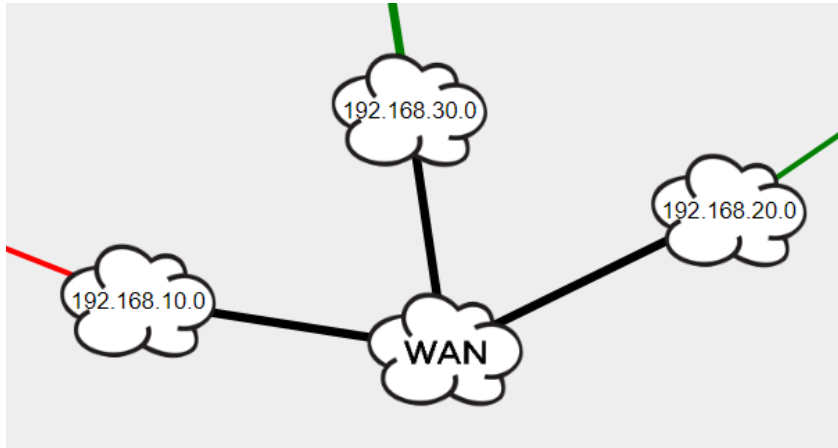

When you are finished adding your links, click the “Update” button and then refresh the web page to see how it takes effect. There is no need to restart the service to have this take effect. This allows you to quickly make changes and see the results.

Layer-3 Excludes

The Layer-3 Excludes tab allows you to exclude large sections of your network from the diagram. This is useful if you have a lab network that you do not want to be part of the diagram, but still want to be monitored.

Enter the IP address and subnet mask of devices and subnets that you want to not be displayed on the diagram. Click “Update” and then refresh your browser window and the subnets and devices will be immediately removed from the diagram.

Layer-3 Ignores

If you want to remove a specific link from the diagram, enter it on this tab.

When you are finished, click “Update” to see and verify that the link was removed.

Polling Options

TotalView will need to know how long to wait for a response before declaring an individual poll as failed. The default is 3000ms (3 seconds). If you have a network that has extremely high latencies you may choose to increase this number. If you want the PathSolutions TotalView to declare a device as failed if it does not respond within a smaller response window you can adjust this number down.

Polling Threads

PathSolutions' TotalView uses 20 threads for polling devices for SNMP information. If you have a faster computer, you may choose to increase this number. If you have a slower computer, and PathSolutions TotalView is utilizing 100% of the system's CPU during a polling cycle, you may get better performance by reducing this number. This will cause less thread overhead in the system.

Configuring the Polling Frequency

You will want to select how often the program should poll each interface.


The default is 5 minutes. Less frequent polls will decrease the traffic on your network; however, it will not provide you with as granular information on utilization and error rates.

Note: If you change the polling frequency, all historical utilization information (daily, weekly, monthly, and yearly graphs) will be erased when you click “OK”, or “Apply”.

Note: It is very important to make sure you do not poll your devices too often, as this can add to network overhead. In general, you should poll your interfaces every 5 minutes.

Configuring Polling Behavior

Use the Configuration Tool and Select the "Polling" tab. You should see the polling configuration window:

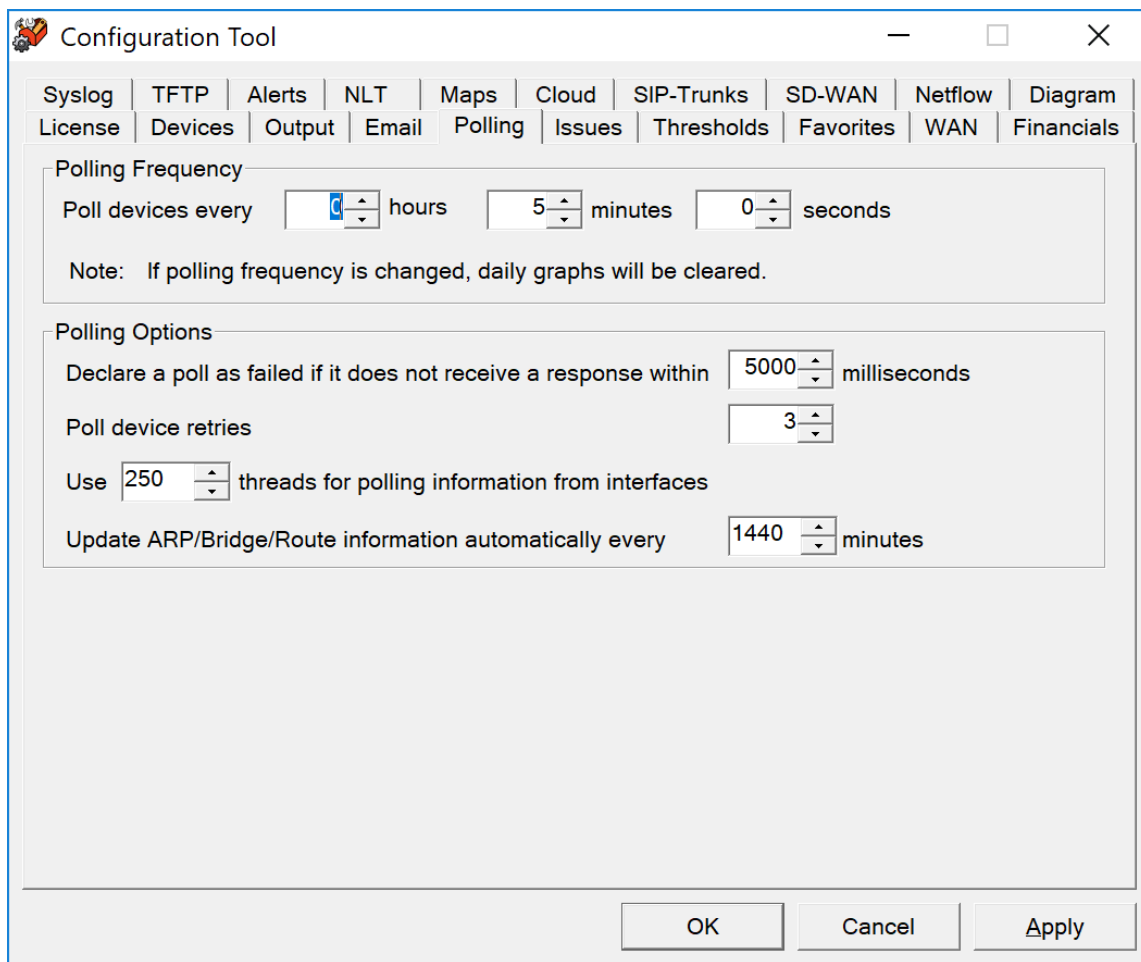


The screenshot shows the 'Configuration Tool' window with the 'Polling' tab selected. The window has a title bar with a minimize button, a maximize button, and a close button. Below the title bar is a navigation bar with tabs for Syslog, TFTP, Alerts, NLT, Maps, Cloud, SIP-Trunks, SD-WAN, Netflow, Diagram, License, Devices, Output, Email, Polling, Issues, Thresholds, Favorites, WAN, and Financials. The 'Polling' tab is active. The main content area is divided into two sections: 'Polling Frequency' and 'Polling Options'. In the 'Polling Frequency' section, there are three spinners for 'Poll devices every': 0 hours, 5 minutes, and 0 seconds. A note below states: 'Note: If polling frequency is changed, daily graphs will be cleared.' In the 'Polling Options' section, there are four settings: 'Declare a poll as failed if it does not receive a response within 5000 milliseconds', 'Poll device retries 3', 'Use 250 threads for polling information from interfaces', and 'Update ARP/Bridge/Route information automatically every 1440 minutes'. At the bottom of the window are three buttons: 'OK', 'Cancel', and 'Apply'.

TotalView is very 'network friendly', and makes every attempt to prevent flooding the network with requests. One minimum sized SNMP packet is sent per interface.

Issues Tab

You can specify what you want to see or don't want to see on the issues list here:

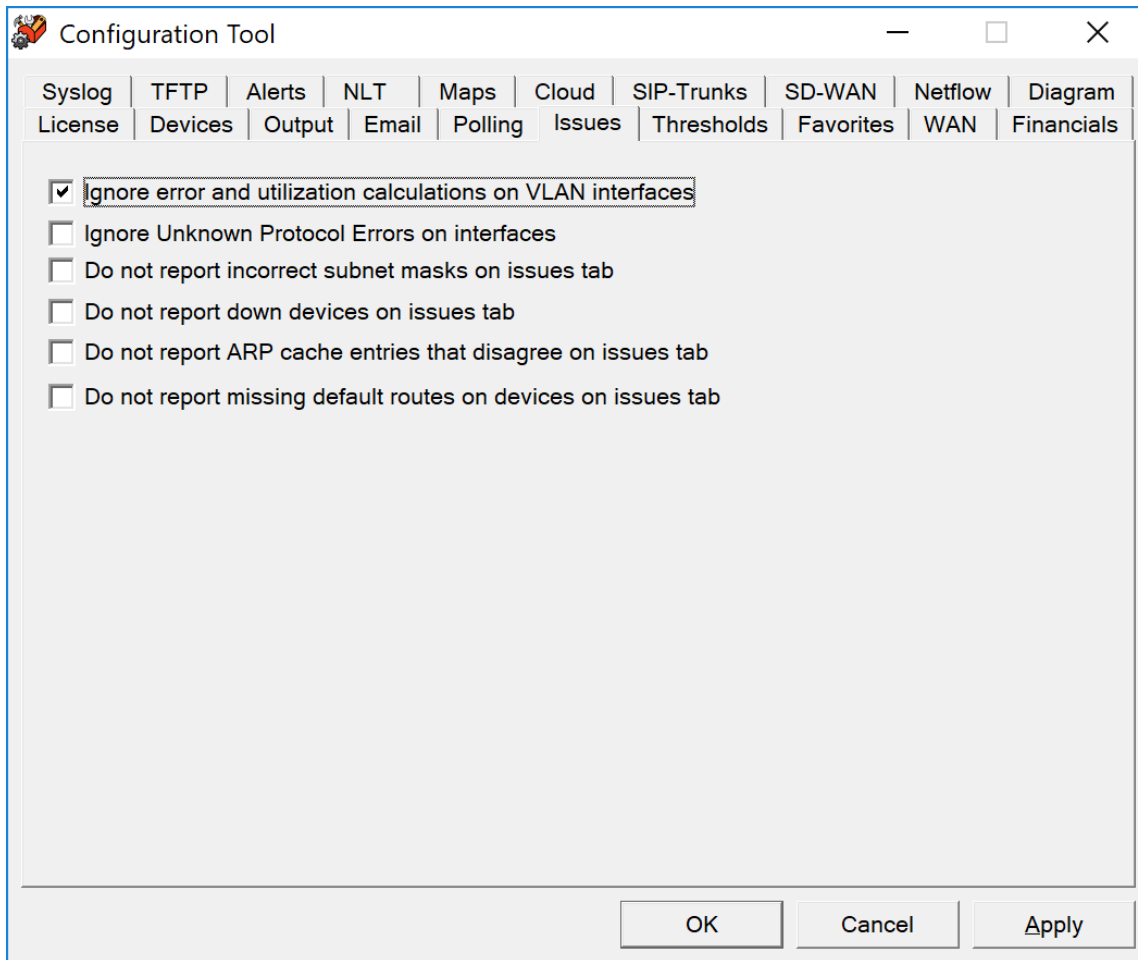

Ignoring Unknown Protocol Errors


Devices will increment the “Inbound Unknown Protocols” error counters on interfaces if strange protocols are received. This is typically when network adapters receive IPX, AppleTalk, or Cisco Discovery Protocol (CDP) broadcasts from devices. These packets can be perceived as errors since they may be unwanted protocols on the network, or the network administrator may view these as valid packets that were successfully delivered although are of no use to the recipient device. Check this box if you do not want to regard Inbound Unknown Protocols as errors.

VLAN Interfaces

For some switch manufacturers, VLAN interfaces report anomalous errors. If you do not want the error rate of VLAN interfaces calculated, check the “Ignore error calculations on VLAN interfaces” box. The VLAN interface will still be listed, but it will not become an “issue” listed under the “Issues” tab.

Configuring Thresholds

Select the “Thresholds” tab. You should see the TotalView Configuration Tool thresholds configuration window:

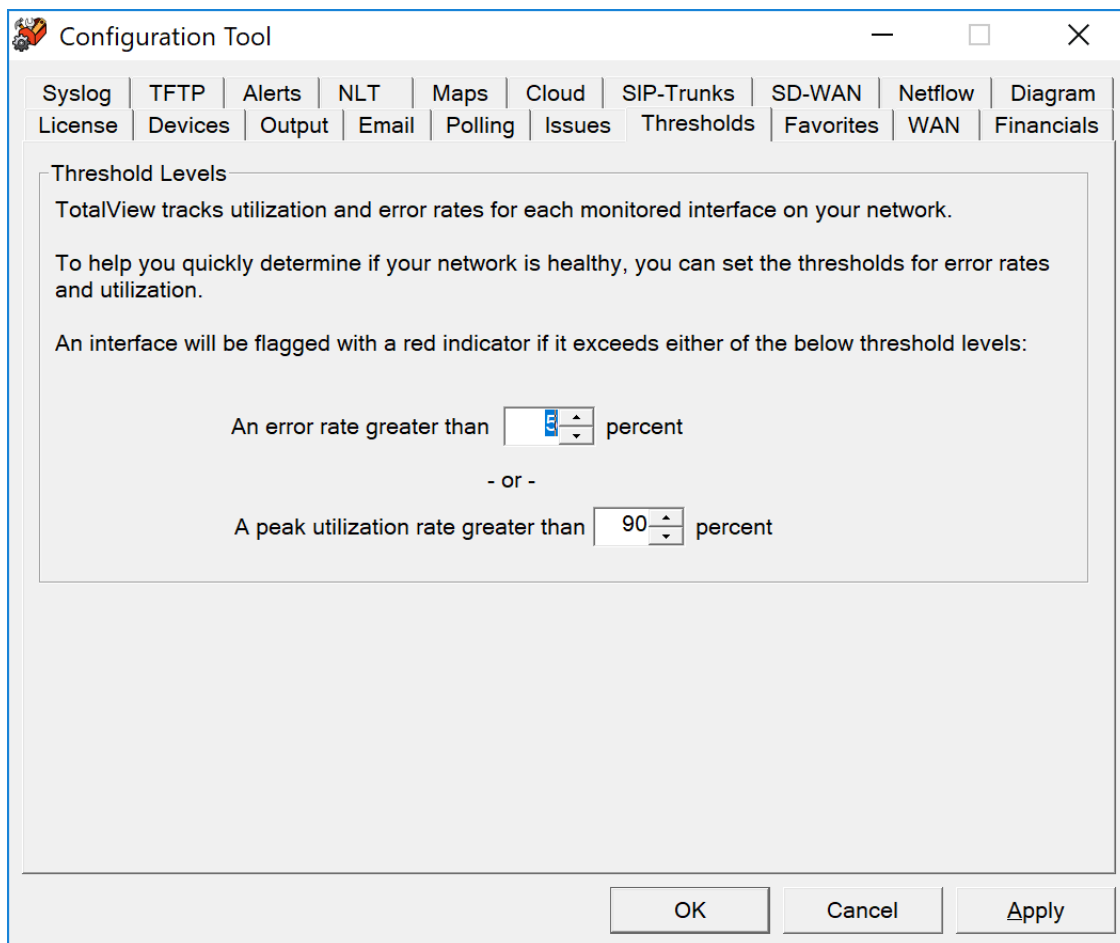

If an interface has an error rate higher than 5%, network status will be changed to 'Degraded'.

If an interface has a peak utilization rate (transmitted or received) over 90%, network status will be changed to 'Degraded'.



These numbers can be adjusted to suit your specific network environment, and your tolerance for errors.

When you are finished making changes, click "OK" to apply changes and exit the configuration tool.

Favorites

Specific interfaces can be grouped together for viewing in the Favorites tab in TotalView.

Use the Favorites tab below and click on the "Add" button to add the IP Address and Interface Number. You can also "Change" or "Delete" any interface in this list as needed. Use the Shift or Shift Down Button to sort the list in the order you would like to view them.

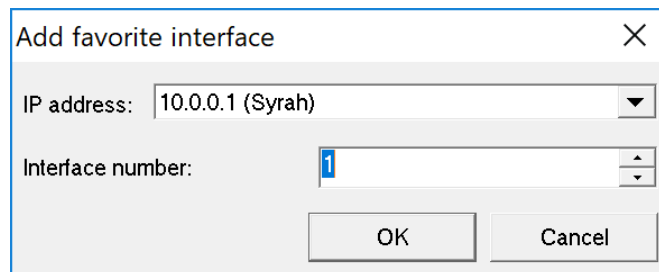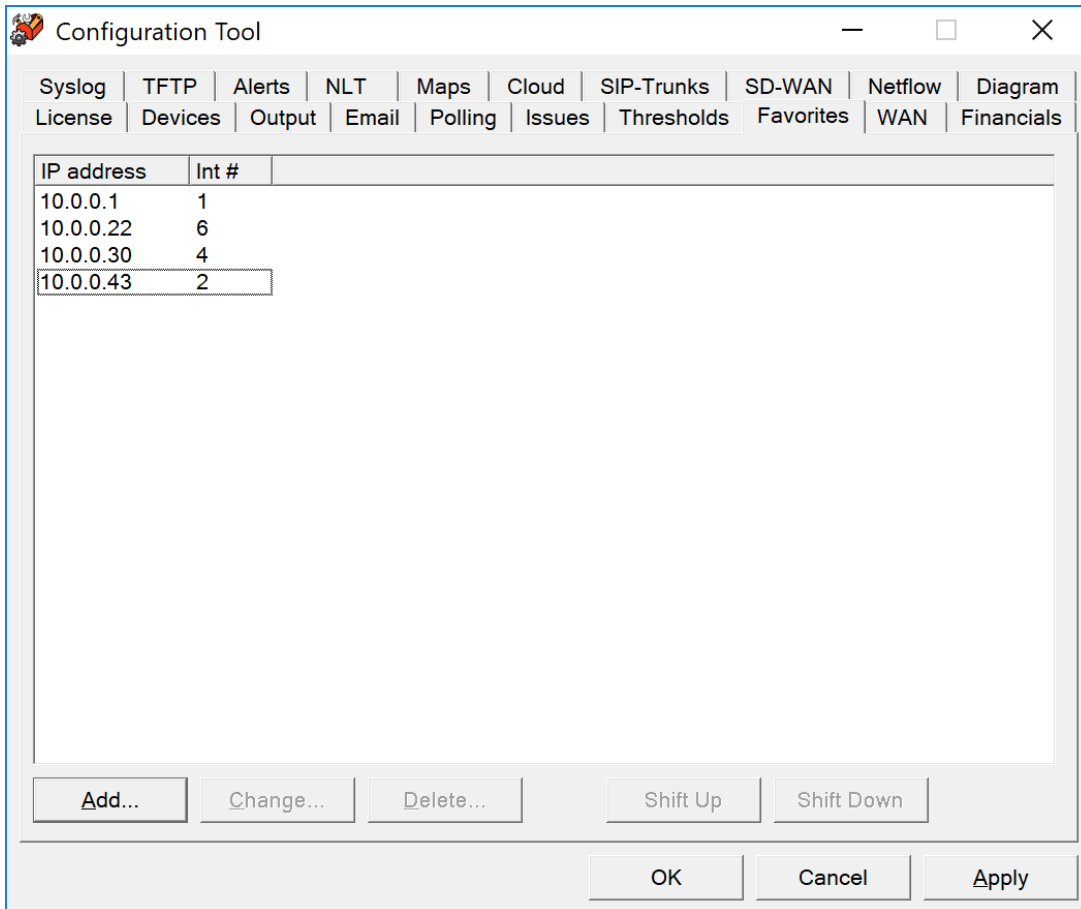

WAN

The WAN tab can include any interface desired.

Use the WAN tab below and click on the “Add” button to add the IP Address and Interface Number. You can also include the Provider, Circuit ID, Support Phone, Monthly Cost, Expiration Date any Notes about a device to display on your WAN page.

Any interface on this page can be “Changed” or “Deleted” as needed. Use the Shift or Shift Down Button to sort the list in the order you would like to view them.

The screenshot shows the 'Configuration Tool' window with the 'WAN' tab selected. The window has a menu bar with options: Syslog, TFTP, Alerts, NLT, Maps, Cloud, SIP-Trunks, SD-WAN, Netflow, Diagram, License, Devices, Output, Email, Polling, Issues, Thresholds, Favorites, WAN, and Financials. Below the menu is a table with the following data:

IP address	Int #	Provider	CircuitID	Support Phone	Monthly Cost	Expiration	Notes
10.0.0.1	1	AT&T	C8272-72-A827	1-877-555-1234	680	06/28/2019	Patch Pan
10.0.0.26	5	AT&T	C8272-71-B221	1-877-555-1234	378	06/28/2019	Patch Pan
10.0.0.38	0	Comcast	H726-82-716222-B	1-800-555-1234	197	08/29/2019	

Below the table are buttons for 'Add...', 'Change...', 'Delete...', 'Shift Up', and 'Shift Down'. At the bottom of the window are 'OK', 'Cancel', and 'Apply' buttons.


The 'Add WAN interface' dialog box contains the following fields:

- IP address: 10.0.0.1 (Syrah)
- Interface number: 1
- Provider: AT&T
- Circuit ID: C8272-72-A827
- Support phone: 1-877-555-1234
- Monthly cost: 680
- Expiration date: 6/28/2019
- Notes: Patch Panel B2-21

Buttons for 'OK' and 'Cancel' are located at the bottom of the dialog.

Financials

You may add your procurement cost and other financial information if you would like TotalView to do that tracking for you. You will see these on the WebUI on the Device Tab, Financials Subtab.

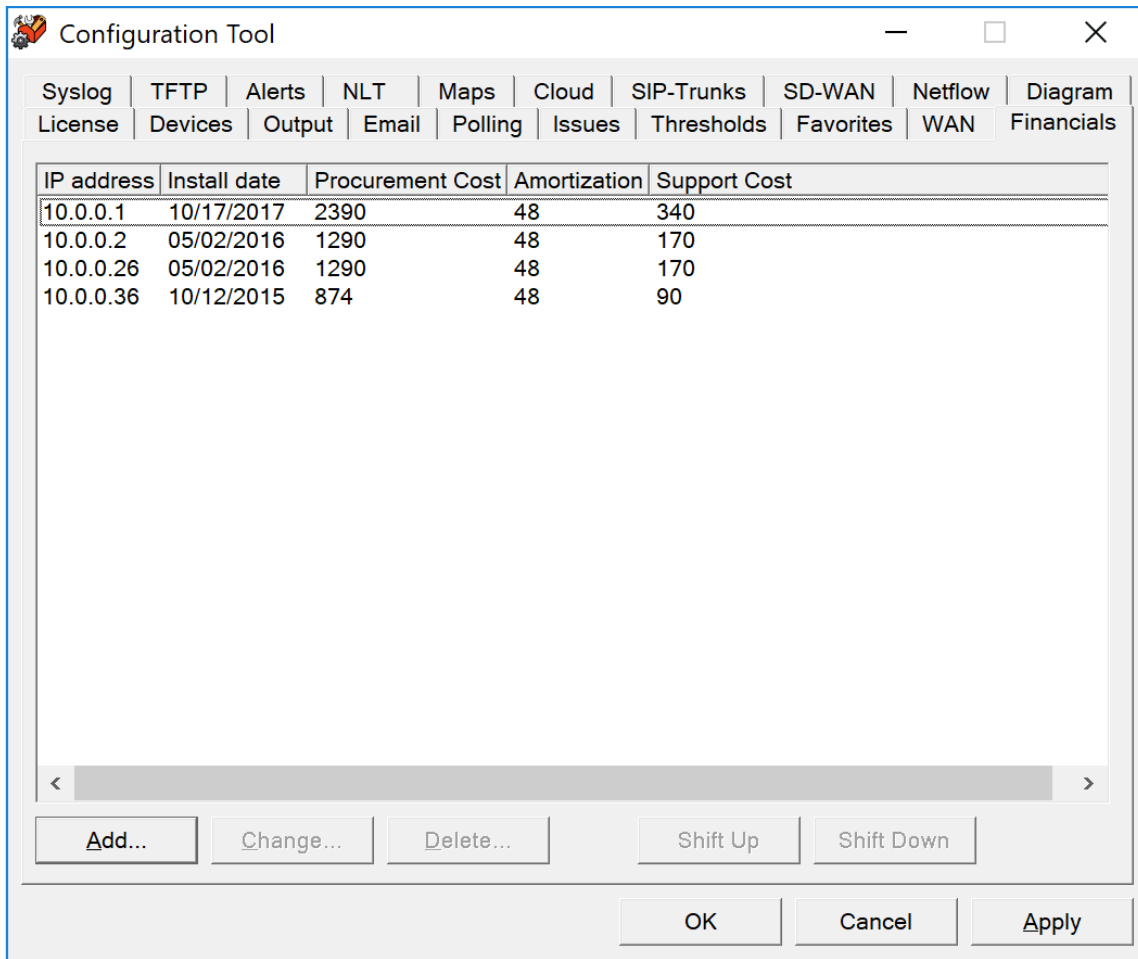


The screenshot shows the 'Configuration Tool' window with the 'Financials' subtab selected. It displays a table with the following data:

IP address	Install date	Procurement Cost	Amortization	Support Cost
10.0.0.1	10/17/2017	2390	48	340
10.0.0.2	05/02/2016	1290	48	170
10.0.0.26	05/02/2016	1290	48	170
10.0.0.36	10/12/2015	874	48	90

Below the table are buttons for 'Add...', 'Change...', 'Delete...', 'Shift Up', and 'Shift Down'. At the bottom of the window are 'OK', 'Cancel', and 'Apply' buttons.

You can add and change financial records, by clicking on the “Add” and “Change” buttons and entering new information:

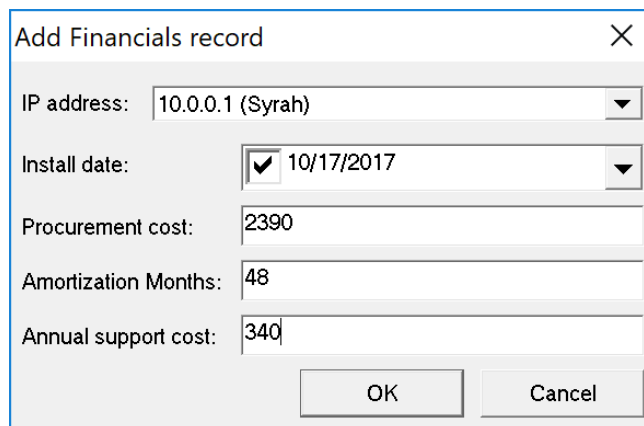


The 'Add Financials record' dialog box contains the following fields and values:

- IP address: 10.0.0.1 (Syrah)
- Install date: 10/17/2017
- Procurement cost: 2390
- Amortization Months: 48
- Annual support cost: 340

Buttons for 'OK' and 'Cancel' are located at the bottom right of the dialog.

Enabling the Syslog Server

The system has a built-in syslog server to receive and organize syslog messages received from network devices:

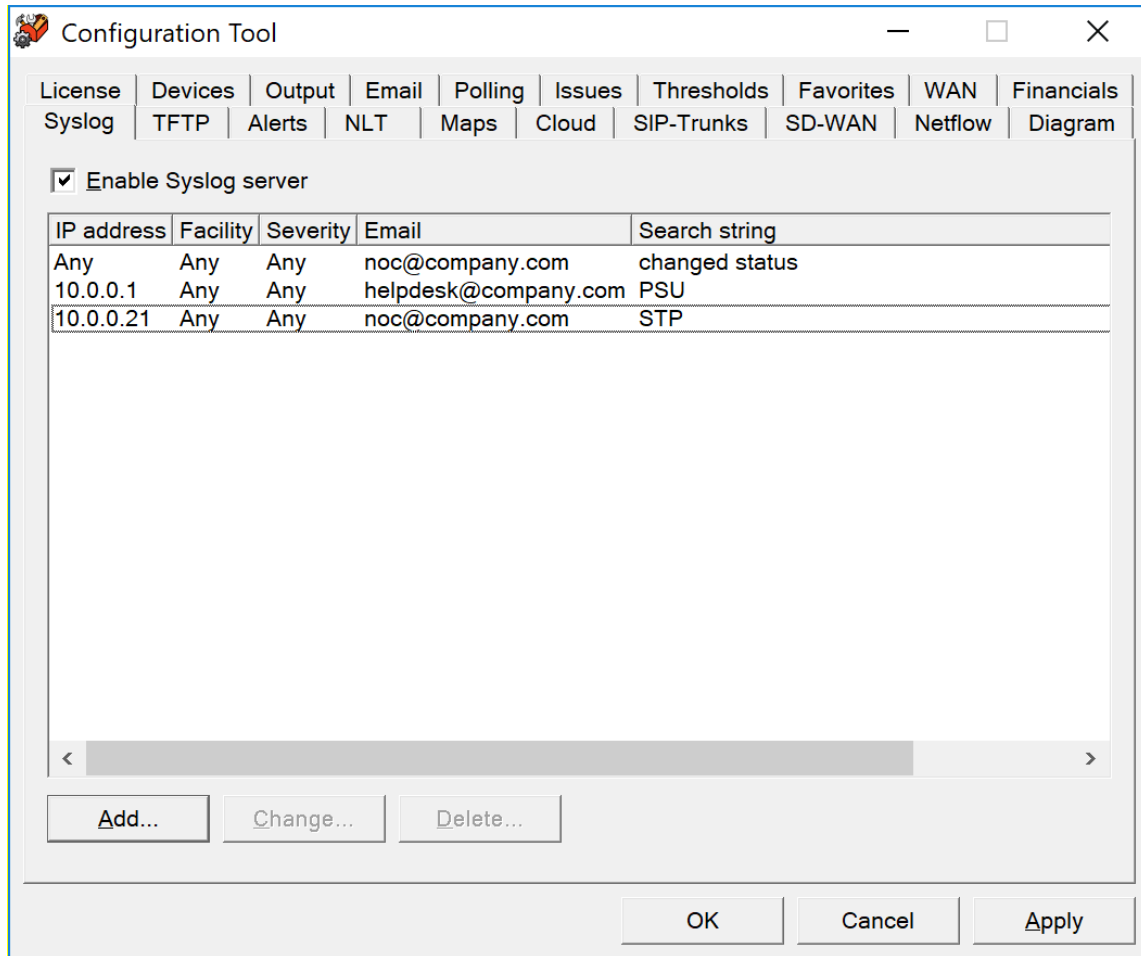


To enable the syslog server, check the box "Enable Syslog Server".

Syslog messages will be captured and be visible from the web pages. Click on the "Syslog" link to the right of "Telnet" and "Web" to view the received syslog messages from each device.

Note: You will have to configure each of your network devices to send their syslog messages to the PathSolutions TotalView server.

You can add or change alerting for syslog messages by clicking on the “Add” and “Change” buttons. You should see the following dialog:

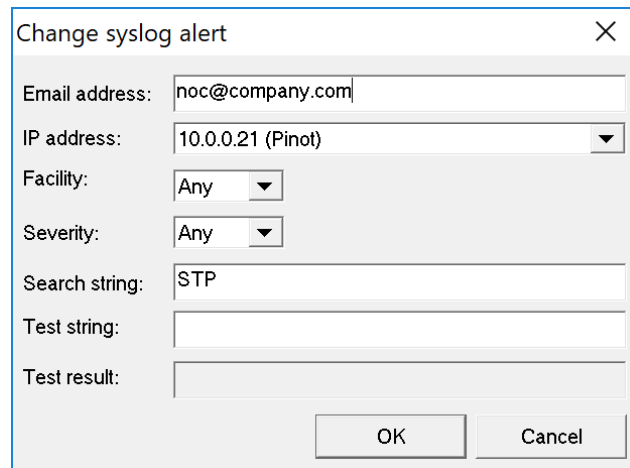

The image shows a dialog box titled "Change syslog alert" with a close button (X) in the top right corner. The dialog contains several input fields and dropdown menus:

- Email address:
- IP address: (dropdown menu)
- Facility: (dropdown menu)
- Severity: (dropdown menu)
- Search string:
- Test string:
- Test result:

At the bottom right of the dialog are two buttons: "OK" and "Cancel".

If you enter the search string with a regular expression, you can then enter a test string and see if it matches.

Enter the email address that should receive the alert, the IP address where the syslog message should come from, the facility number (or “Any” if it could be any facility number) the Severity number (or “Any”), The Search String, The Test String, to view the Test Result.

The Syslog matching capability is ECMAScript compatible.

Facility Levels

A facility level is used to specify what type of program is logging the message. This lets the configuration file specify that messages from different facilities will be handled differently.[4] The list of facilities available: (defined by [RFC 3164](#))

Facility Number	Keyword	Facility Description
0	kern	kernel messages
1	user	user-level messages
2	mail	mail system
3	daemon	system daemons
4	auth	security/authorization messages
5	syslog	messages generated internally by syslogd
6	lpr	line printer subsystem
7	news	network news subsystem
8	uucp	UUCP subsystem
9		clock daemon
10	authpriv	security/authorization messages
11	ftp	FTP daemon
12	-	NTP subsystem
13	-	log audit
14	-	log alert
15	cron	clock daemon
16	local0	local use 0 (local0)
17	local1	local use 1 (local1)
18	local2	local use 2 (local2)
19	local3	local use 3 (local3)
20	local4	local use 4 (local4)
21	local5	local use 5 (local5)
22	local6	local use 6 (local6)
23	local7	local use 7 (local7)

The mapping between Facility Number and Keyword is not uniform over different operating systems and different syslog implementations. For cron either 9 or 15 or both may be used. The confusion is even greater regarding auth/authpriv. 4 and 10 are most common but 13 and 14 may also be used.

Severity Levels

[RFC 5424](#) defines eight severity levels:

Code	Severity	Keyword	Description	General Description
0	Emergency	emerg (panic)	System is unusable.	A "panic" condition usually affecting multiple apps/servers/sites. At this level it would usually notify all tech staff on call.
1	Alert	alert	Action must be taken immediately.	Should be corrected immediately, therefore notify staff who can fix the problem. An example would be the loss of a primary ISP connection.
2	Critical	crit	Critical conditions.	Should be corrected immediately, but indicates failure in a secondary system, an example is a loss of a backup ISP connection.
3	Error	err (error)	Error conditions.	Non-urgent failures, these should be relayed to developers or admins; each item must be resolved within a given time.
4	Warning	warning (warn)	Warning conditions.	Warning messages, not an error, but indication that an error will occur if action is not taken, e.g. file system 85% full - each item must be resolved within a given time.
5	Notice	notice	Normal but significant condition.	Events that are unusual but not error conditions - might be summarized in an email to developers or admins to spot potential problems - no immediate action required.
6	Informational	info	Informational messages.	Normal operational messages - may be harvested for reporting, measuring throughput, etc. - no action required.
7	Debug	debug	Debug-level messages.	Info useful to developers for debugging the application, not useful during operations.

ECMAScript Regular Expressions Pattern Syntax (regex)

The following syntax is used to construct regex objects (or assign) that have selected ECMAScript as its grammar.

A *regular expression pattern* is formed by a sequence of characters.

Regular expression operations look sequentially for matches between the characters of the pattern and the characters in the target sequence: In principle, each character in the pattern is matched against the corresponding character in the target sequence, one by one. But the regex syntax allows for special characters and expressions in the pattern.

Special Pattern Characters

Special pattern characters are characters (or sequences of characters) that have a special meaning when they appear in a regular expression pattern, either to represent a character that is difficult to express in a string, or to represent a category of characters. Each of these special pattern characters is matched in the target sequence against a single character (unless a quantifier specifies otherwise).

characters	description	matches
.	not newline	any character except <i>line terminators</i> (LF, CR, LS, PS).
\t	tab (HT)	a horizontal tab character (same as \u0009).
\n	newline (LF)	a newline (line feed) character (same as \u000A).
\v	vertical tab (VT)	a vertical tab character (same as \u000B).
\f	form feed (FF)	a form feed character (same as \u000C).
\r	carriage return (CR)	a carriage return character (same as \u000D).
\c <code>letter</code>	control code	a control code character whose <i>code unit value</i> is the same as the remainder of dividing the <i>code unit value</i> of <i>letter</i> by 32. For example: \ca is the same as \u0001, \cb the same as \u0002, and so on...
\x <code>hh</code>	ASCII character	a character whose <i>code unit value</i> has a hex value equivalent to the two hex digits <i>hh</i> . For example: \x4c is the same as L, or \x23 the same as #.
\u <code>hhhh</code>	Unicode character	a character whose <i>code unit value</i> has a hex value equivalent to the four hex digits <i>hhhh</i> .
\0	null	a null character (same as \u0000).
\int	backreference	the result of the submatch whose opening parenthesis is the <i>int</i> -th (<i>int</i> shall begin by a digit other than 0). See groups below for more info.
\d	digit	a decimal digit character (same as <code>[[:digit:]]</code>).
\D	not digit	any character that is not a decimal digit character (same as <code>[^[:digit:]]</code>).
\s	whitespace	a whitespace character (same as <code>[[:space:]]</code>).
\S	not whitespace	any character that is not a whitespace character (same as <code>[^[:space:]]</code>).
\w	word	an alphanumeric or underscore character (same as <code>[_[:alnum:]]</code>).
\W	not word	any character that is not an alphanumeric or underscore character (same as <code>[^_[:alnum:]]</code>).

<code>\character</code>	character	the character <i>character</i> as it is, without interpreting its special meaning within a regex expression. Any <i>character</i> can be escaped except those which form any of the special character sequences above. Needed for: <code>^ \$ \ . * + ? () [] { } </code>
<code>[class]</code>	character class	the target character is part of the class (see character classes below)
<code>[^class]</code>	negated character class	the target character is not part of the class (see character classes below)

Notice that, in C++, character and string literals also escape characters using the backslash character (`\`), and this affects the syntax for constructing regular expressions from such types. For example:

```
1 std::regex e1 ("\\d"); // regular expression: \d -> matches a digit
   character
   std::regex e2 ("\\\\"); // regular expression: \\ -> matches a single
2 backslash (\) character
```

Quantifiers

Quantifiers follow a character or a special pattern character. They can modify the amount of times that character is repeated in the match:

characters	times	effects
<code>*</code>	0 or more	The preceding atom is matched 0 or more times.
<code>+</code>	1 or more	The preceding atom is matched 1 or more times.
<code>?</code>	0 or 1	The preceding atom is optional (matched either 0 times or once).
<code>{int}</code>	<i>int</i>	The preceding atom is matched exactly <i>int</i> times.
<code>{int,}</code>	<i>int</i> or more	The preceding atom is matched <i>int</i> or more times.
<code>{min, max}</code>	between <i>min</i> and <i>max</i>	The preceding atom is matched at least <i>min</i> times, but not more than <i>max</i> .

By default, all these quantifiers are greedy (i.e., they take as many characters that meet the condition as possible). This behavior can be overridden to ungreedy (i.e., take as few characters that meet the condition as possible) by adding a question mark (?) after the quantifier.

For example:

Matching `"(a+)."` against `"aardvark"` succeeds and yields `aa` as the first sub match.

While matching `"(a+?)."` against `"aardvark"` also succeeds, but yields `a` as the first sub match.

Groups

Groups allow applying quantifiers to a sequence of characters (instead of a single character). There are two kinds of groups:

characters	description	effects
<code>(subpattern)</code>	Group	Creates a backreference.
<code>(?:subpattern)</code>	Passive group	Does not create a backreference.

When a group creates a backreference, the characters that represent the subpattern in the target sequence are stored as a submatch. Each submatch is numbered after the order of appearance of their opening parenthesis (the first submatch is number 1; the second is number 2, and so on...).

These submatches can be used in the regular expression itself to specify that the entire subpattern should appear again somewhere else (see `\int` in the [special characters](#) list). They can also be used in the [replacement string](#) or retrieved in the [match_results](#) object filled by some [regex](#) operations.

Assertions

Assertions are conditions that do not consume characters in the target sequence: they do not describe a character, but a condition that must be fulfilled before or after a character.

characters	description	condition for match
^	Beginning of line	Either it is the beginning of the target sequence, or follows a <i>line terminator</i> .
\$	End of line	Either it is the end of the target sequence, or precedes a <i>line terminator</i> .
\b	Word boundary	The previous character is a <i>word character</i> and the next is a <i>non-word character</i> (or vice-versa). Note: The beginning and the end of the target sequence are considered here as <i>non-word characters</i> .
\B	Not a word boundary	The previous and next characters are both <i>word characters</i> or both are <i>non-word characters</i> . Note: The beginning and the end of the target sequence are considered here as <i>non-word characters</i> .
(?=subpattern)	Positive lookahead	The characters following the assertion must match <i>subpattern</i> , but no characters are consumed.
(?!subpattern)	Negative lookahead	The characters following the assertion must not match <i>subpattern</i> , but no characters are consumed.

Alternatives

A pattern can include different alternatives:

character	description	effects
	Separator	Separates two alternative patterns or subpatterns.

A regular expression can contain multiple alternative patterns simply by separating them with the *separator operator* (`|`): The regular expression will match if any of the alternatives match, and as soon as one does.

Subpatterns (in groups or assertions) can also use the *separator operator* to separate different alternatives.

Character classes

A character class defines a category of characters. It is introduced by enclosing its descriptors in square brackets (`[` and `]`).

The regex object attempts to match the entire character class against a single character in the target sequence (unless a quantifier specifies otherwise).

The character class can contain any combination of:

- Individual characters:** Any character specified is considered part of the class (except `\`, `[`, `]` and `-`, which have a special meaning under some circumstances, and may need to be escaped to be part of the class).
 For example:
`[abc]` matches a, b or c.
`[^xyz]` matches any character except x, y and z.
- Ranges:** They can be specified by using the hyphen character (`-`) between two valid characters.
 For example:
`[a-z]` matches any lowercase letter (a, b, c ... until z).
`[abc1-5]` matches either a, b or c, or a digit between 1 and 5.
- POSIX-like classes:** A whole set of predefined classes can be added to a custom character class. There are three kinds:

class	description	notes
<code>[:classname:]</code>	character class	Uses the <i>regex traits'</i> isctype member with the appropriate type gotten from applying lookup_classname member on <i>classname</i> for the match.
<code>[.classname.]</code>	collating sequence	Uses the <i>regex traits'</i> lookup_collatename to interpret <i>classname</i> .
<code>[=classname=]</code>	character equivalents	Uses the <i>regex traits'</i> transform_primary of the result of regex_traits::lookup_collatename for <i>classname</i> to check for matches.

- The choice of available classes depends on the [regex traits](#) type and on its selected locale. But at least the following character classes shall be recognized by any [regex traits](#) type and locale:

class	description	equivalent (with regex traits , default locale)
<code>[:alnum:]</code>	alpha-numerical character	isalnum
<code>[:alpha:]</code>	alphabetic character	isalpha
<code>[:blank:]</code>	blank character	isblank
<code>[:cntrl:]</code>	control character	iscntrl


<code>[[:digit:]]</code>	decimal digit character	isdigit
<code>[[:graph:]]</code>	character with graphical representation	isgraph
<code>[[:lower:]]</code>	lowercase letter	islower
<code>[[:print:]]</code>	printable character	isprint
<code>[[:punct:]]</code>	punctuation mark character	ispunct
<code>[[:space:]]</code>	whitespace character	isspace
<code>[[:upper:]]</code>	uppercase letter	isupper
<code>[[:xdigit:]]</code>	hexadecimal digit character	isxdigit
<code>[[:d:]]</code>	decimal digit character	isdigit
<code>[[:w:]]</code>	word character	isalnum
<code>[[:s:]]</code>	whitespace character	isspace

- Please note that the brackets in the class names are additional to those opening and closing the class definition.
For example:
`[[:alpha:]]` is a character class that matches any alphanumeric character.
`[abc[:digit:]]` is a character class that matches a, b, c, or a digit.
`[^[:space:]]` is a character class that matches any character except a whitespace.
- **Escape characters:** All escape characters described above can also be used within a character class specification. The only change is with `\b`, that here is interpreted as a backspace character (`\u0008`) instead of a word boundary.
Notice that within a class definition, those characters that have a special meaning in the regular expression (such as `*`, `.`, `$`) don't have such a meaning and are interpreted as normal characters (so they do not need to be escaped). Instead, within a class definition, the hyphen (`-`) and the brackets (`[` and `]`) do have a special meaning under some circumstances, in which case they should be escaped with a backslash (`\`) to be interpreted as normal characters.

Character classes' support depends heavily on the [regex traits](#) used by the [regex](#) object: the [regex](#) object calls its traits' [isctype](#) member function with the appropriate arguments. For the standard [regex_traits](#) object using the default locale, see [cctype](#) for a classification of characters.

Enabling the TFTP Server


The system can receive TFTP files from network devices via the built-in TFTP server:

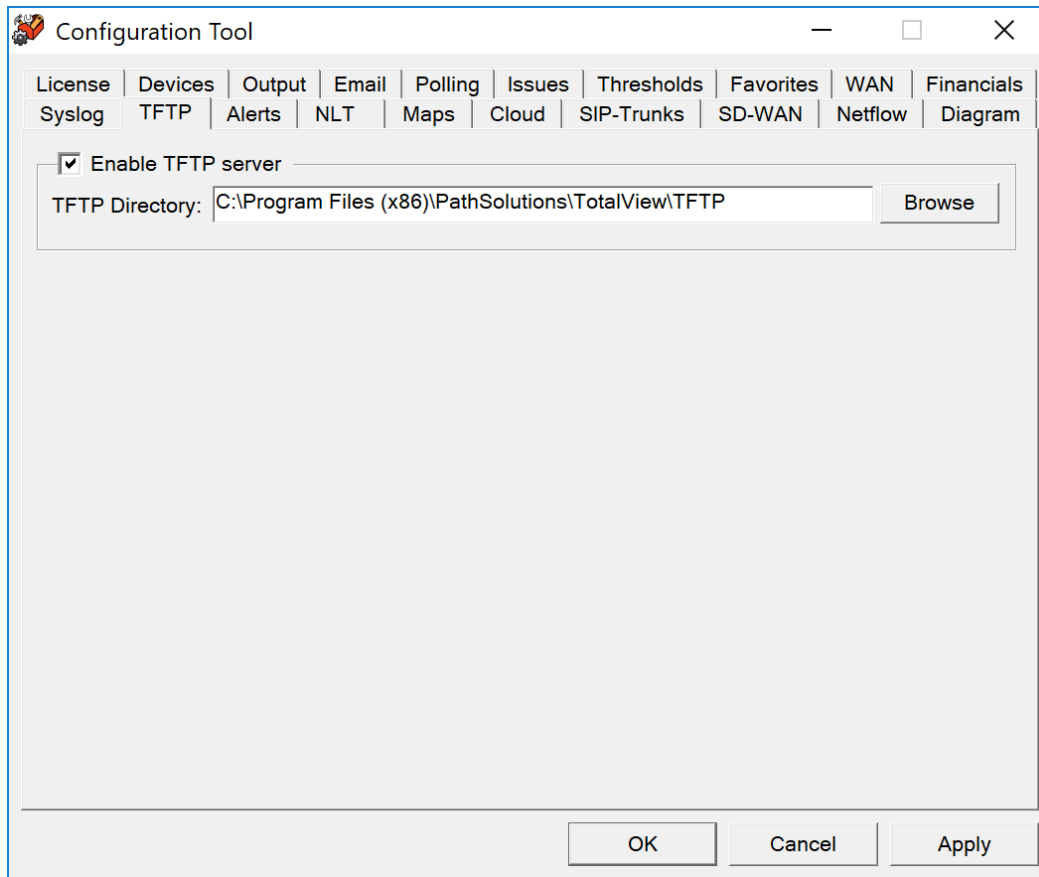

You can enter a different directory where the TFTP files are saved/retrieved from if desired.

Enabling Alerting

The system can generate alerts if interfaces change status or exceed set levels of utilization or errors:

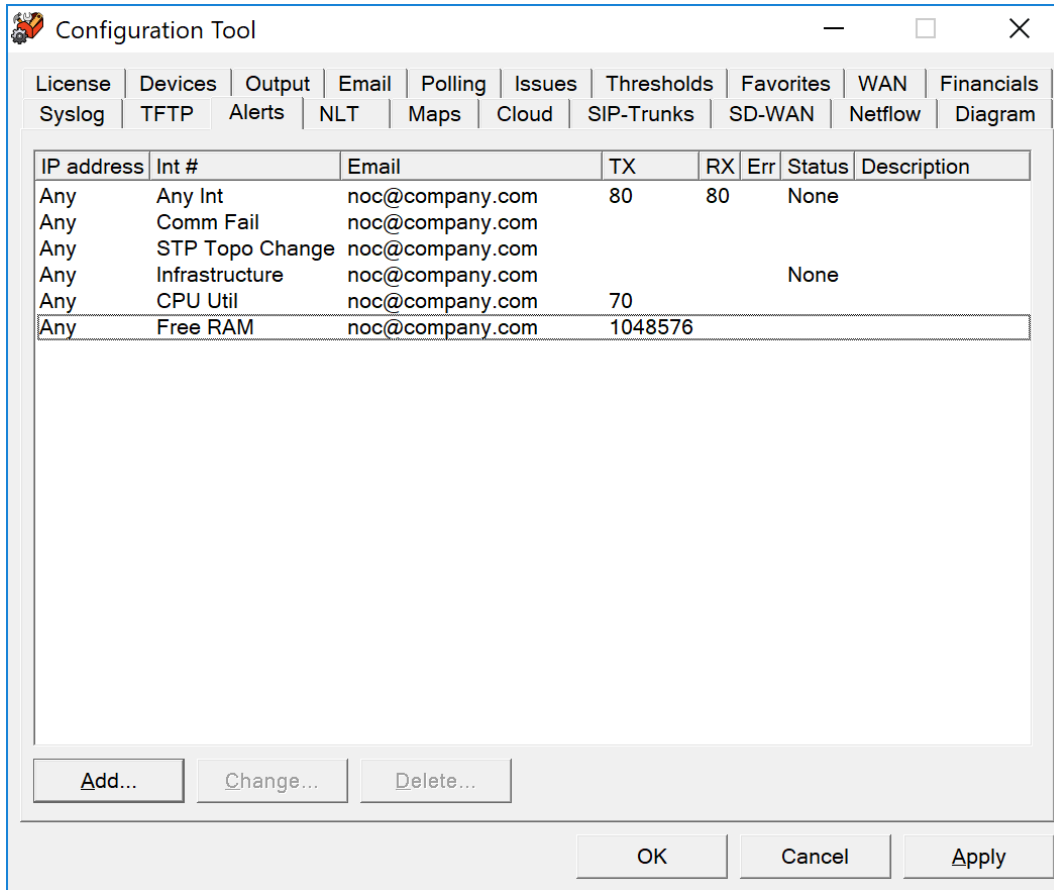

You can add or change alerting for interfaces or devices on the Alerts tab.

If you click Add, you should see the following alert configuration dialog:

Enter the email address that should receive the alert and a description of the alert.

You can then enter the IP address of the device, or “Any” to match any device, or a device group to match any IP address in a device group.

You can then choose a device-related alert like the following:

- **Device Communications Failure:** This will trigger if the device does not respond to the initial SNMP query at the start of a poll. If it does not respond, it will attempt to ping the device to see if it is completely unreachable and then send the appropriate alert.
- **Cisco CPU utilization:** This will trigger if the Cisco device shows its 5 minute average CPU utilization above the threshold level.
- **Cisco free RAM:** This will trigger if the amount of free RAM on the device drops below this level.
- **MOS score:** This will trigger if the MOS score to/from the device drops below this level.
- **Spanning-tree topology change:** This will trigger if the spanning-tree topology changes for the layer-2 domain.

You may also choose an interface-related alert. The interface related alerts allow selecting interfaces based on the following criteria:


- **Any interface:** Any interface on the selected device(s)
- **Interface number:** This allows selecting a specific interface number
- **Interface description:** This allows entering an interface description that will match with text that exists on the interface description or interface alias.
- **Interface type:** This allows selecting a specific interface type that would match interfaces.
- **Infrastructure Interface:** This type of interface matches any interface that is a switch interface that connects to another switch (more than 4 MAC addresses on an interface), or connects to another monitored device (switch, server, or router), or is an interface on a server or router. This allows selecting “all non-user switch interfaces” with one selection.

For interface alerts, trigger thresholds can be set for one or multiple conditions:

- Transmit Utilization Rate
- Receive Utilization Rate
- Error Rate
- Status change: PoE change or up/down change

PoE Alerting

If you want to know if any PoE enabled device is connected or disconnected from your network select the "Status Change" PoE change option from the drop-down box. You can track when and where VoIP phones are moved, rogue access points are connected to the network, or when VoIP phones are disconnected from the network to help track phone theft.

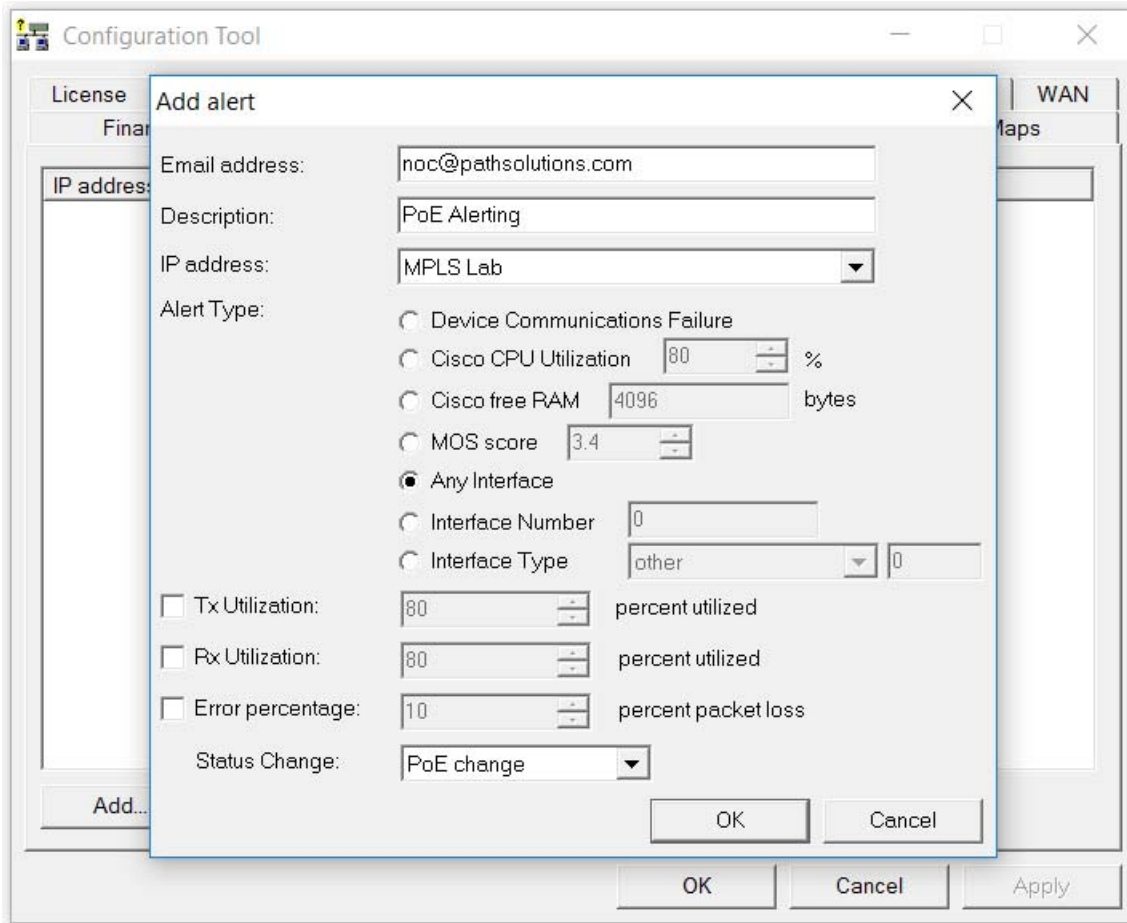

Group Alerting

The group alerting allows you to set up an alert for devices in a group. For example, if you want to know when any devices in the “Edge Network” group have an interface with high utilization. Just choose the group in the drop-down box.

The screenshot shows the 'Add alert' dialog box within the 'Configuration Tool' application. The dialog is titled 'Add alert' and has a close button (X) in the top right corner. It contains the following fields and options:


- Email address:** A text input field containing 'noc@pathsolutions.com'.
- Description:** A text input field containing 'Group Alert'.
- IP address:** A dropdown menu currently showing 'CDP Lab'.
- Alert Type:** A group of radio buttons with the following options:
 - Device Communications Failure
 - Cisco CPU Utilization: 80 % (with a numeric input field for 80)
 - Cisco free RAM: 4096 bytes (with a numeric input field for 4096)
 - MOS score: 3.4 (with a numeric input field for 3.4)
 - Any Interface
 - Interface Number: 0 (with a numeric input field for 0)
 - Interface Type: other (with a dropdown menu and a numeric input field for 0)
- Tx Utilization:** 80 percent utilized (with a numeric input field for 80)
- Rx Utilization:** 80 percent utilized (with a numeric input field for 80)
- Error percentage:** 10 percent packet loss (with a numeric input field for 10)
- Status Change:** A dropdown menu currently showing 'Operational change'.

At the bottom of the dialog, there are three buttons: 'Add...' (on the left), 'OK' (in the center), and 'Cancel' (on the right). The background window shows a tree view with 'License' selected, and other tabs like 'WAN' and 'Groups' are visible.


Configuring the Network Map

To create interfaces that display on the network map, use the coordinates displayed in the lower right corner of the map, visible when you scroll over the map, and enter them in the Configuration Tool to determine the end points for your network links.


Alternately, the Map Configuration Tool allows a graphical user interface to be used to configure the map. Refer to page 120 for further information.

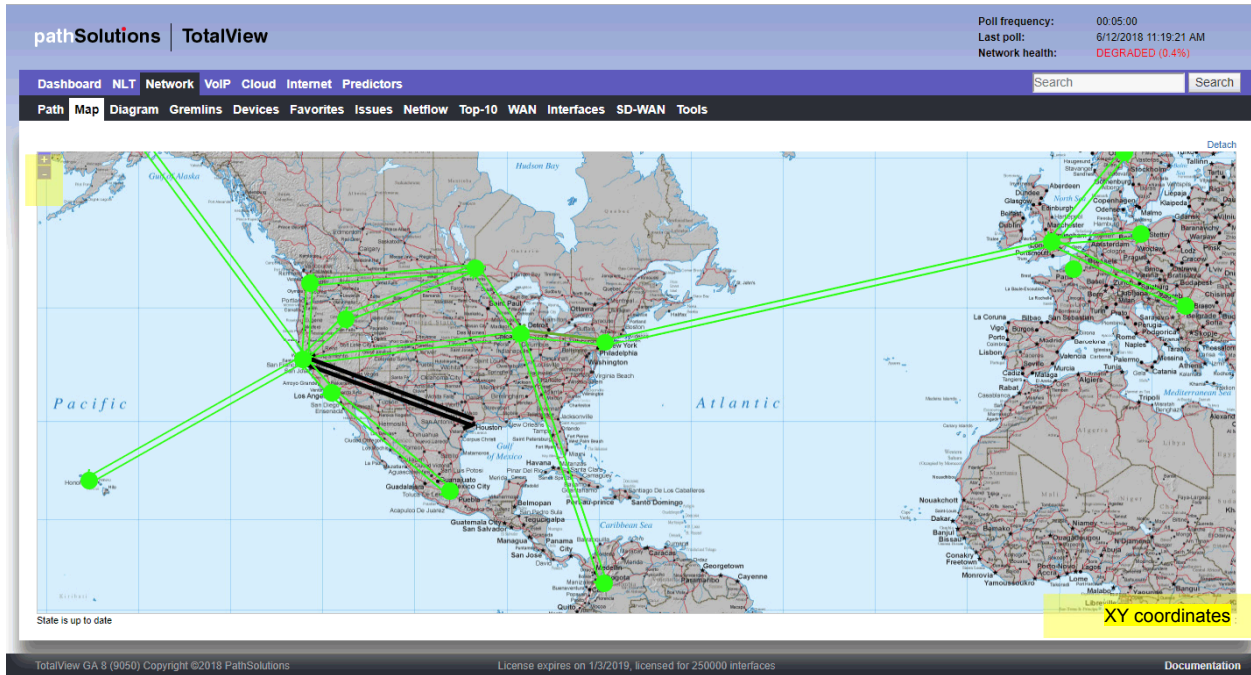

Open the Configuration Tool and add a Map on the left-hand side. Click on Add, create a Map Name and then select a Background picture from your TotalView Graphics folder. Multiple Maps can be created. Then use the right-hand side to enter the interfaces and include the XY coordinates to monitor.

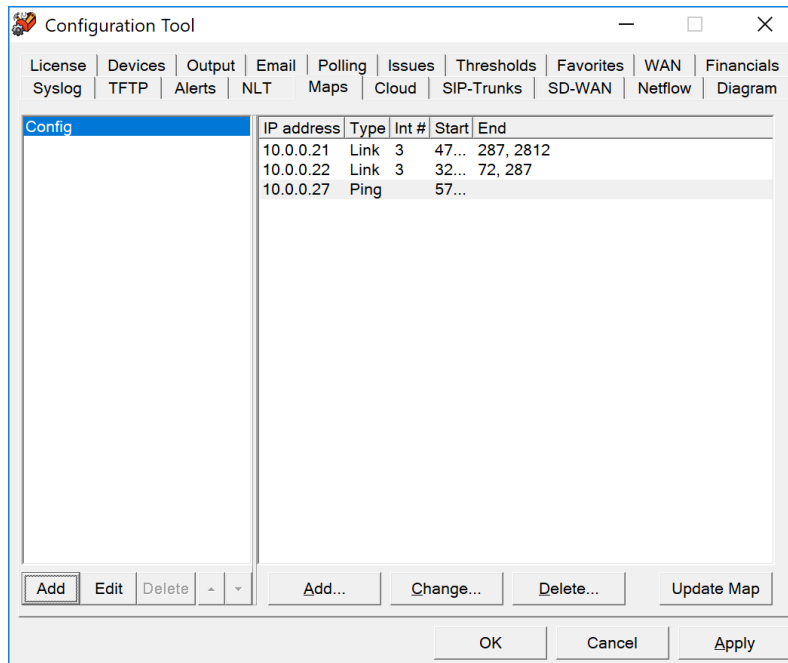


To add an object, click “Add”. You should get the add map line dialog, where you can name it and select a background image:

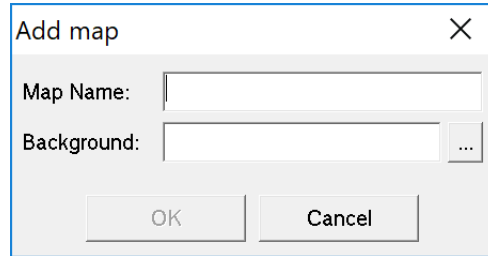

The "Add map" dialog box contains the following fields and controls:

- Map Name:
- Background: ...
- OK button
- Cancel button


For a link connection between coordinates, choose “Link” and then the IP address of the device and then enter the interface number that should be updated. Then enter the Line Start X and Y coordinate and the Line End X and Y coordinate.

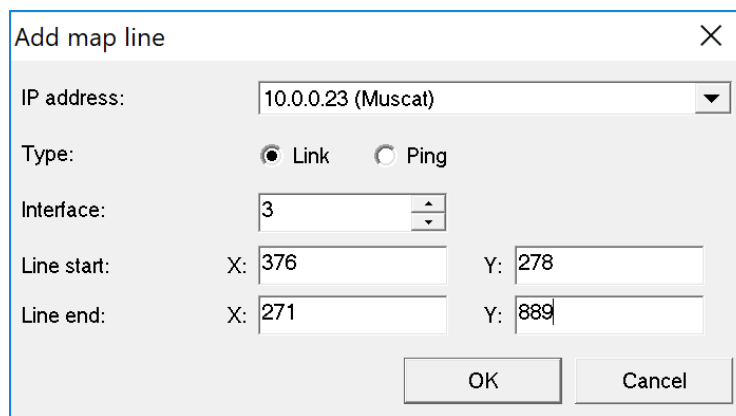

The "Add map line" dialog box is configured for a Link connection with the following values:

- IP address: 10.0.0.23 (Muscat)
- Type: Link Ping
- Interface: 3
- Line start: X: 376, Y: 278
- Line end: X: 271, Y: 889
- OK button
- Cancel button


For a Ping point, choose “Ping” and then enter the Line Start X and Y coordinates. This represents that the Device can be pinged and will display as a green dot (can ping), a red dot (cannot ping), or a black dot (device is down).

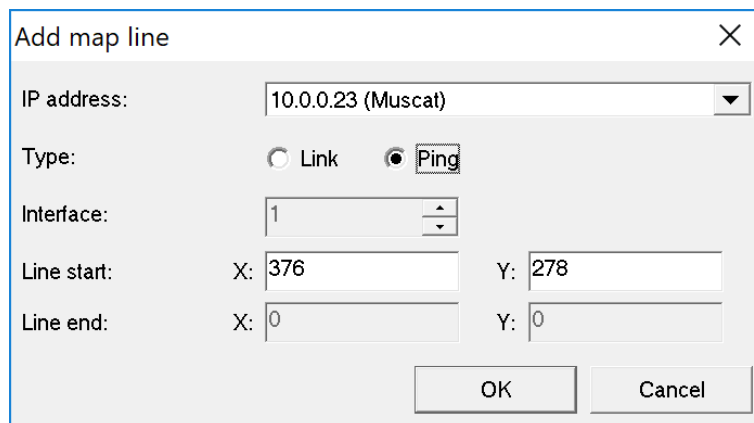

The "Add map line" dialog box is configured for a Ping connection with the following values:

- IP address: 10.0.0.23 (Muscat)
- Type: Link Ping
- Interface: 1
- Line start: X: 376, Y: 278
- Line end: X: 0, Y: 0
- OK button
- Cancel button

When finished adding Links and Ping Points click on the “Update Map” button to view your results.

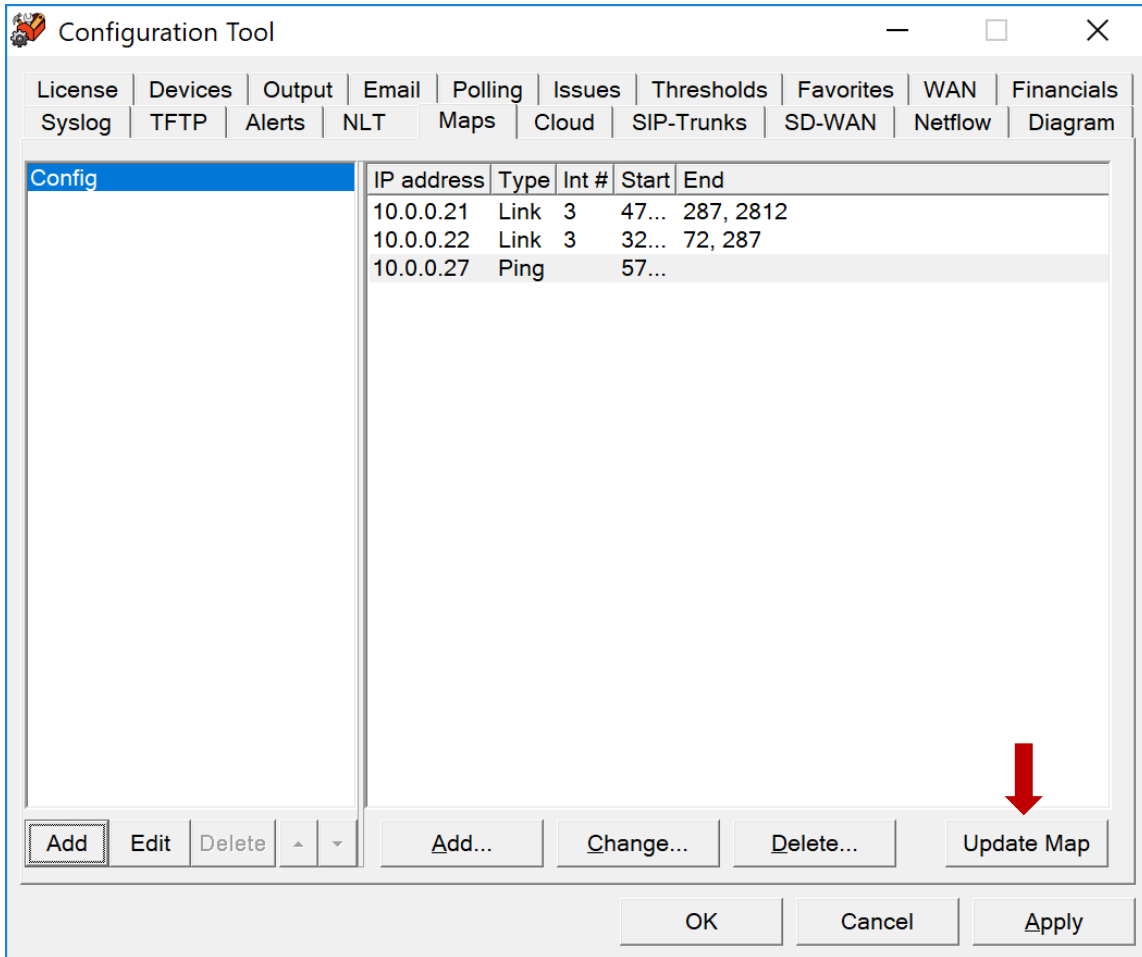

Sending Email Reports

Reports can be emailed to users whenever desired or on regular schedules.

To set up a report to be sent, create a text file with a text editor such as Notepad. This file should contain four fields, separated by at least one <TAB> character:

```
;Email Address      Template File          Device          Interface
;-----
jdoe@company.com    IntMailDetailDaily.txt 192.168.1.1     1
jdoe@company.com    IntMailSummartyDaily.txt 192.168.6.12   14
jdoe@company.com    SystemMailDaily.txt    /               /
```

The first field is the email address where the report should be sent.

The second field is the email template file to use to send the report. Templates can be found in the “MailTemplates” subdirectory.

The third field references a monitored device. This field may or may not be required depending on the template used. If a system-wide report is used it does not need a specific device to be referenced and a slash ‘/’ should be used instead.

The fourth field references a specific interface on the specified device. If the report is a system-wide report or a device report no interface needs to be specified and a slash ‘/’ can be used instead.

Save this file with any filename that ends in “.cfg” in the “ReportSend” subdirectory and the report(s) will be sent during the next polling period and the file deleted.

Note: It’s valuable to save this file in an alternate directory first and then copy it to the “ReportSend” directory when you want it to be sent.

Note: This process can be automated via the Windows Task manager to schedule reports to be sent on a regular basis.

Note: All files in the “ReportSend” directory with the extension .cfg will be processed and deleted every poll period.

Creating Email Report Templates

Existing email report templates are located in the “MailTemplates” directory.

They can be edited with a text editor and copied to create new templates. The format of the templates includes standard MIME encapsulation headers and definitions for multipart messages (HTML and embedded graphics).

PathSolutions TotalView will pre-process the template and add data elements using the %ELEMENT% replacement strings.

Available replacement strings are as follows:

%%	Prints percent sign
%DATE%	Prints current date
%TIME%	Prints current time
%COMMENT-START%	Starts a comment area that won't be sent in the email
%COMMENT-END%	Ends a comment area
%CUSTOMERNUMBER%	Prints the licensed customer number
%CUSTOMERLOCATION%	Prints the licensed customer location
%LICENSEDINTERFACES%	Prints the licensed interface count
%LICENSEEXPIRATION%	Prints the license expiration
%RESELLERNUMBER%	Prints the reseller number
%INTERFACES%	Prints the number of monitored interfaces
%VERSION%	Prints the version of the program
%REVISION%	Prints the revision of the program
%PRODNUMBER%	Prints the product license number
%PRODNAME%	Prints the product name
%COMPANYNAME%	Prints the company name
%EMAILADDRESS%	Prints the email address(es) that this email will be sent to
%LICENSEDAYSLEFT%	Prints the number of licensed days remaining
%URL-HOME%	Prints the full URL to the home page
%URL-HEALTH%	Prints the full URL to the health page
%URL-GRAPHICS%	Prints the full URL to the graphics directory
%URL-FAVORITES%	Prints the full URL to the favorites page
%FAVORITES%	Prints a text table of favorite interfaces
%FAVORITES*%	Prints an HTML table of favorite interfaces
%ISSUES%	Prints a text table of current issues
%ISSUES*%	Prints an HTML table of current issues
%ISSUES#%	Prints the current number of issues
%URL-ISSUES%	Prints the full URL to the issues page
%STATUS-PERCENT%	Prints the current health percentage
%STATUS-ERR%	Prints the configured error threshold level
%STATUS-UTIL%	Prints the configured utilization threshold level
%STATUS-RESULT%	Prints “Good” or “Degraded” depending if there are any issues
%STATUS-COLOR%	Prints “#008000” or “#FF0000” depending if there are any issues
%IFSTATUS-GOOD%	Prints the following if there are no issues
%IFSTATUS-DEGRADED%	Prints the following if there are issues
%ENDIF%	Ends a conditional IFSTATUS section
%IFDEVICE-CISCO%	Prints the following if it is a Cisco device
%ENDIF-CISCO%	Ends conditional for Cisco device
%IFLICENSE-VOIP%	Prints the following if the system is licensed for VoIP
%ENDIF-VOIP%	Ends conditional for VoIP License
%TOPCOUNT%	Prints the number of interfaces configured for the Top list
%TOPERRORS%	Prints a text table of top interfaces with errors
%TOPERRORS*%	Prints an HTML table of top interfaces with errors
%URL-TOPERRORS%	Prints the full URL to the top errors page
%TOPTRANSMITTERS%	Prints a text table of the top interfaces with the most data transmitted by utilization
%TOPTRANSMITTERS*%	Prints an HTML table showing the top interfaces with the most data
%URL-TOPTRANSMITTERS%	Prints the full URL to the current top transmitters web page
%TOPRECEIVERS%	Prints a text table of the top Interfaces with highest daily received rates
%TOPRECEIVERS*%	Prints an HTML table showing the top Interfaces with highest daily received
%URL-TOPRECEIVERS%	Prints the full URL to the current top receivers web page
%TOPLATENCY%	Prints a text table of the top devices with the highest daily latency sorted by latency
%TOPLATENCY*%	Prints an HTML table showing top devices with the highest daily latency sorted by latency
%URL-TOPLATENCY%	Prints the full URL to the current top devices with the highest daily latency
%TOPJITTER%	Prints a text table of the top devices with the highest daily jitter sorted by jitter
%TOPJITTER*%	Prints an HTML table showing top devices with the highest daily jitter sorted by jitter
%URL-TOPJITTER%	Prints the full URL to the current top devices with the highest daily jitter

%TOPLOSS%	Prints a text table to the top devices with the highest daily loss sorted by loss
%TOPLOSS*%	Prints an HTML table showing top devices with the highest daily loss sorted by loss
%URL-TOPLOSS%	Prints the full URL to the current top devices with the highest daily loss
%TOPTALKERS%	Prints a text table of top talkers
%TOPTALKERS*%	Prints an HTML table of top talkers
%URL-TOPTALKERS%	Prints the full URL to the top talkers page
%TOPLISTENERS%	Prints a text table of top listeners
%TOPLISTENERS*%	Prints an HTML table of top listeners
%URL-TOPLISTENERS%	Prints the full URL to the top listeners page
%ADMINDOWN%	Prints a text table of admin down interfaces
%ADMINDOWN*%	Prints an HTML table of admin down interfaces
%ADMINDOWN#%	Prints the number of admin down interfaces
%URL-ADMINDOWN%	Prints the full URL to the admin down page
%OPERDOWN%	Prints a text table of oper down interfaces
%OPERDOWN*%	Prints an HTML table of oper down interfaces
%OPERDOWN#%	Prints the number of oper down interfaces
%URL-OPERDOWN%	Prints the full URL to the oper down page
%POLLDELAY%	Prints the current configured poll delay
%SAVESTATSTICKCOUNT%	Prints the number of ticks (ms) required during the last poll to save statistics to disk
%SAVESTATSTICKCOUNTAVG%	Prints the average number of ticks (ms) required to save statistics to disk
%POLLTICKCOUNT%	Prints the number of ticks (ms) required during the last poll to collect SNMP information from all devices
%POLLTICKCOUNTAVG%	Prints the average number of ticks (ms) required to collect SNMP information from all devices
%ANALYZETICKCOUNT%	Prints the number of ticks (ms) required during the last poll to analyze all data
%ANALYZETICKCOUNTAVG%	Prints the average number of ticks (ms) required to analyze all data
%OUTPUTTICKCOUNT%	Prints the number of ticks (ms) required during the last poll to write output information
%OUTPUTTICKCOUNTAVG%	Prints the average number of ticks (ms) required to write output information
%POLLHOURS%	Prints the configured poll delay hours
%POLLMINUTES%	Prints the configured poll delay minutes
%POLLSECONDS%	Prints the configured poll delay seconds
%POLLFAILSECONDS%	Prints the number of seconds that the last poll failed by
%POLLFAILTABLE%	Prints the text version of the poll fail table
%POLLFAILTABLE*%	Prints the HTML version of the poll fail table
%SYSTEM-DAILY-UTIL%	Prints base64 encoding of the daily aggregate utilization graph
%SYSTEM-DAILY-ERRORS%	Prints base64 encoding of the daily overall errors graph
%SYSTEM-DAILY-ISSUES%	Prints base64 encoding of the daily overall issues graph
%SYSTEM-DAILY-INTERFACES%	Prints base64 encoding of the daily interfaces graph
%SYSTEM-WEEKLY-UTIL%	Prints base64 encoding of the weekly aggregate utilization graph
%SYSTEM-WEEKLY-UTIL%	Prints base64 encoding of the weekly overall errors graph
%SYSTEM-WEEKLY-ISSUES%	Prints base64 encoding of the weekly overall issues graph
%SYSTEM-WEEKLY-INTERFACES%	Prints base64 encoding of the weekly interfaces graph
%SYSTEM-MONTHLY-UTIL%	Prints base64 encoding of the monthly aggregate utilization graph
%SYSTEM-MONTHLY-ERRORS%	Prints base64 encoding of the monthly overall errors graph
%SYSTEM-MONTHLY-ISSUES%	Prints base64 encoding of the monthly overall issues graph
%SYSTEM-MONTHLY-INTERFACES%	Prints base64 encoding of the monthly interfaces graph
%SYSTEM-YEARLY-UTIL%	Prints base64 encoding of the yearly aggregate utilization graph
%SYSTEM-YEARLY-ERRORS%	Prints base64 encoding of the yearly overall errors graph
%SYSTEM-YEARLY-ISSUES%	Prints base64 encoding of the yearly overall issues graph
%SYSTEM-YEARLY-INTERFACES%	Prints base64 encoding of the yearly interfaces graph
%URL-DEVICE%	Prints the full URL to the specified device page
%DEVICE-NUMBER%	Prints the device number
%DEVICE-AGENT%	Prints the device agent (IP address)
%DEVICE-GROUP%	Prints the configured group for the device
%DEVICE-CONTRACT-DATE%	Prints the configured device service contract date
%DEVICE-CONTRACT-ID%	Prints the configured device ID number associated with the service contract
%DEVICE-CONTRACT-PHONE%	Prints the configured device service contract phone number
%DEVICE-DESCRIPTION%	Prints the configured device description
%DEVICE-INTERFACES%	Prints the number of interfaces for the device
%DEVICE-ADMINDOWN%	Prints the number of admin down interfaces on the device
%DEVICE-OPERDOWN%	Prints the number of oper down interfaces on the device
%DEVICE-INT-DESCRIPTION%	Prints the device internal description (sysDescr)
%DEVICE-LOCATION%	Prints the device configured location (sysLocation)
%DEVICE-CONTACT%	Prints the device configured contact (sysContact)
%DEVICE-NAME%	Prints the device configured name (sysName)
%DEVICE-SERIALNO%	Prints the device serial number (Cisco IOS only)
%DEVICE-CPU%	Prints the device current CPU utilization graph (Cisco IOS only)
%DEVICE-RAM%	Prints the device current RAM utilization graph (Cisco IOS only)
%DEVICE-DAILY-UTIL%	Prints base64 encoding of the daily device overall utilization graph
%DEVICE-DAILY-CPU%	Prints base64 encoding of the daily CPU utilization graph (Cisco IOS only)
%DEVICE-DAILY-RAM%	Prints base64 encoding of the daily RAM utilization graph (Cisco IOS only)
%DEVICE-DAILY-LATENCY%	Prints base64 encoding of the daily latency graph (VoIP only)
%DEVICE-DAILY-JITTER%	Prints base64 encoding of the daily jitter graph (VoIP only)

%DEVICE-DAILY-LOSS%	Prints base64 encoding of the daily loss graph (VoIP only)
%DEVICE-DAILY-MOS%	Prints base64 encoding of the daily MOS graph (VoIP only)
%DEVICE-WEEKLY-UTIL%	Prints base64 encoding of the weekly device overall utilization graph
%DEVICE-WEEKLY-CPU%	Prints base64 encoding of the weekly CPU utilization graph (Cisco IOS only)
%DEVICE-WEEKLY-RAM%	Prints base64 encoding of the weekly RAM utilization graph (Cisco IOS only)
%DEVICE-WEEKLY-LATENCY%	Prints base64 encoding of the weekly latency graph (VoIP only)
%DEVICE-WEEKLY-JITTER%	Prints base64 encoding of the weekly jitter graph (VoIP only)
%DEVICE-WEEKLY-LOSS%	Prints base64 encoding of the weekly loss graph (VoIP only)
%DEVICE-WEEKLY-MOS%	Prints base64 encoding of the weekly MOS graph (VoIP only)
%DEVICE-MONTHLY-UTIL%	Prints base64 encoding of the monthly device overall utilization graph
%DEVICE-MONTHLY-CPU%	Prints base64 encoding of the monthly CPU utilization graph (Cisco IOS only)
%DEVICE-MONTHLY-RAM%	Prints base64 encoding of the monthly RAM utilization graph (Cisco IOS only)
%DEVICE-MONTHLY-LATENCY%	Prints base64 encoding of the monthly latency graph (VoIP only)
%DEVICE-MONTHLY-JITTER%	Prints base64 encoding of the monthly jitter graph (VoIP only)
%DEVICE-MONTHLY-LOSS%	Prints base64 encoding of the monthly loss graph (VoIP only)
%DEVICE-MONTHLY-MOS%	Prints base64 encoding of the monthly MOS graph (VoIP only)
%DEVICE-YEARLY-UTIL%	Prints base64 encoding of the yearly device overall utilization graph
%DEVICE-YEARLY-CPU%	Prints base64 encoding of the yearly CPU utilization graph (Cisco IOS only)
%DEVICE-YEARLY-RAM%	Prints base64 encoding of the yearly RAM utilization graph (Cisco IOS only)
%DEVICE-YEARLY-LATENCY%	Prints base64 encoding of the yearly latency graph (VoIP only)
%DEVICE-YEARLY-JITTER%	Prints base64 encoding of the yearly jitter graph (VoIP only)
%DEVICE-YEARLY-LOSS%	Prints base64 encoding of the yearly loss graph (VoIP only)
%DEVICE-YEARLY-MOS%	Prints base64 encoding of the yearly MOS graph (VoIP only)
%URL-INT%	Prints the full URL to the specified interface page
%INT-NUMBER%	Prints the interface number
%INT-DESCRIPTION%	Prints the interface description
%INT-ALIAS%	Prints the interface alias
%INT-NAME%	Prints the interface name
%INT-DAILYERRORRATE%	Prints the daily peak error rate
%INT-DAILYERRORRATECOLOR%	Prints the daily peak error rate color
%INT-DAILYTXRATE%	Prints the peak daily transmit rate
%INT-DAILYTXRATECOLOR%	Prints the peak daily transmit rate color
%INT-DAILYRXRATE%	Prints the peak daily receive rate
%INT-DAILYRXRATECOLOR%	Prints the peak daily receive rate color
%INT-SPEED%	Prints the interface speed of the interface
%INT-DUPLEX%	Prints the interface duplex of the interface
%INT-ADMINSTATUS%	Prints the current admin status of the interface
%INT-OPERSTATUS%	Prints the current oper status of the interface
%INT-TXBROADCAST%	Prints the transmit broadcast rate of the interface
%INT-RXBROADCAST%	Prints the receive broadcast rate of the interface
%INT-ADMINSTATUSLAST%	Prints the last admin status of the interface
%INT-OPERSTATUSLAST%	Prints the last oper status of the interface
%INT-CURRTXUTIL%	Prints the current (last poll) transmit rate of the interface
%INT-CURRRXUTIL%	Prints the current (last poll) receive rate of the interface
%INT-CURRERRPCT%	Prints the current (last poll) error rate of the interface
%INT-DAILY-BPS%	Prints base64 encoding of the daily bits per second graph
%INT-DAILY-PCT%	Prints base64 encoding of the daily percentage graph
%INT-DAILY-PPCT%	Prints base64 encoding of the daily peak percentage graph
%INT-DAILY-PKTS%	Prints base64 encoding of the daily packets graph
%INT-DAILY-BCSTS%	Prints base64 encoding of the daily broadcasts graph
%INT-DAILY-ERRORS%	Prints base64 encoding of the daily errors graph
%INT-WEEKLY-BPS%	Prints base64 encoding of the weekly bits per second graph
%INT-WEEKLY-PCT%	Prints base64 encoding of the weekly percentage graph
%INT-WEEKLY-PPCT%	Prints base64 encoding of the weekly peak percentage graph
%INT-WEEKLY-PKTS%	Prints base64 encoding of the weekly packets graph
%INT-WEEKLY-BCSTS%	Prints base64 encoding of the weekly broadcasts graph
%INT-WEEKLY-ERRORS%	Prints base64 encoding of the weekly errors graph
%INT-MONTHLY-BPS%	Prints base64 encoding of the monthly bits per second graph
%INT-MONTHLY-PCT%	Prints base64 encoding of the monthly percentage graph
%INT-MONTHLY-PPCT%	Prints base64 encoding of the monthly peak percentage graph
%INT-MONTHLY-PKTS%	Prints base64 encoding of the monthly packets graph
%INT-MONTHLY-BCSTS%	Prints base64 encoding of the monthly broadcasts graph
%INT-MONTHLY-ERRORS%	Prints base64 encoding of the monthly errors graph
%INT-YEARLY-BPS%	Prints base64 encoding of the yearly bits per second graph
%INT-YEARLY-PCT%	Prints base64 encoding of the yearly percentage graph
%INT-YEARLY-PPCT%	Prints base64 encoding of the yearly peak percentage graph
%INT-YEARLY-PKTS%	Prints base64 encoding of the yearly packets graph
%INT-YEARLY-BCSTS%	Prints base64 encoding of the yearly broadcasts graph
%INT-YEARLY-ERRORS%	Prints base64 encoding of the yearly errors graph
%INT-POESTATE%	Current PoE state
%INT-POESTATELAST%	Last PoE state
%INT-POEMAXDRAW%	Maximum power draw of an interface

Establishing Device Parent-Child Relationships

Parent-child relationships can be established so alerts for subordinate devices are not received when the parent device is unresponsive.

This can reduce and/or eliminate the large number of device outage alerts that are received when one device goes down, permitting you to focus your energies on responding to the one device that did fail.

Relationships are established via the ParentList.cfg file. Edit this file with a text editor like Notepad and enter your devices. Each "Child Device" should have one or more "Parent Device" defined.

```
;CHILD DEVICE      PARENT DEVICE
;-----
192.168.1.56       192.168.1.12
192.168.1.12      192.168.1.1
192.168.1.12      192.168.1.2
```

In the above example, if 192.168.1.12 goes down, the child device 192.168.1.56 will not generate an alert if it is unreachable.

In the above example, if 192.168.1.1 goes down, the child device 192.168.1.12 will still generate an alert because another parent is defined as a means of reaching it. If both 192.168.1.1 and 192.168.1.2 are down, then no alert will be generated for 192.168.1.12.

After saving this file, the service should be stopped and re-started to have it take effect.

Troubleshooting

There are no devices listed on the web page

The QuickConfig Wizard will attempt to locate any devices that are configured to respond to SNMP. You should check to make sure that SNMP is enabled on your network devices and that the device will respond to SNMP queries from the PathSolutions TotalView computer.

You can use the PollDevice program to test SNMP communications to/from a network device to validate that it is responding to queries with your community string.

Nothing happens when the service starts or the service fails to start

Check the Windows Event Application log to see what the problem is. Detailed error descriptions have been created to help you determine what the program needs to be able to operate correctly.

PathSolutions' TotalView does not check all of my interfaces

If you have more interfaces on your network than you possess license keys, then PathSolutions TotalView adds a notice at the bottom of all web pages informing you that there are not enough licenses to monitor all of your interfaces. Please contact sales@pathsolutions.com and they will be happy to help.

Frequently Asked Questions

I want to customize the Network Weather Report emails that are sent. How do I do this?

If you want to modify the Network Weather Report emails that are sent, modify the "WeatherMail.txt" file in the directory where you installed the program.

How do you clear out the utilization statistics?

The PathSolutions TotalView saves statistics in files in the "Data" directory where you installed the program. Each filename corresponds to a device on your network. You should stop the TotalView service before deleting files.

How many interfaces can I monitor with PathSolutions TotalView? Please go to our website:

<https://www.pathsolutions.com/resources/system-requirements/>

Is PathSolutions TotalView safe to use on the Internet?

TotalView has been tested for buffer overflow errors from browsers to make sure that it is safe to use on Intranets, Extranets, and the Internet. If you intend to use the product over the Internet, care should be taken to limit access to only IP addresses that should be able to access the TotalView machine, and not permit general access. You should enable authentication and require passwords to be used to access the system.

Note: The PathSolutions TotalView passwords are sent in Base64 encoding. This provides simple encryption of passwords and accounts, and should only be used to deter casual hackers. In general, a VPN should be employed to provide security between a computer on the Internet and the TotalView server. The PathSolutions TotalView accounts should be used as a method of preventing internal users from accessing network information.

Why are the transmitted and received information reversed?

When you view statistics, they should be viewed from the switch interface's perspective. If your backup server is receiving lots of information at 2:00am, the switch interface that connects to the backup server would be transmitting a lot of information to the backup server.

How do I assign descriptive names to interfaces?

If your switch does not allow you to assign names to each interface, TotalView can allow you to assign names to each interface. Edit the IntDescription.cfg file in the directory where you installed the program.

Appendix A: Error Descriptions

Alignment Errors

Rare event

Official definition: A count of frames received on a particular interface that are not an integral number of octets in length and do not pass the FCS check. The count represented by an instance of this object is incremented when the alignmentError status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions are obtained, according to the conventions of IEEE 802.3 Layer Management, are counted exclusively according to the error status presented to the LLC.

Basic definition: All frames on the segment should contain a number of bits that are divisible by eight (to create bytes). If a frame arrives on an interface that includes some spare bits left over, the interface does not know what to do with the spare bits. Example: If a received frame has 1605 bits, the receiving interface will count 200 bytes and will have 5 bits left over. The Ethernet interface does not know what to do with the remaining bits. It will discard the bits and increment the Alignment Error count. Because of these remaining bits, it is more likely that the CRC check will fail (causing FCS Errors to increment) as well.

What you should do to fix this problem:

Cause 1: If you have a switch port configured for full-duplex, and the workstation is configured for half-duplex, (or vice-versa) the network connection will still pass traffic, but the full-duplex side of the network will report Alignment Errors (it cannot report any collisions because it cannot detect collisions on a full-duplex link). The half-duplex side of the network will report collisions correctly, and will not detect any abnormalities. Check to see if there is a duplex mismatch on this interface.

Cause 2: Occasionally, a collision can create an alignment error. If you have a segment with lots of collisions, and you see occasional alignment errors, you should solve the collision problem and then note if the alignment error problem also goes away. Implement full-duplex to solve the collision and the alignment problem.

Cause 3: Sometimes alignment errors will increment when there is induced noise on the physical cable. Perform a cable test. Check the environment for electrical changes (industrial electrical motor turning on, EMI radiation, etc.). Make sure your physical wiring is safe from electro-magnetic interference.

Cause 4: If you have alignment errors that occur without collisions, it usually means that you have a bad or corrupted software driver on a machine on that segment. Check to see what new machines have been added to that segment, or new network cards and/or drivers.

Carrier Sense Errors

Rare event

Official definition: The number of times that the carrier sense condition was lost or never asserted when attempting to transmit a frame on a particular interface. The count represented by an instance of this object is incremented at most once per transmission attempt, even if the carrier sense condition fluctuates during a transmission attempt.

Basic definition: Carrier Sense Errors occur when an interface attempts to transmit a frame, but no carrier is detected, and the frame cannot be transmitted.

What you should do to fix this problem:

Cause 1: Carrier Sense Errors can occur when there is an intermittent network cabling problem. Check for cable breaks that may cause occasional outages. Use a cable tester to insure that the physical cabling is good.

Cause 2: Carrier Sense Errors can occur when the device connected to the interface has a failing network interface card (NIC). The network card connected to this interface should be replaced.

Deferred Transmissions

Common event

Official definition: A count of frames for which the first transmission attempt on a particular interface is delayed because the medium is busy. The count represented by an instance of this object does not include frames involved in collisions.

Basic definition: If an interface needs to transmit a frame, but the network is busy, it increments Deferred Transmissions. Transmissions that are deferred are buffered up and sent at a later time when the network is available again.

What you should do to fix this problem:

Cause 1: Deferred Transmissions can be deferred because of non-collision media access problems. For example: If the network is constantly busy (and a network card cannot get a word in edgewise), there is a media access problem (the NIC cannot get control of the network). This kind of deferred transmission is usually associated with Single or Multiple Collision Frames. Implementing a full-duplex connection can solve this problem.

Cause 2: Deferred Transmissions can be created on a switch or bridge that is forwarding packets to a destination machine that is currently using its network segment to transmit. This can usually be solved by implementing a full-duplex connection (if possible) on the segment.

Excessive Collisions

Rare event

Official definition: A count of frames for which transmission on a particular interface fails due to excessive collisions.

Basic definition: If there are too many collisions (beyond Multiple Collision Frames), the transmission will fail.

What you should do to fix this problem:

Cause 1: A faulty NIC can cause Excessive Collisions. Check the network cards on the segment to insure that they are functioning correctly.

Cause 2: A failed transceiver can cause Excessive Collisions. Check the transceivers on the segment to insure that they are functioning correctly.

Cause 3: Improper network wiring (wrong pairs, split pairs, crossed pairs) can cause Excessive Collisions. Use a cable tester to insure that wiring is good.

Cause 4: A network segment with extremely high utilization and high collision rates can cause Excessive Collisions. If utilization is high, attempt to implement full-duplex to solve this problem.

FCS Errors

Rare event

Official definition: A count of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS (Frame Check Sequence) check. The count represented by an instance of this object is incremented when the FrameCheckError status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions are obtained, according to the conventions of IEEE 802.3 Layer Management, are counted exclusively according to the error status presented to the LLC.

Basic definition: An FCS error is a legal sized frame with a bad frame check sequence (CRC error). An FCS error can be caused by a duplex mismatch, faulty NIC or driver, cabling, hub, or induced noise.

What you should do to fix this problem:

Cause 1: FCS errors can be caused by a duplex mismatch on a link. Check to make sure that both interfaces on this link have the same duplex setting.

Cause 2: Sometimes FCS errors will increment when there is induced noise on the physical cable. Perform a cable test. Check the environment for electrical changes (industrial electrical motor turning on, EMI radiation, etc.). Make sure your physical wiring is safe from electro-magnetic interference.

Cause 3: If you notice that FCS Errors increases, and Alignment Errors increase, attempt to solve the alignment error problem first. Alignment errors can cause FCS errors.

Cause 4: If you see FCS errors increase, check the network cards and transceivers on that segment. A failing network card or transceiver may transmit a proper frame, but garble the data inside, causing a FCS error to be detected by listening machines.

Cause 5: Check network driver software on that segment. If a network driver is bad or corrupt, it may calculate the CRC incorrectly, and cause listening machines to detect an FCS Error.

Cause 6: If you have an Ethernet cable that is too short (less than 0.5meters), FCS errors can be generated.

Cause 7: If you have an Ethernet cable that is too long (more than 100meters), FCS errors can be generated.

Cause 8: If you are using 10Base-2, and have poor termination, or poor grounding, FCS errors can be generated.

Frame Too Longs

Rare event

Official definition: If a frame is detected on an interface that is too long (as defined by ifMTU), this counter will increment.

Basic definition: Frame Too Longs occur when an interface has received a frame that is longer (in bytes) than the maximum transmission unit (MTU) of the interface.

What you should do to fix this problem:

Cause 1: Switches that use VLAN (Virtual LAN) tagging of frames can cause FrameTooLongs. To solve this specific problem, upgrade the device reporting the FrameTooLong error to support VLANs, or turn off VLAN tagging on neighboring switches.

Cause 2: Faulty NIC cards can cause FrameTooLongs. Check NIC cards on the segment to insure that they are running correctly.

Cause 3: Cabling or grounding problems can cause FrameTooLongs. Use a network cable tester to insure that the cabling is not too long, or out of specification for the technology you are using.

Cause 4: Software drivers that do not respect the correct MTU (Maximum Transmission Unit) of the medium can cause FrameTooLongs. Check network drivers to make sure they are functioning properly.

Inbound Discards

Rare event

Official definition: The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.

Basic definition: If too many packets are received, and the protocol stack does not have enough resources to properly handle the packet, it may be discarded.

What you should do to fix this problem:

Cause 1: Insufficient memory allocated for inbound packet buffers. Research how to increase the inbound packet buffers on the interface. This may be modified in the device's configuration.

Cause 2: The CPU on the device may not be fast enough to process all of the inbound packets. Employing a faster CPU may remedy this problem.

Inbound Errors

Rare event

Official definition: The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.

Basic definition: These packets contained one or more various data-link layer errors, and were thus discarded before being passed to the network layer. The root cause of these errors are undefined. In order to more accurately research these types of errors, you should deploy a packet analyzer in front of this interface to track the specific errors that occur, as the device is not capable of tracking any additional information relating to these errors. If this interface provides Ethernet specific errors, these errors may be detailed in that section.

What you should do to fix this problem:

Cause 1: There are various sources of this type of error. The interface does not possess enough information as to the exact cause of this error. Deploy a packet analyzer in front of this interface to inspect the exact type of error that is occurring.

Inbound Unknown Protocols

Common event

Official definition: The number of packets received via the interfaces which were discarded because of an unknown or unsupported protocol.

Basic definition: If the physical and data-link layer do their job successfully and deliver a frame to the correct MAC address, it is assumed that the requested protocol will be available on the machine. If the protocol is not available, the frame is discarded. If your machine receives an AppleTalk packet, but your machine is not running AppleTalk, it will discard the packet and increment this counter.

What you should do to fix this problem:

Cause 1: Broadcasts can cause inbound unknown protocol errors. If you have a Novell server on the segment, it will send out periodic IPX broadcasts that some devices will not understand (because they do not have the IPX protocol loaded in their network stack). This is a normal event. To attempt to reduce this, work on reducing the number of different protocols that exist on your network, or install additional protocols on your machines to be able to communicate with additional clients.

Cause 2: Inbound unknown protocols can be caused by mis-configurations of other machines. Check the configurations of other machines on the network to try to determine why this machine is receiving an unknown protocol. If inbound unknown protocols error is incrementing rapidly, attach a network analyzer and look at the protocols that are being sent to this machine, and their source.

Outbound Discards

Rare event

Official definition: The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space.

Basic definition: If too many packets are queued to be transmitted, and the network interface is not fast enough to transmit all of the packets, it may be discarded.

What you should do to fix this problem:

Cause 1: Insufficient memory allocated for outbound packet buffers. This may be modified in the device's configuration.

Cause 2: The network interface may not be fast enough to process all of the outbound packets. Employing a faster speed interface may remedy this problem.

Outbound Errors

Rare event

Official definition: The number of outbound packets that could not be transmitted because of errors.

Basic definition: These packets could not be transmitted due to one or more various data-link layer errors. The root causes of these errors are undefined. In order to more accurately research these types of errors, you should deploy a packet analyzer in front of this interface to track the specific errors that occur, as the device is not capable of tracking any additional information relating to these errors. If this interface provides Ethernet specific errors, these errors may be detailed in that section.

What you should do to fix this problem:

Cause 1: There are various sources of this type of error. The interface does not possess enough information as to the exact cause of this error. Deploy a packet analyzer in front of this interface to inspect the exact type of error that is occurring.

Outbound Queue Length

Common event

The length of the output packet queue (in packets) number should return to zero in a short amount of time. If it ends up being any non-zero value for any length of time, you should consider upgrading the interface to a faster technology, or full duplex (if not already enabled).

Internal Mac Transmit Errors

Rare event

Official definition: A count of frames for which transmission on a particular interface fails due to an internal MAC sub layer transmit error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of the dot3StatsLateCollisions object, the dot3StatsExcessiveCollisions object, or the dot3StatsCarrierSenseErrors object. The precise meaning of the count represented by an instance of this object is implementation-specific. In particular, an instance of this object may represent a count of transmission errors on a particular interface that are not otherwise counted.

Basic definition: If a transmission error occurs, but is not a late collision, excessive collision, or carrier sense error, it is counted as an error here. NIC vendors may identify these kinds of errors specifically. Check with the device's manufacturer to determine their interpretation of InternalMacTransmitErrors.

What you should do to fix this problem:

Cause 1: A faulty network transmitter can cause InternalMACTransmitErrors. Check the device to insure that it is functioning correctly.

Cause 2: Check with the device's manufacturer to determine what their interpretation is of InternalMACTransmitErrors.

Late Collisions

Rare event

Official definition: The number of times that a collision is detected on a particular interface later than 512 bit-times (64 bytes) into the transmission of a packet. Five hundred and twelve bit-times corresponds to 51.2 microseconds on a 10-megabit per second system. A (late) collision included in a count represented by an instance of this object is also considered as a (generic) collision for purposes of other collision-related statistics.

Basic definition: Collisions should be detected within the first 64 bytes of a transmission. If an interface transmits a frame and detects a collision before sending out the first 64 bytes, it declares it to be a "normal collision" and increments Single Collision Frames (or Multiple Collision Frames if more collisions follow). If an interface transmits a frame and detects a collision after sending out the first 64 bytes, it declares it to be a Late Collision. If a machine detects a Late Collision, it will treat the collision like any other collision (send a jam signal, and wait a random amount of time before attempting to retransmit). The other sending machine may or may NOT have detected the collision because it was so late in the transmission. The other sending machine may detect the collision AFTER it is done sending its frame, and will believe that its frame was sent out successfully.

What you should do to fix this problem:

Cause 1: A duplex mismatch can cause Late Collisions. Check to make sure that the duplex settings on both interfaces are set to use the same duplex.

Cause 2: A faulty NIC card on the segment can cause Late Collisions.

Cause 3: Late Collisions can be caused by a network that is physically too long. A network is physically too long if the end-to-end signal propagation time is greater than the time it takes to transmit a legal sized frame (about 57.6 microseconds). Check to make sure you do not have more than five hubs connected end-to-end on a segment, counting transceivers and media-converters as a two-port hub. Also check individual NIC cards for transmission problems.

Cause 4: If you have a switch on the network that is configured for "low-latency" forwarding (anything except "store and forward"), it may be causing the Late Collisions. Low latency forwarding ends up having the switch act like a very slow hub. It reduces traffic like a switch, but does not insure that frames reach the destination successfully. The frame "worms" its way through multiple switches, slowing down at each switch. If there is a collision on the end segment, the frame gets dropped by the switch, and the transmitting workstation does not detect that the frame was dropped. To fix this, do not use "low-latency" forwarding features on switches that are hooked up to other switches with "low-latency" forwarding features. Configure the switches to use "store and forward" forwarding methodology.

MAC Receive Errors

Rare event

Official definition: A count of frames for which transmission on a particular interface fails due to an internal MAC sub layer transmit error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of the dot3StatsLateCollisions object, the dot3StatsExcessiveCollisions object, or the dot3StatsCarrierSenseErrors object. The precise meaning of the count represented by an instance of this object is implementation-specific. In particular, an instance of this object may represent a count of transmission errors on a particular interface that are not otherwise counted.

Basic definition: This is the number of frames that could not be transmitted due to an unknown problem. This unknown problem is not related to collisions or carrier sense errors. The device manufacturer's documentation may provide additional information on locating the source of these errors.

What you should do to fix this problem:

Cause 1: There are various sources of this type of error. The interface does not possess enough information as to the exact cause of this error. Contact the device manufacturer to determine how they define the MacReceiveError and how to fix this problem.

Multiple Collision Frames

Rare event

Official definition: A count of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the ifOutUcastPkts or ifOutNUcastPkts object and is not counted by the corresponding instance of the dot3StatsSingleCollisionFrames object.

Basic definition: If a network interface attempts to transmit a frame, and detects a collision, it will attempt to re-transmit the frame after the collision. If the retransmission also causes a collision, then Multiple Collision Frames is incremented.

What you should do to fix this problem:

Cause 1: A faulty NIC or transceiver can cause Multiple Collision Frames. Check the network cards and transceivers on the segment for failures.

Cause 2: An extremely overloaded network can cause Multiple Collision Frames (average utilization should be less than 40%).

Cause 3: If you are using 10Base-2, and have poor termination, or poor grounding, Multiple Collision Frames can be generated.

Cause 4: If you have a bad hardware configuration (like creating an Ethernet ring), Multiple Collision Frames can be generated.

Single Collision Frames

Common event

Official definition: A count of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the ifOutUcastPkts or ifOutNUcastPkts object and is not counted by the corresponding instance of the dot3StatsMultipleCollisionFrames object.

Basic definition: If a network interface attempts to transmit a frame, and detects a collision, it will attempt to re-transmit the frame after the collision. If the retransmission was successful, then the event is logged as a single collision frame.

What you should do to fix this problem:

Cause 1: Single Collision Frames can be caused by multiple machines wanting to transmit at the same time. This is a normal occurrence on Ethernet.

Cause 2: If Single Collision Frames increases dramatically, this could indicate that the segment is becoming overloaded (too many machines on the segment or too many heavy talkers on the segment). As the segment continues to become overloaded, Single Collision Frame count may decrease, as Multiple Collision Frames increases. Converting the segment to a switched environment may solve this problem. Another possible solution is to reduce the number of machines on this segment, or install a bridge to segregate the segment into two halves.

Cause 3: Single Collision Frames can be caused by poor wiring or induced noise. Use a cable tester to insure that the physical cable is good.

Cause 4: Single Collision Frames can be caused by a bad network interface card, or failing transceiver. Check to make sure the network cards and transceivers on the segment are functioning correctly.

SQE Test Errors

Rare event

Official definition: A count of times that the SQE TEST ERROR message is generated by the PLS sub layer for a particular interface. The SQE TEST ERROR message is defined in section 7.2.2.2.4 of ANSI/IEEE 802.3-1985 and its generation is described in section 7.2.4.6 of the same document.

Basic definition: SQE stands for "Signal Quality Error", and may also be referred to as the Ethernet "heartbeat". With early Ethernet cards that required transceivers, the transceiver would send a "Signal Quality Error" back to the Ethernet card after each frame was transmitted to insure that the collision detection circuitry was working. With modern network cards, this SQE test can cause network cards to believe that an actual collision occurred, and a collision is sent out on the network when a SQE test is detected. This can seriously degrade network performance, as each frame successfully transmitted on the network is followed by a collision caused by the SQE test.

What you should do to fix this problem:

Cause 1: SQE Test Errors can be caused by a transceiver that have the "SQE test" dip switch turned on (it should be turned off). Check the switch settings on all transceivers on the segment.

Cause 2: SQE Test errors can be caused by broken transceivers. Check for failed transceivers on the segment.

Symbol Errors

Rare event

Official definition: For an interface operating at 100 Mb/s, the number of times there was an invalid data symbol when a valid carrier was present. For an interface operating in half-duplex mode at 1000 Mb/s, the number of times the receiving media is non-idle (a carrier event) for a period of time equal to or greater than slotTime, and during which there was at least one occurrence of an event that causes the PHY to indicate 'Data reception error' or 'carrier extend error' on the GMII. For an interface operating in full-duplex mode at 1000 Mb/s, the number of times the receiving media is non-idle (a carrier event) for a period of time equal to or greater than minFrameSize, and during which there was at least one occurrence of an event that causes the PHY to indicate 'Data reception error' on the GMII. For an interface operating at 10 Gb/s, the number of times the receiving media is non-idle (a carrier event) for a period of time equal to or greater than minFrameSize, and during which there was at least one occurrence of an event that causes the PHY to indicate 'Receive Error' on the XGMII. The count represented by an instance of this object is incremented at most once per carrier event, even if multiple symbol errors occur during the carrier event. This count does not increment if a collision is present. This counter does not increment when the interface is operating at 10 Mb/s. For interfaces operating at 10 Gb/s, this counter can roll over in less than 5 minutes if it is incrementing at its maximum rate. Since that amount of time could be less than a management station's poll cycle time, in order to avoid a loss of information, a management station is advised to poll the dot3HCStatsSymbolErrors object for 10 Gb/s or faster interfaces. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of ifCounterDiscontinuityTime.

Basic definition: 100mbps Ethernet and faster interfaces use symbols to represent bits. These symbols include error correction to permit single bit errors to be recognized and repaired on the fly. When a symbol error is detected and corrected, it increments this error, indicating that a physical layer problem exists. Cabling and connectors should be checked/cleaned to make sure standards are adhered to.

What you should do to fix this problem:

Cause 1: This is typically caused by a cabling issue. Re-seat physical cabling, and clean cable ends with compressed air.

Cause 2: Faulty network adapters might have problems relating to its physical connection. Swap connectors and see if the problem goes away.

Appendix B: Saving PoE Usage to a Database

The system tracks current PoE status via the web reports. Historical power usage can be tracked over time with a few modifications.

- 1) Run RegEdit
- 2) Navigate to HKEY_LOCAL_MACHINE/Software/NetLatency/SwitchMonitor
- 3) Create a new DWORD key "PollSQLitePoEFlag" and set it to 1

Note: The PathSolutions service does not need to be restarted to have this entry take effect.

The system will now create a file in the Data directory called PoEConsumption.dat. This data file is a SQLite database that will track the consumption of all PSUs on all monitored switches.

The table structure is as follows:

Field	Type	Description
PollID	Integer (PK)	Primary key
Node	Text	Server unique identifier
PollNumber	Integer	Unique poll number for each poll performed
PollTime	Text	Time of poll
Agent	Text	IP address of switch
Device	Text	Hostname of switch
PSU	Integer	Power Supply Unit number reporting
Status	Integer	Status (1=On, 2=Off, 3=Faulty)
Rating	Integer	Total watts permitted for the PSU
Consumption	Integer	Current powers draw in watts

The index PollIndex can be used to speed up queries on large databases. It is indexed on PollID, PollTime, and Agent.

The database can be queried using the command-line sqlite3.exe program located in the Data directory:

```
sqlite3 -csv -header PoEConsumption.dat "select * from PoEPoll;"
```

This information can be sent to a file with the command-line redirect for further processing:

```
sqlite3 -csv -header PoEConsumption.dat "select * from PoEPoll;"
>PoEStats.csv
```

Appendix C: SMTP Email Forwarding

Most companies use SMTP gateways to allow email from the Internet to reach internal users.

This gateway is typically set up to receive emails that are destined for mailboxes on the company's system.

If you configure the PathSolutions TotalView to use your company's SMTP mail gateway, the gateway should accept SMTP messages destined for internal users, but should not accept SMTP messages destined for outside addresses.

For example:

If you configured TotalView to use "mail.company.com " as the SMTP mail gateway, and set the "Globally send to" field to `jdoo@company.com`, the mail gateway would accept emails sent to this address because it exists on the same domain. If the "Globally send to" field was set to `jdoo@outside.com`, then the gateway would refuse this request because most mail systems do not allow relaying of messages from one to another.

This is done by mail administrators to prevent abuse by spammers. Email spammers will search the Internet for anonymous SMTP mail forwarders that they can use to send their emails out.

This allows them to send untraceable emails.

To allow the PathSolutions TotalView to send emails to different domains, there are a number of solutions:

- Ask your ISP if they have an SMTP relay server that can be used by your machines. They may have a server set up that will relay only your messages. In this case, you would configure TotalView to use their SMTP relay server.
- Ask your email administrator to configure the SMTP gateway to allow relaying from the server that TotalView is installed on.

Create a mail alias on your email system (for example: `jdoo@company.com`) that forwards to an outside address (`jdoo@outside.com`).

A free SMTP mail relay agent (SMTP forwarder) is included with many Windows server's IIS implementation.

Appendix D: Changing Interface Names and Speed

Many device manufacturers do not allow interface names to be changed to a descriptive name to help document the network. In this case, PathSolutions' TotalView can be configured to ignore the interface description in the device and use information from a Config file.

Use a text editor such as Notepad to open the IntDescription.cfg file in the directory where the PathSolutions TotalView is installed.

You should see a document with a description of how to enter the switch interfaces and descriptions.

The file is composed of a number of columns or fields; each separated by one or more <TAB> characters.

Note: The fields in the configuration file need to be separated by at least one <TAB> character, not spaces.

Here is an example of a configuration file:

```
;This line is commented out
;
;IPAddress           Interface      Speed           Description
;-----
192.168.1.10         1                /              Internet connection
calvin.company.com  156              1544000        FE0/6
192.168.2.2         3                /              Connection to New York
```

Semicolons can be used anywhere in the file to indicate that the rest of the line is a comment.

IP Addresses

The IP address of the switch must be entered to identify the device. If the Config file has a DNS name, then that identical name should be used here to identify the same device.

Interface

The interface number (as listed in the web reports) should be entered here. If you are unsure of the exact number to use, reference your device manufacturer's documentation to map the SNMP interface numbers to the physical addresses on the device. Then use your network documentation to determine what device is physically connected to the interface on the device.

Speed

If you desire to override the reported interface speed, you can enter the speed in bits per second here. For example: You may want to change the reported interface speed of a router interface connected to the Internet from 100 Mbps to the actual capacity of the link it is connected to (1.544 Mbps for a T1 connection). This will help to determine when the link utilization is exceeded. If you do not want to override this information, enter a slash "/" to skip this field.

Description

Enter the description here. The description field should not contain a semicolon character.

Note: The service must be stopped and re-started after this file is modified in order to have the descriptions take effect.

Appendix E: Configuring Multiple Locations

If you have multiple PathSolutions TotalView implementations, TotalView can be configured to make it easy to navigate between the sites.

Each web page will display tabs across the top of the web page indicating the site that you are viewing:



To configure multiple sites, use a text editor like Notepad to open the MultiSite.cfg file in the directory where you installed the program:

```
C:\Program Files (x86)\PathSolutions\TotalView\MultiSite.cfg
```

You should see a document with a description of how to enter the site names and URLs.

The file is composed of a number of columns or fields; each separated by one or more <TAB> characters.

Note: The fields in the configuration file need to be separated by at least one <TAB> character, not spaces.

Here is an example of a configuration file:

```
;Example for the San Francisco server:
;
;Current  Site Name      URL
;-----  -
YES      San Francisco  http://sfserver.company.com:8084
NO       New York      http://nyserver.company.com:8084
NO       Chicago      http://chicago.company.com:8084

;Example for the New York server:
;
;Current  Site Name      URL
;-----  -
NO       San Francisco  http://sfserver.company.com:8084
YES      New York      http://nyserver.company.com:8084
NO       Chicago      http://chicago.company.com:8084
```

Semicolons can be used anywhere in the file to indicate that the rest of the line is a comment.

Current

This field identifies which site should be highlighted. Only one site should be highlighted per Config file. The Config file on the New York server should have "Yes" for the New York entry.

Site Name

This is the name that is displayed in the tab.

URL

Enter the server's full URL and port here. This will allow linking from the other PathSolutions TotalView servers.

Note: The service must be stopped and re-started after this file is modified in order to have the links work.

The order of the listed sites should be similar for each deployed site so the tabs will display correctly for each site.

Appendix F: Entering Custom OIDs to be Monitored

The PathSolutions TotalView can monitor custom OIDs such as CPU utilization, memory usage, and temperature if the device provides this information via SNMP.

The configuration file `OIDEntry.cfg` is used to configure custom OID monitoring. This file is found in the directory where the program was installed.

```
C:\Program Files (x86)\PathSolutions\TotalView\OIDEntry.cfg
```

Edit this file with a text editor like Notepad.

You will need to enter the following information to be able to set up monitoring of a custom OID:

- IP address of the device ("10.0.1.16")
- Interface to be associated with or "/" if you want to associate it with the device instead of an interface ("23")
- Unique filename for storing the data collected for this OID ("FRAMERELAY")
- Description of this graph ("Frame Relay FECN & BECN")
- Y Axis description ("Packets")
- OID #1 Description ("FECN")
- OID #1 ("GAUGE:1.3.6.1.2.1.2.2.1.17.1")
- OID #2 Description ("BECN")
- OID #2 ("GAUGE:1.3.6.1.2.2.1.18.1")

Note: When entering the OID value, put the prefix "GAUGE:", "COUNTER:", or "COUNTER:8" in front of the OID to identify how the OID should be tracked.

Note: After saving this file, you will have to stop and restart the TotalView service for the changes to take effect.

Appendix G: Configuring Additional OUIs for Phones Tab

A number of OUIs (Organizationally Unique Identifiers) for various VoIP equipment manufacturers have already been added to the OUIFilter.cfg file. This file can be edited with a text editor (like Notepad) to add additional OUIs.

```
C:\Program Files (x86)\PathSolutions\TotalView\OUIFilter.cfg
```

An OUI is the first three bytes of an Ethernet MAC address. The first three bytes are called the OUI because they are unique to the equipment manufacturer. Thus, any MAC addresses that share the first three bytes all come from a common manufacturer.

The OUIFilter.cfg file will require you to enter the OUI (each byte separated by a period "."), then a tab, then the name of the manufacturer.

Note: After saving this file, you will have to stop and restart the PathSolutions TotalView service for the changes to take effect.

Appendix H: Changing the WAN Tab

The WAN tab can include any interface desired. This involves changing the WAN.cfg file with a text editor (like Notepad):

```
C:\Program Files (x86)\PathSolutions\TotalView\wan.cfg
```

This file requires entering two fields, each separated by one or more <TAB> characters.

```
;This is a list of WAN interfaces to display on the
;"WAN" tab.
;
;Interface numbers are entered in the following format:
;
;IP Address<TAB>Interface number
;
;For example:
;
;IPAddress          Interface #
;-----
;192.168.12.15      43
;
;Enter your IP addresses and interface numbers below.
;IPAddress          Interface #
;-----
```

After the WAN.cfg file has been modified and saved, stop and restart the PathSolutions TotalView service to have the changes take effect.

Appendix I: Adding a Static Route to the Call Path

If there is an unmanaged device (or set of devices) in the network, a static route can be added that will allow the Call Path mapping to ignore these devices and show a continuous map through the network.

Many times, this may be required if a network provider does not permit SNMP access to their routers.

Adding a static route involves changing the StaticRoute.cfg file with a text editor (like Notepad):

```
C:\Program Files (x86)\PathSolutions\TotalView\StaticRoute.cfg
```

This file requires entering five fields, each separated by one or more <TAB> characters.

```
;Router Address      Router Subnet      Route              Mask              NextHop
;-----
10.0.1.254           255.255.255.0     44.44.44.44       255.255.255.255  38.102.148.163
10.100.36.60         255.255.255.0     10.100.37.1       255.255.255.0   10.100.37.1
10.100.37.1          255.255.255.0     10.100.36.1       255.255.255.0   10.100.36.60
```

The first and second fields reference the router's IP address and subnet that should be used for the static route. This is typically the unmanaged router's IP address where packets are sent.

The third and fourth fields reference the route and subnet mask for that route.

Note: You can enter a default route by using the route of 0.0.0.0 and mask of 0.0.0.0.

Note: Static routes take priority over any actual routes that exist on the network.

The fifth field references where the call path mapping should continue. This is typically the far-end router's LAN IP address.

Once the file is saved, the static route takes effect immediately. No need to stop and restart the service or collect re-collect information from switches & routers. This will help speed up troubleshooting and debugging of static routes in the environment.

Note: More likely, two static routes will need to be created. One static route will need to be created for the outbound traffic and one for the return traffic.

Appendix J: Automatic Update Scheduling

Updating the bridge table, ARP cache, and routing table information can be automated to occur on a regular frequency. The following registry entry can be used to do this:

```
UpdateAutoFrequency=0
```

By default, this entry is 0 (zero). This means that the information is not collected on any schedule.

The variable can be changed to any of the following recommended intervals:

300000 (decimal) = 5 minutes

600000 (decimal) = 10 minutes

1800000 (decimal) = 30 minutes

3600000 (decimal) = 1 hour

86400000 (decimal) = 1 day

Other intervals can be used, as the number is the number of milliseconds to wait between automatic updates.

Note: The service must be stopped and restarted for this variable to take effect.

Appendix K: Changing the Map Fetch Variables to Improve Map Stability

You may be seeing white lines going from white to green to white or red dots going from red to green to red. White lines means we did not get any SNMP response from the device. The red dots mean that we did not get a response from the ping. There may be a problem with packet loss to/from the device or the device may have a small CPU that causes the 2 pings to fail.

We have 5 seconds to respond to the web browser's request for information. If a device is up, we would send a ping and receive a response within 5 seconds so it's easy to show that it's green.

If we send a ping, we have to wait to see if we get a response. If we wait 2 seconds for the response and don't get one, we can send a second ping and then wait 2 seconds to get a response again. If we don't get a response from the second ping, then we should assume it is down.

TotalView's default does 1 ping and then waits 2500ms (2.5 seconds) for a response. If it does not see a response, then it assumes it is down.

TotalView's default now does 2 pings and then waits 1500 (1.5 seconds) for a response. If it does not see a response, then it assumes it is down.

This can be adjusted in the registry with the following variables to help improve the stability of the map:

Example of Variable Entry change in Bold below

Computer > HKEY_LOCAL_MACHINE > SOFTWARE > Wow6432Mode > Netlatency > SwitchMonitor

```
DestWebMapPingRetries = 1  
DestWebMapPingDelay = 2500
```

In this case, you can set the following:

```
DestWebMapPingRetries = 2  
DestWebMapPingDelay = 1500
```

It should improve the reliability/stability of the pings on the network.

For fetching the SNMP information, the following registry variables can be adjusted:

```
DestWebMapSNMPRetries = 1  
DestWebMapSNMPTimeout = 1000
```

In this case, you can set the following:

```
DestWebMapSNMPRetries = 2  
DestWebMapSNMPTimeout = 1000
```

The service should be stopped and restarted for these variables to take effect.

Appendix L: Overriding Displayed Device Icons

The automatically determined device icon may display incorrectly with certain devices. This can be overridden by modifying DeviceType.cfg file:

```
C:\Program Files (x86)\PathSolutions\TotalView\DeviceType.cfg
```

This file requires entering two fields, each separated by one or more <TAB> characters.

```
;This is the device icon configuration override file. It can be used
;to change the displayed icon in front of a device.
;
;IP Address
;Enter the IP address of the device
;
;DeviceType
;Enter the number associated with the device type that should be
;displayed:
;
; 1 = Layer-2 Switch
; 2 = Layer-3 Switch (Multilayer switch)
; 3 = Router
; 4 = WiFi AP
; 5 = Server
; 6 = Cloud
; 7 = Firewall
;
;IP Address      DeviceType
;-----
```

Enter the IP address of the device and a <TAB> character and the numeric that refers to the type of device icon to use. After the file has been modified and saved, stop and restart the PathSolutions TotalView service to have the changes take effect.

Appendix M: Using the ACL to Control Web Access

The built-in webserver can be configured to only respond to certain IP addresses. This can be done by modifying the WebACL.cfg file:

```
C:\Program Files (x86)\PathSolutions\TotalView\WebACL.cfg
```

This file requires entering two fields, each separated by one or more <TAB> characters.

```
;This is the webserver Access Control List. It will permit accessing the
webserver from
;only the specified subnets. If the list is blank, any client can access.
;
;IP Address
;Enter the IP address of the device
;
;Subnet
;Enter the subnet related to the device;
;
;IP Address      Subnet
;-----
```

Enter the IP address of the device and a <TAB> character and the subnet mask that represents the network that the webserver should respond to.

Note: If this file is left blank, the webserver will respond to requests from any IP address.

After the file has been modified and saved, stop and restart the PathSolutions TotalView service to have the changes take effect.

Glossary

IETF - This acronym stands for the Internet Engineering Task Force, and is the governing body for all standards that relate to Internet and associated communications technologies. Website: www.ietf.org

MAC – Media Access Control: This is a unique address that is used by Ethernet adapters to transmit and receive frames on the network. They are only used for conveying layer 2 frames between nodes on a LAN.

MIME - Multi-Purpose Internet Mail Extensions: This is an email standard that defines how different content is handled inside email messages. This allows graphics, audio, HTML text, formatted text, and video to be displayed correctly inside email messages. MIME is defined by the IETF's RFC1521 document, and is available on the IETF's website: <http://www.ietf.org/rfc/rfc1521.txt?number=1521>

Network Weather Report - System Monitor can email network reports to you on a daily basis. The network Weather Report helps to keep you informed of the overall health of your network.

OSI - Open Systems Interconnect: This is a standard description or "reference model" for how services are provided on a network.

OUI – Organizationally Unique Identifier: This is the identification of the first three bytes of an Ethernet MAC address. The first three bytes are called the OUI because they are unique to the equipment manufacturer. Thus, any MAC addresses that share the first three bytes all come from a common manufacturer.

SNMP read-only community string - This is an SNMP password with the rights to be able to read statistical information from a device.

SNMP - Simple Network Management Protocol. This protocol allows network management software (like System Monitor) to communicate with network devices to read statistical information.

SMTP email address -- This is a standard Internet email address. For example: jdoe@company.com.

SMTP -- Simple Mail Transport Protocol. This protocol allows email clients and servers to communicate over the Internet.